



For questions regarding warranty please contact our
customer service through the following options:

Email: support@tonordirect.com

Website: www.tonordirect.com

Facebook page: <https://www.facebook.com/us.tonor/>



TONOR

Instruction Manual



Wireless Microphone

Thoroughly read the instruction manual before assembly.
Retain instruction manual for future reference.

ACCESSORIES



01 | Wireless Microphone

OPERATING ENVIRONMENTS & NOTES



When using this device, keep it away from water.



Use the device in ventilated environment, keep it away from fire.



Since it's a wireless device, please keep it away from other interfering sources.



Don't take apart the device.



Please use the standard power supply, high voltage may damage the device.



Please place the used batteries into the recycle bin, don't litter them.

MICROPHONE OPERATION INSTRUCTION



As shown in above pictures:


- ①Display Screen
- ②On/Off Switch
- ③Tail Tube
- ④Hi-Lo Button
- ⑤Battery Compartment



Install 2*AA batteries before using the wireless microphone and installing instruction is as follows:


1. Take down the tail tube of mic;
2. Install the batteries and tighten tail tube of mic.

Note: The positive and negative polarity of battery cannot be reversed.

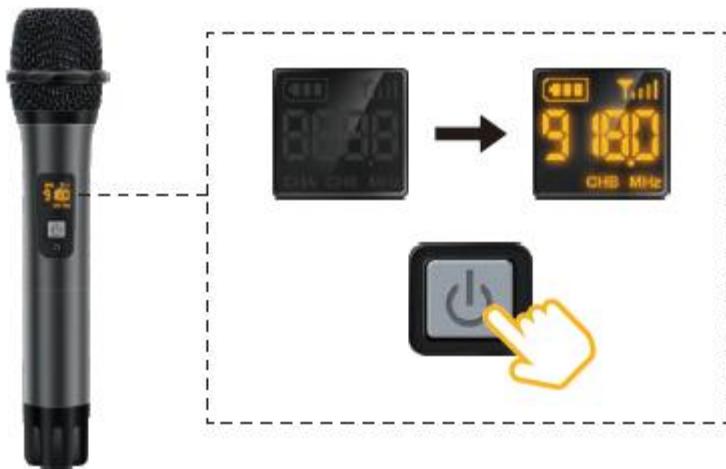

Instruction:

1. Press button ② for 2s to turn it on/off;

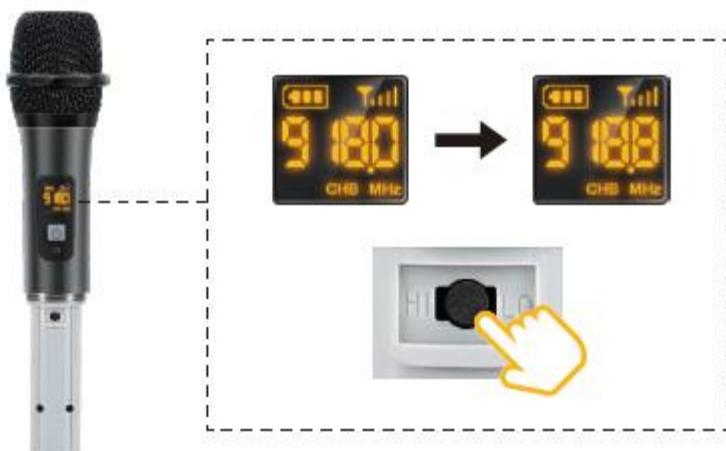

2. Press the HI-LO button ④, then the frequency on the screen will be changed.

TROUBLESHOOTING

Problem	Solution
No sound (RF signal bar is not displayed)	Check if microphone is turned on; Check if receiving antenna is erected correctly; Ensure there are no obstacles between microphone and receiver, and their distance is within the max range.
No sound (RF signal bar is displayed, but AF signal bar is not displayed)	Check if the receiver is set at minimum volume; Check if the receiver and speaker is connected correctly.
Received signal with noise or interference	Change to other channels; Check if receiving distance exceeds the maximum range; Position antenna for the best reception.
Microphone cannot be turned on	Check if batteries are installed reversely; Change to new batteries.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC STATEMENT:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF exposure compliance statement:

This device has been evaluated to meet the general RF exposure requirement