

Tracker Mini


Let's get this thing started!

1.



- EN** Download the Automile app from the App Store or Google Play
- SV** Ladda ner Automile-appen från App Store eller Google Play
- NO** Last ned Automile-appen fra App Store eller Google Play
- DE** Lade Automile Appen runter von App Store oder Google Play
- ES** Descárguese la aplicación para vehículos de la tienda de aplicaciones o de Google Play

2.

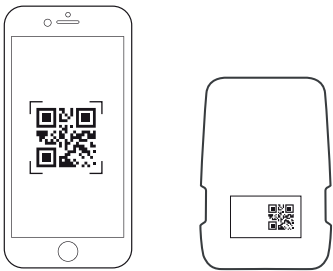


- EN** Follow the instructions in the app and register your Tracker
- SV** Följ instruktionerna i appen och registrera din Tracker
- NO** Følg instruksjonene i appen og registrer din Tracker.
- DE** Folge den Anweisungen des Apps und registriere deinen Tracker
- ES** Siga las instrucciones de la aplicación y registre su rastreador

3.

a)



b)

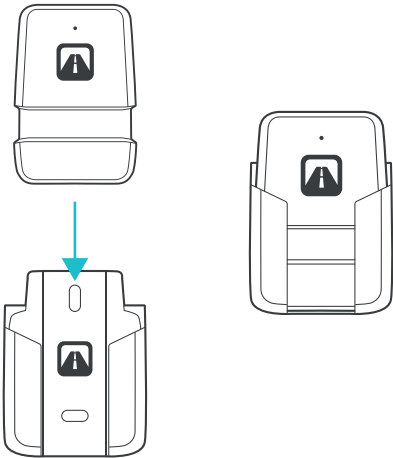


Screws 3,5 x 19,
self tapping screws
16 mm


- EN** For temporary attaching. a) Install your device using holder. Attach holder with screws. b) Attach the device to by sliding it into the holder.
- SV** Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed diam nonummy nibh euismod tincidunt ut laoreet dolore
- NO** Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed diam nonummy nibh euismod tincidunt ut laoreet
- DE** Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed diam nonummy nibh euismod tincidunt ut laoreet dolore
- ES** Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed diam nonummy nibh euismod tincidunt ut laoreet dolore magna aliquam erat volutpat. Ut wisi

4.

a)

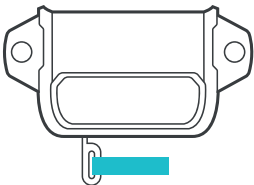


b)

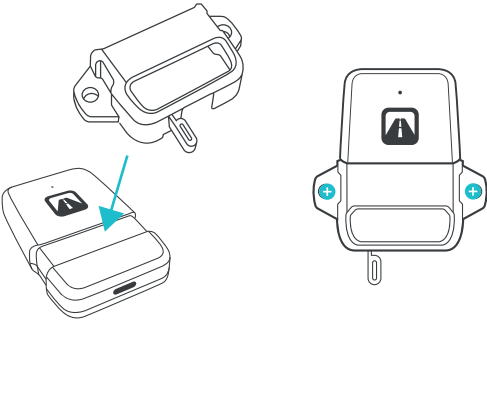

Screws 3,5 x 19,
self tapping screws
21 mm


- EN** For permanent attaching. a)
- SV** Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed diam nonummy nibh euismod tincidunt ut laoreet dolore magna aliquam erat volutpat. Ut wisi enim ad
- NO** Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed diam nonummy nibh euismod tincidunt ut laoreet dolore magna aliquam erat volutpat. Ut wisi enim
- DE** Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed diam nonummy nibh euismod tincidunt ut laoreet dolore magna aliquam erat volutpat. Ut wisi enim ad minim
- ES** Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed diam nonummy nibh euismod tincidunt ut laoreet dolore magna aliquam erat volutpat. Ut wisi enim ad minim veniam, quis nostrud exerci

5.

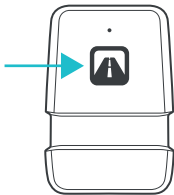


- EN** Turn device on by pressin button. There is a red constant light when the device searches for the network. The light turns off when the connection is on.
- SV** Lysdioden lyser med ett fast rött sken när enheten söker nätverk. När dioden slocknar är enheten ansluten.
- NO** Rødt konstant lys når enheten søker nettverk. Lyset slås av når den har etablert forbindelse.
- DE** Rotes Dauerlicht bei der Gerätesuche im Netzwerk. Das Licht erlischt, wenn die Verbindung eingeschaltet ist.
- ES** Luz roja constante cuando el dispositivo busca en la red. La luz se apaga cuando la conexión está activada.

6.

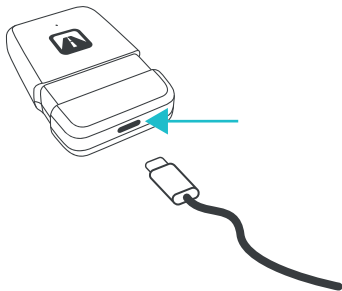


- EN** Use USB-C charger for charging and powering device.
- SV** Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed diam
- NO** Lorem ipsum dolor sit amet, consectetur adipiscing
- DE** Lorem ipsum dolor sit amet, consectetur adipiscing elit,
- ES** Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed diam nonummy

7.

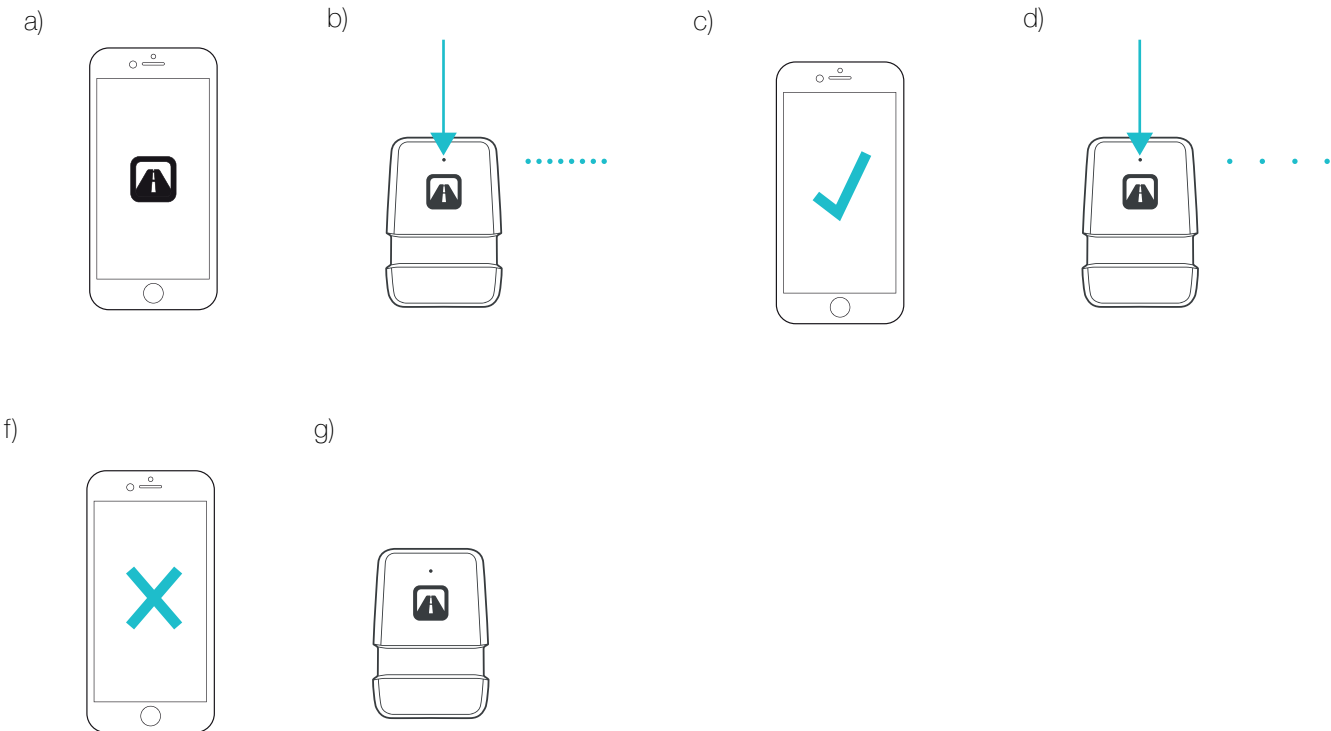

- EN** Usage. a) Select device from application. b) Blinking LED shows selected device. c) Define device for use. d) LED blinks every now and then to show device is in use. e) Stop tracking from the application. f) Device returns to advertisement mode.
- SV** Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed diam nonummy nibh
- NO** Lorem ipsum dolor sit amet, consectetur adipiscing
- DE** Lorem ipsum dolor sit amet, consectetur adipiscing elit, sed
- ES** Lorem ipsum dolor sit amet, consectetur adipiscing

8.

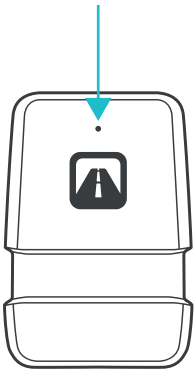

- EN** Pressing the power key while the device is on sends the location to the cloud and the LED blinks red.
- SV** Om du trycker på strömknappen medan enheten är påslagen, skickas dess position till molnet medan lysdioden blinkar rött.
- NO** Hvis du trykker ned På-knappen mens enheten er på, sendes posisjonen til skyen og lysdioden blinker rødt.
- DE** Das Drücken der Einschalttaste bei eingeschaltetem Gerät sendet den Standort in die Cloud und die LED blinkt rot.
- ES** Al presionar la tecla de encendido mientras el dispositivo está encendido, se envía la ubicación a la nube y el LED parpadea en rojo.

Manufacturer name and address:
US model: Automile Inc., 2100 West S Pleasant Grove Blvd Suite 300, Pleasant Grove, UT 84062.
EU model: Automile AB, Sergels Torg 12, Floor 7, 11157 Stockholm, Sweden

FCC Compliance:
Automile Tracker Mini (containing FCC ID: XPY1DIQN3NN) have been tested and found to comply with part 15 of the FCC Rules. For more detailed information go to: www.automile.com/assets
Automile Tracker Mini (containing FCC ID: XPY1DIQN3NN) have been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

EU Compliance:
Hereby, Automile AB declares that Tracker Mini complies with Directive 2014/30/EU. The full text of the EU declaration of conformity is available at the following internet address: www.automile.com/assets

EU-direktiv:
Härmed tillkännager Automile AB att Tracker Mini uppfyller direktiv 2014/30/EU. Fullständig information om överensstämmelsedeklarationen finns på följande internetadress: www.automile.com/assets

EU Compliance:
Herved erklærer Automile AB at Tracker Mini er i samsvar med Directive 2014/30/EU. Den fulle teksten til EU-samsvarserklæringen er tilgjengelig på følgende internetadresse: www.automile.com/assets

EU-Konformität:
Hiermit erklärt Automile AB, dass der Tracker Mini mit der Richtlinie 2014/30/EU übereinstimmt. Der vollständige Text der EU-Konformitätserklärung ist unter folgender Internetadresse verfügbar: www.automile.com/assets

Cumplimiento de la UE:
Por la presente, Automile AB declara que Tracker Mini cumplen con la Directiva 2014/30/EU. El texto completo de la declaración de conformidad de la UE está disponible en la siguiente dirección de Internet: www.automile.com/assets

Radio information:
GSM radio operates at frequencies of 900Mhz with a maximum transmitted radio-frequency power of 33dBm and 1800MHz with a maximum power of 30dBm. LTE radio operates at bands 3 (1800MHz), 7 (2600MHz), and 20 (800MHz) with a maximum radio-frequency power of 23dBm.

RF exposure information:
Automile Tracker Mini have been tested and meet applicable limits for radio frequency (RF) exposure. For more information go to: www.automile.com/assets

Warranty & Liability:
Trademarks and trade names are those of their respective owners. Please read the Tracker warranty terms, liability, and limitations at www.automile.com/assets

Warnings:
The operating-temperature range of the device is -30°C to +80°C (-22°F to 176°F).

Support:
www.automile.com/assets

