

正面

### Charging

plug any of the USB port before charging.  
 -Use a certified USB-C charging cable and charger to prevent any damage.  
 -Do not power your headphone while charging.

User's Guide

■ Flashing red once every 60 seconds: Low battery  
■ Steady red: Being charged  
■ Light off: Fully charged

### Powering On/Off

Press and hold the power button for 3 seconds to power on/off.

### Bluetooth pairing

1. When powered off, press and hold the power button for 5 seconds until the LED flashes blue to enter the Bluetooth pairing mode.  
 2. Select "Soundcore S30" on your device's Bluetooth list to connect.

■ Flashing blue: Bluetooth pairing  
■ Steady blue: Bluetooth connected

### Pairing with another device

When successfully connected with the first device, press twice the power button to pair up with another device.

① **Phone 1**

② **Phone 2**

\*Your Soundcore headphones can only play music on one mobile device at a time. To stop from another connected device, please the device that currently plays music. If you press on your Soundcore headphones, it will automatically connect to your first Soundcore connected device if available within the Bluetooth range.

### AUX Mode

To use stereo of your surroundings by allowing ambient sounds is touch the right earcup for 1 second to activate the transparency mode.

To stay aware of your surroundings by allowing ambient sounds is touch the right earcup for 1 second to activate the transparency mode.

### Transparency Mode

To stay aware of your surroundings by allowing ambient sounds is touch the right earcup for 1 second to activate the transparency mode.

### Buttons Controls

Play/Pause	Press
Next track	+ Press and hold for 1 second
Previous track	- Press and hold for 1 second
Volume up/down	+/- Press

### Answer/End call

Put the current call on hold or answer a new incoming call	Press
Repeat a call	+ Press and hold for 1 second
Switch between hold call and active call	+ Press and hold for 1 second

### Active/Off or other voice assistant

Press and hold for 1 second	Press and hold for 1 second
+ Press and hold for 1 second	+ Press and hold for 1 second

### Noise Cancellation Mode

To reduce ambient noise turn on the active noise cancellation mode by pressing the NC button. Press the NC button again to turn off.

### AUX Mode

Play audio on an external device by plugging in a 3.5mm AUX cable. The headphones will not of battery you can still listen to music but ANC mode is unavailable.

### Product parameters

Specifications are subject to change without notice.

Input	5V=5A
Charging time	1.5H
Play time with ANC mode turn on	12H
Play time with ANC mode turn off	12H
Driver size	40 mm x 20 mm
Impedance	32 Ohm ±20 MΩ (Bluetooth) (100Ω ±20MΩ(AUX))
Bluetooth version	15.0
Bluetooth Range	15.0m
Frequency Range	15.0m

### Warnings

**CAUTION:** Risk of explosion if the battery is replaced an incorrect direction of battery use or if the user or manufacturer incorrectly inserts or cuts off a battery. Risk can result in an explosion. Inserting a battery in the wrong way may cause an explosion. Do not use the headphones if you suspect an explosion or the leakage of flammable liquid or gas. Do not use the headphones if you suspect that they may result in an explosion or the leakage of flammable liquid or gas.

Model: S3002L  
 Rating: 5V=5A  
 Made in China

CE, RoHS, Recycle, and other certification logos.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.