# **50mm** 200mm

# THECOOPIDÉA


**USER MANUAL** 

TRUE WIRELESS EARBUDS



CP-TW03

## **Product overview**

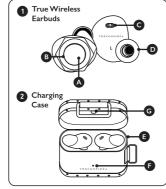

- A Multi-function button + LED light
- **B** Microphone
- Charging Interface
- Ear Cap Micro USB input
- LED Light **G** Magnetic Closure

# Specification

Frequency Response : 20 - 20KHz : 5.0 Bluetooth Version :10m Bluetooth Range Recharge Earbuds : 6 Times Battery :800mAh Input :5V/IA (Micro) Case Dimensions : 72x35x45mm(LxWxH)

Case Net Weight : 154g Earbuds Dimensions

: 25x24x20mm(each)(LxWxH) :5g (each)

Earbuds Net Weight Waterproof Rating : IPX4 Stand by Time : [00hrs Playtime : Up to 5hrs

(Up to 35hrs On-The-Go) Charging Time(Earbuds) : Ihr

(Charging case) : 2hrs(Micro)

# **Package Contents**

- Ix CARGO True Wireless Earbuds (Pair)
- Ix Ear tips S, M, L (Pairs) Ix CARGO Charging Case
- Ix Micro USB Cable Ix Decorative Sticker

 


 
**CHARGE AND ACTIVATE** 

Charge your CARGO before first time use.

### First time use


Before using CARGO, charge it for at least I hour.





STEP @ Put Earbuds into the charging case

# Way of charging

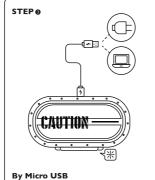


I. Connect charging case to your computer or a power supply via micro USB cable.

2. Plug in micro USB port and charge the case.

# **Perfect Fit**




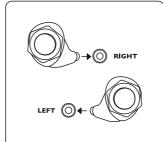

**Best for music** 

Put on normal ear tips

## **Insert Earbuds**

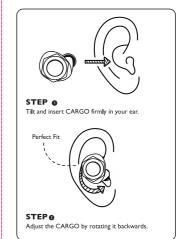

接線

.....

切線




Black & white

# 200mm
 
# 5mm

# **Turning Earbuds On**



Pick up the earphones from charge case or Manual Connect : Hold MFB both buttons for 2secs ¶€ "Power On"

## Bluetooth pairing



**Pairing Mode** 

Auto Connect : Pick up the earphones from charge case or Manual Connect :

Hold MFB both buttons for 4secs (When Earbuds are turned off outside charging case)

 
♥] = "Pairing"



Earbuds Pairing

Left Earphone: Blue LED flash 3 times then Blue & White LED flash alternatively

Right Earphone: Blue LED flash 5 times then White light flash once every 8 seconds



Success

Earbuds Pairing Left Earphone: Blue LED flash once every 6 seconds Right Earphone: White LED flash once every 6 seconds

¶∃ "Connected"

€ "Left Channel" on Left "Right Channel" on Right

# **Turning Earbuds Off**



Put earphones back into case or Hold either button for 4secs

Auto power off |de the earphones for |0mins €"Power Off"

Forget Pairing

Manual Pairing / 1. Turn off the earphones



2. Hold the MFB of both earphones for 10-15secs until 2 indication sound be heard



3. Turn off the earphones and turn on the earphones again



4. L and R earphones are paired and enter pairing mode with mobile

# **Charging Earbuds**



Earphone charging White light on

Earphone fully charged White light off



Charging case charging White light flash

Charging case fullycharged White light on



Earphone charging in charging case Charging case Blue light on

Earphone fully charged in charging case Charging case blue light off

Call / music Control





		MFB(Left)		MFB(Right)
Pick up call	B	•	or	•
Hang up	8	•	or	•
Reject call	B	••		
Switch between phone/headset (during call)	0000 0000	••		
Play/Pause	M	•	or	•
Next track	M			<b>-</b> 0
Previous track	M	<b>-</b> 0		
Volume up	000			••
Volume down	000	••		
Siri/Google assistant		•••	or	•••

● TAP ■ HOLD ③ 2SCE

# Warning

- Always store the earbuds in the charging case and safely protected.
- <sup>82</sup> Avoid storing the earbuds in hot or cold environments to prevent depletion of the battery capacity
- 3 Avoid storing the earbuds for extended periods of time without recharging them.
- of the earbuds or the charging case become dirty, it is recommended to clean them with a soft cloth that has been dampened with clean water.
- <sup>85</sup> The OS version of mobile devices may affect performance of CARGO, it is recommended to update the OS of your mobile device to the latest version before use.
- \* It is strongly recommended to clean and dry CARGO properly when it has been exposed to water and sweat.
- " Don't put the CARGO into Charging case while there is moist. Doing so can cause severe damage to the electronics or housing of CARGO. CARGO Charging case is not
- Remove from power source once the product is fully charged. Extended periods of over-charging will decrease

- " Store the product in a dry area. Keep away from fire, heat, moist and erosive materials.
- 10 Do not use rough chemical such as soap or cleanser to scrub the product.
- " Do not dissemble, damage, or expose the product to water or fire. Warranty will be voided by any misuse of the product.
- 12 If the battery is expanded or emits smell, stop using the product immediately.

# **QUESTIONS**

Find the answer at www.thecoopidea.com

> **d** thecoopidea **f** Lovethecoopidea











Inspirations from New Zealand. Designed in Hong Kong. Produced in China. Copyright 2018 The Coop Idea Ltd.

接線

切線



# **FCC Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the
- -- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement. in portable exposure condition without restriction.