 


Digital Piano

 
USER MANUAL

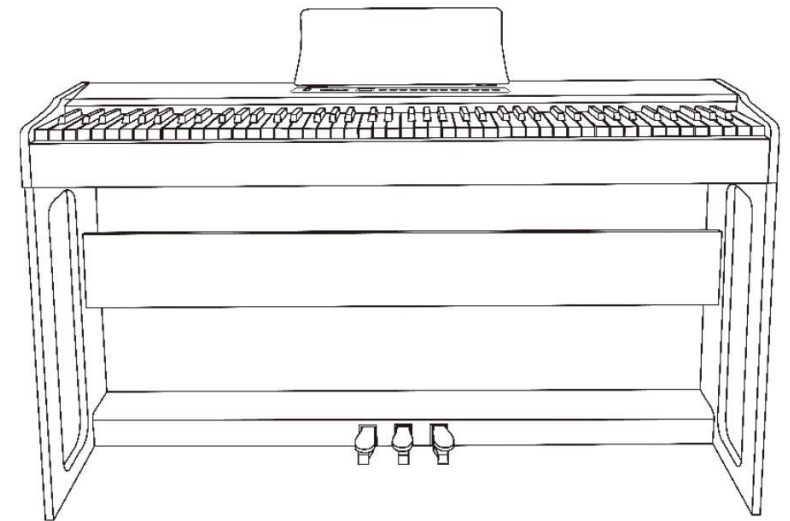



Digital Piano User Manual

Thank you for buying our digital piano

Wonderful performance for customers to enjoy, GM Timbre, digital circuit and other functions. In order to make full use of various functions, please read and keep this manual carefully.

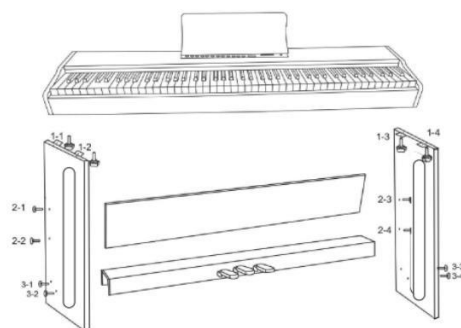

  1-1 to 1-4 Round head knob screws M6X20
(4) 2-1 to 2-4 screws M6X15 (4)
3-1 to 3-4 screws M6X60(4) pointed screws

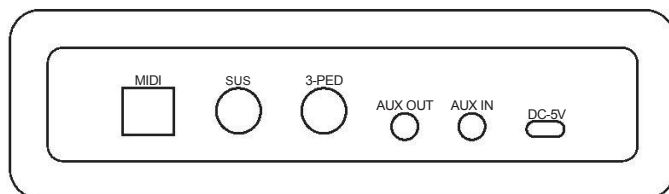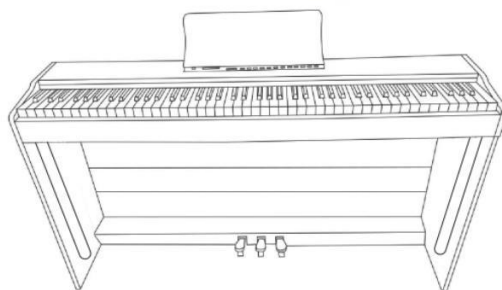

Digital Piano User Manual

Fault	Possible causes and Countermeasures
When the organ power is turned on or off, there is a murmur	This is a normal phenomenon, indicating that the current enters the time.
When using a mobile phone, there is noise.	The use of mobile phones near produces will produce the machine at this radiation. To avoid this, turn off the mobile phone or use it away from the organ.
There is no sound when playing the keyboard or playing music.	Verify that there are other devices connected to the PHONES/OUTPUT Jack. If headphones are plugged into the Jack at this time, no sound will be made.
The selected timbre is not pronounced properly, or the volume is too low.	Verify that the following settings are appropriate: main volume, double tone balance.
Abnormal sound of timbre or rhythm.	The AC voltage is on the low side.
Some timbre is distorted.	The volume knob is too large and should be open at a position less than 3/4.
The accompaniment is not pronounced properly.	Make sure the accompaniment volume is set to the appropriate level.
It seems that all timbre is pronounced, or the pronunciation seems to be cut off.	The maximum simultaneous pronunciation of this organ is 64 notes. If the dual tone mode is in use and the accompaniment or music is being played again, some notes/sounds in the accompaniment or music will be default.
Under the same tone color, the quality of notes is different from that of notes.	This is a normal phenomenon. The wooden machine adopts AVM sound source mode, which is segmented sampling and recording in the whole key field, so the sound quality of the two notes is slightly different.

Digital Piano User Manual

Smoke, odour, overheat

When the instrument smokes, stinks or overheats, there is a risk of fire and electric shock when the instrument continues to be used. In the event of the above, the following actions should be performed immediately.

1. switch it off.
2. Please unplug the alternating current transformer from the power outlet
3. Contact your dealer

Alternating current transformer

Improper use of alternating current transformers may cause fire and electric shock. The following considerations must be observed.

The special AC transformer specified for this product must be used.

An AC power supply with an output voltage within the rated voltage range marked on the AC transformer must be used.

Power sockets and power extension lines should not be overloaded.

The power cord of AC transformer is improperly dealt with, resulting in damage or fracture, resulting in fire and electric shock risk. The following considerations must be observed.

- Do not place or heat heavy objects on the power cord.
- Do not try to modify or bend the power cord too much
- Do not twist or pull the power cord.

If the power cord or plug is damaged, replace the same type of power cord and plug.

Do not touch alternating current transformer with wet hand, otherwise there is a risk of electric shock.

Please use alternating current transformer where water will not be splashed. Water is in danger of causing fire and electric shock.

Do not place vases or any other containers containing water on AC transformers. Water is in danger of causing fire and electric shock

Alternating current transformer

Improper use of alternating current transformers may cause fire and electric shock. The following considerations must be observed.

Do not place the power cord next to the furnace or near other heat sources.

Do not pull the power cord when unplugged from the power outlet. The plug body of AC transformer must be grasped.

The AC transformer must be plugged into the power outlet to the end.

In the event of thunderstorms or before traveling or leaving for a long time, the AC transformer should be unplugged from the power outlet on the wall.

The AC transformer should be removed from the wall at least once a year. Unplug the power outlet and clean the dust accumulated around the plug.

Don't burn this product

Do not put this product in the fire. Otherwise, it will cause it to explode, and there is a risk of fire and injury.

Water and foreign bodies

The entry of water, other liquids and (sheet metal, etc.) into this product is dangerous to cause fire and electric shock. In the event of the above, the following actions should be performed immediately.

1. switch it off.
2. If you are using an alternating current transformer to power it, unplug it from the power outlet on the wall.
3. Contact your dealer

Disassembly and transformation

Do not disassemble or modify this product in any way. Otherwise, there is a risk of electric shock, scald or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your distributor.

Digital Piano User Manual

Function description:

Keyboard: 88 standard keys(including black key) . Range: A1 ~ C9.

Timbre: 128

RHYTHM: 128

DEMO: 20

Recording and playback function, transpose function, accompaniment volume adjustment function, double keyboard/double tone function, chord/dynamics function.

Hardware: 64 Chord, with 2-way 16-bit DAC output, built-in power amplifier circuit.

Audio input, headset output, three-digit LED display

Single Pedal (delay) , triple pedal (delay, mute, delay) Optional

Bluetooth Features: Audio Bluetooth and Midi Bluetooth

Operations

Play (Timbre) mode:

automatically enters play (Timbre) mode when the computer is switched on.

Press [+] , [-] can choose up and down to play Timbre.

Press and hold [+] , [-] key more than 1 second, you can choose up and down Timbre 0-127 continuously.

Rhythm Mode:

Press the "start/stop" button/"Rhythm" button, the system enters rhythm mode and plays one of "rhythms" .

Press [+] , [-] can choose the "rhythm" from 0-127.

Press the "+/-" button more than 1 second, you can quickly select the rhythm and let go to play the corresponding rhythm.

In this mode, press the tone button, then press the +/- key to change the tone. To change the rhythm, need to press the rhythm key.

Demo Mode:

Press [Demo] key, system will play all demos, press [start/stop] key to stop demo to play

Press [+] , [-] key to select demo, track from 0-19

Hold [+] , [-] key more than 1 second, you can quickly select the Demo, release your hand and start playing the corresponding demo.

In this mode, press the Tone key, and then press the +/- key to change the tone color. To change the Demo, need to press the Demo key

Digital Piano User Manual

Recording related functions:

Press the [recording] key, you can enter recording mode, digital LED display [REC] .

Recording function is to take multi-channel real-time recording mode to record the notes

After entering the recording mode, the user can play the keys at will, the system will automatically record the key notes played by the user, when the recording block of the system is full, the digital tube will display the [FUL] prompt the record full

Press the playback key to realize the recording playback function. However, this playback function is considered effective only when a note is recorded, at the end of playback, the original state will be automatically returned to the original state.

During playback process, you can choose to play back the tone color

After re-recording and system reset, the recording note will be refreshed automatically

Chord/Dynamics mode system

During the playing rhythm, Short Press [chord/dynamics] key and release to enter Chord mode Chord Function: A 1 ~ F # 4 interval to play the keys, will play with the rhythm of the Chord, and the pitch of the Chord changes with the pitch of the key

In chord mode, short press [chord/dynamics] key and release will close the chord

The long press on the [chord/dynamics] key and doesn't release to open or close the dynamics at any time, digital Tube display [DYN] or [OFF] , boot the default is open

Double keyboard/double voice mode

Short press [double keyboard/double voice] key and loose to open or close the double keyboard mode, digital LED display [SPL] or [OFF]

The range of keys in dual keyboard mode will be divided into two ranges: A2-B5 and C4-C8.

Long Press [dual keyboard/dual tone] key and does not loose to open or close the dual voice mode, digital LED display [DUA] or [OFF]

In Dual Voice mode will play the current tone (foreground) + piano tone (background) combination.

In the Dual voice mode, press the Tone key, and then press the + /- key to switch the foreground

Bluetooth Feature:

Bluetooth Search on Mobile Phone;Bluetooth Name: GZUT-MUSIC connection can play Mobile Phone Audio

When playing Bluetooth audio, press "start/stop" key to pause the song, and press again will keep playing the song

Press "+" or "-" to choose the previous song or next song

USB/MIDI function:

Connect the computer or tablet via USB cable for multimedia interaction

Or download the bubble piano APP without plugging in the data cable. And choose Bluetooth connection to practice with the piano.

Digital Piano User Manual

Fall or impact

After falling or being damaged by a strong impact, this product will continue to be used in danger of causing fire and electric shock. In the event of the above, the following actions should be performed immediately.

1.switch it off.

2.If you are using an alternating current transformer to power it, unplug it from the power outlet on the wall.

3. Contact your dealer.

Plastic bag

Do not allow anyone to wrap plastic bags for the packaging of this product on their heads or put them in the mouth, otherwise there is a risk of asphyxiation, and families with young children should pay special attention to them.

Volume Don't play music at loud volume for a long time.

Pay special attention to using headphones Too much volume will damage your hearing.

Matters needing attention in health

Although it is extremely rare, some people suddenly encounter strong light or flash, can develop a temporary muscle disease, loss of consciousness or other physical disorders.

If you suspect that you may encounter the above or similar situation, be sure to consult your doctor before using this product.

Please use this product in a well-lit environment.

If you feel similar symptoms when using this product, you should immediately stop using this product and go to the hospital for examination.

Correct assembly of bracket

Incorrect assembly of the bracket will make it overturn, resulting in the drop of this product, there is a risk of injury.

Therefore, the assembly must be carried out in accordance with the instructions in its accompanying instructions to ensure that the product is correctly installed on its bracket.Keep distance from this product and bracket

Climbing on the piano body or its bracket is at risk of overturning or damage, and families with young children should pay special attention to it.

Place

Avoid placing this product on an uneven surface or in any other unstable place. Otherwise, this product will fall, there is a risk of injury.

Movement of products

Before moving this product, you must unplug the AC transformer from the power outlet on the wall and unplug all other cables and connectors. Otherwise, there is a risk of damage to the line and fire and electric shock.

Cleaning

Before cleaning this product, the AC transformer must be removed from the power outlet on the wall, otherwise there is a risk of damage to the AC transformer and fire and electric shock.

Interface

In this product interface. Only the specified devices and devices can be connected to theConnecting unspecified equipment or devices is at risk of causing fire and electric shock.

Position selection

Avoid placing this product in the following places. Otherwise, there is a risk of fire and electric shock.

A place where the temperature is high or dusty.

Kitchen or other place with fumes.

A place that is exposed to direct sunlight, or any other place that will cause a high temperature in this product.

Heavy object

Do not place heavy objects on this product. Otherwise, the top of the product will be overweight, causing the product to overturn or cause the object on it to fall, there is a risk of injury to the person

Digital Piano User Manual

111、	11synthethix
112、	12feel
113、	13Accelerate
114、	14Beachnight
115、	15Irish
116、	16Tarentella
117、	17bigband
118、	18dandut
119、	19fusion
120、	20horse2
121、	21keron
122、	22latin
123、	23mambo
124、	24newage
125、	25slowre1
126、	26soul
127、	27twist
DEMO:	
0、	Little Star
1、	Humorous Music
2、	Mail coach
3、	Childhood Memories
4、	Childhood
5、	Prayers of a young girl
6、	Toccata
7、	MINUET
8、	To Elise
9、	Ode to Joy
10、	Greensleeves
11、	Turkish March
12、	Vanessa's smile
13、	Adriana by the water
14、	Autumn Whisper
15、	Grand Waltz
16、	Sorrow or joy
17、	Firefly Dance
18、	Snow Dream
19、	Ave Maria Bach

Digital Piano User Manual

Other functions:

Press [accompaniment volume] to display the current accompaniment volume, then press [+] , [-] key to change the current accompaniment volume

In play mode, press [transpose] key, then press [+] , [-] key to change the vocal range of the current key

Digital Piano User Manual

■ TONE	
PIANO	
0、	Piano 1
1、	Piano 2
2、	Piano 3
3、	Honky-Tonk Piano
4、	Rhodes Piano
5、	Chorused Piano
6、	Harpsichord
7、	Clavinet
percussion instrument	
8、	Celesta
9、	Glockenspiel
10、	Music Box
11、	Vibraphone
12、	Marimba
13、	Xylophone
14、	Tubular Bells
15、	Santur
Organ	
16、	Hammond Organ
17、	Percussive Organ
18、	Rock Organ
19、	Church Organ
20、	Reed Organ
21、	Accordion
22、	Harmonica
23、	Bandoneon
Guitar	
24、	Acoustic Guitar (nylon)
25、	Acoustic Guitar (steel)
26、	Electric Guitar (jazz)
27、	Electric Guitar (clean)
28、	Electric Guitar (muted)
29、	Overdriven Guitar
30、	Distortion Guitar
31、	Guitar Harmonics

Digital Piano User Manual

67、	4countryshuffle
68、	5Quickshuffle
69、	6Reggaeshuffle
70、	1R&B
71、	1Reggae
72、	2Reggae
73、	3reggae
74、	1Salsa
75、	2salsa
76、	3salsa
77、	1tecno
78、	2tecno
79、	1funky
80、	2funky
81、	1dixie
82、	2dixie
83、	1foxtrot
84、	2foxtrot
85、	1R.roll
86、	2R.roll
87、	1fastbeat
88、	2Quickbeat
89、	3smoothbeat
90、	4Squarebeat
91、	5eurobeat
92、	1Alphadance
93、	2Betadance
94、	3dreamdance
95、	4dance1
96、	5dance2
97、	6dance3
98、	rap
99、	1thevillage
100、	2countryshuffle
101、	1electrickeys
102、	2darkkeys
103、	3Easywalk
104、	4Destiny
105、	5Comedy
106、	6drive
107、	7Liquidnova
108、	8KIndustrialfolk
109、	9slowpure
110、	10simpleJam

Digital Piano User Manual

23、	2slow
24、	1discocha
25、	2guaracha
26、	3charl
27、	1samba
28、	2samba
29、	1ubminimal
30、	18bit
31、	28bit
32、	116bit1
33、	216bit2
34、	3Ballad16T
35、	4country16T
36、	1Tango
37、	2tango
38、	1Polka
39、	2polka
40、	1popswing
41、	2Easyswing
42、	3softswing
43、	1rock
44、	2rock
45、	3rock
46、	4Airyrock
47、	5heartrock
48、	6rock&roll
49、	7urban
50、	1ballad
51、	2jazzballad
52、	3C.ballad
53、	4J.ballad
54、	560Slowballad
55、	6pianoBallad
56、	750sballad
57、	Snackbase
58、	1Happyblues
59、	2Oldblues
60、	3bluegras
61、	1boodie
62、	2boodie
63、	3boodie
64、	1shuffle
65、	2shuffle
66、	3Dreamshuffle

Digital Piano User Manual

Bass	
32、	Acoustic Bass
33、	Electric Bass(finger)
34、	Electric Bass(pick)?
35、	Fretless Bass
36、	Slap Bass 1
37、	Slap Bass 2
38、	Synth Bass 1
39、	Synth Bass 2
String Solo	
40、	Violin
41、	Viola
42、	Cello
43、	Contrabass
44、	Tremolo Strings
45、	Pizzicato Strings
46、	Orchestral Harp
47、	Timpani
Choral Ensemble	
48、	String Ensemble 1
49、	String Ensemble 2
50、	SynthStrings 1
51、	SynthStrings 2
52、	Choir Aahs
53、	Voice Oohs
54、	Synth Voice
55、	Orchestra Hit
brass instrument	
56、	Trumpet
57、	Trombone
58、	Tuba
59、	Muted Trumpet
60、	French Horn
61、	Brass Section
62、	Synth Brass 1
63、	Synth Brass 2
Reed Instrument	
64、	Soprano Sax
65、	Alto Sax
66、	Tenor Sax
67、	Baritone Sax
68、	Oboe
69、	English Horn
70、	Basoon

Digital Piano User Manual

71、	Clarinet
wind instrument	
72、	Piccolo
73、	Flute
74、	Recorder
75、	Pan Flute
76、	Bottle Blow
77、	Skakuhachi
78、	Whistle
79、	Ocarina
Composite Tonic	
80、	Lead 1 (square)
81、	Lead 2 (sawtooth)
82、	Lead 3 (calliope lead)
83、	Lead 4 (chiff lead)
84、	Lead 5 (charang)
85、	Lead 6 (voice)
86、	Lead 7 (lilts)
87、	Lead 8 (bass l lead)
Synthetic soft tone	
88、	Pad 1 (new?age)
89、	Pad 2 (warm)
90、	Pad 3 (polysynth)
91、	Pad 4 (choir)
92、	Pad 5 (bowcd)
93、	Pad 6 (metallic)
94、	Pad 7 (halo)
95、	Pad 8 (sweep)
Synthetic special effect	
96、	FX 1 (rain)
97、	FX 2 (soundtrack)
98、	FX 3 (crystal)
99、	FX 4 (atmosphere)
100、	FX 5 (brightness)
101、	FX 6 (goblins)
102、	FX 7 (echoes)
103、	FX 8 (sci-fi)
national instruments	
104、	Sitar
105、	Banjo
106、	Shamisen
107、	Koto
108、	alimba
109、	Bagpipe

Digital Piano User Manual

110、	Fiddle
111、	Shanai
Percussion music	
112、	Tinkle Bell
113、	Agogo
114、	Steel Drums
115、	Woodblock
116、	Taiko Drum
117、	Melodic Tom
118、	Synth Drum
119、	Reverse Cymbal
Sound effects	
120、	Guitar Fret Noise
121、	Breath Noise
122、	Seashore
123、	Bird Tweet
124、	Telephone Ring
125、	Helicopter
126、	Applause
127、	Gun shot
■ Rhythm	
0、	1beguineswing
1、	2beguin
2、	3beguine
3、	1pophit
4、	2pop
5、	3popmalay
6、	bossanova
7、	1disco
8、	2disco
9、	3Bluegrassdisco
10、	1waltz
11、	2waltz
12、	3Trueballadwaltz
13、	4bossawaltz
14、	5Easywaltz
15、	6shufflewaltz
16、	7Reggaewaltz
17、	8Rhumbawaltz
18、	1march
19、	2march
20、	1rhumba
21、	2rhumba
22、	1slow



Sicherheitsvorkehrungen

Entsorgen Sie dieses Produkt nicht

Legen Sie dieses Produkt niemals ins Feuer. Sonst wird es so sein
Verursacht Verbrennungen von Holzprodukten und deren internen elektronischen Bauteilen
Das Produkt kann explodieren und die Gefahr von Bränden und Verletzungen verursachen.

Wasser und Fremdkörper

Wasser, andere Flüssigkeiten und (Metallteile usw.) gelangen hinein
Bei diesem Produkt besteht Brand- und Stromschlaggefahr, aus
Wenn die obige Situation eintritt, sollten die folgenden Vorgänge sofort ausgeführt werden.

1. Schalten Sie den Strom aus.
2. Wenn Sie das Netzkabel zur Stromversorgung verwenden Um es mit Strom zu versorgen, schließen Sie es an die Steckdose an Ziehen Sie den Stecker heraus.
3. Kontaktieren Sie Ihren Händler

Demontage und Neuaufbau

Zerlegen Sie dieses Produkt niemals in irgendeiner Weise seine Transformation. Andernfalls kann es zu Stromschlägen, Verbrennungen oder Ähnlichem kommen
Es besteht die Gefahr von Personenschäden. Alle internen Inspektionen sollten durchgeführt werden
Überlassen Sie Inspektion, Einstellung und Wartung Ihrem Händler.

Fallengelassen oder getroffen werden

Dieses Produkt wurde fallen gelassen oder starken Stößen ausgesetzt. Die weitere Verwendung nach einer Beschädigung kann zu Brand- und Stromschlaggefahr führen. Wenn die obige Situation eintritt, sollten die folgenden Vorgänge sofort ausgeführt werden.

1. Schalten Sie den Strom aus.
2. Wenn Sie das Netzkabel verwenden Strom, schließen Sie die Steck es aus.
3. Kontaktieren Sie Ihren Händler.

Plastiktüte

Erlauben Sie niemandem, die Plastikverpackung zu entfernen, in der dieses Produkt verpackt ist. Legen Sie den Stoffbeutel auf Ihren Kopf oder stecken Sie ihn in den Mund, da es sonst zu Verletzungen kommen kann Erstickungsgefahr: Familien mit kleinen Kindern sollten sich besonders bewusst sein.
Halten Sie Abstand zu diesem Produkt und stehen Sie auf

Das Hochklettern des

Instrumentenkörpers oder seines Ständers kann dazu führen, dass es umkippt oder Familien mit kleinen Kindern sollten besonders auf das Schadsensrisiko achten.

Ort

Stellen Sie dieses Produkt nicht auf unebenen Oberflächen auf Oberfläche oder einem anderen instabilen Ort. Sonst wird es so sein
Beim Herunterfallen des Produkts besteht Verletzungsgefahr.

Produktbewegung

Bevor Sie dieses Produkt bewegen, müssen Sie es zunächst von der Wand entfernen Ziehen Sie das Netzkabel aus der Steckdose und ziehen Sie alle anderen Geräte ab Kabel und Verbindungsdrähte. Andernfalls kann die Leitung beschädigt werden, was zur Folge hat Brand- und Stromschlaggefahr.

Sauber

Bevor Sie dieses Produkt reinigen, müssen Sie es zuerst entfernen Ziehen Sie das Netzkabel aus der Steckdose, da es sonst zu einem Brand kommen kann Es besteht Katastrophen- und Stromschlaggefahr.

Schnittstelle

An die Schnittstelle dieses Produkts können nur bestimmte Geräte angeschlossen werden. Ausrüstung und Geräte. Der Anschluss unbeabsichtigter Geräte oder Geräte kann zu Problemen führen kann zu Bränden und Stromschlägen führen.

Standortauswahl

Stellen Sie dieses Produkt nicht an den folgenden Orten auf.
NEIN Es besteht Brand- und Stromschlaggefahr.
Orte mit hoher Temperatur oder Staub.
Küche oder andere Orte mit Dämpfen.
Orte mit direkter Sonneneinstrahlung oder anderen Orten Wo dieses Produkt hohe Temperaturen erzeugt.

Volumen

Spielen Sie Musik niemals über einen längeren Zeitraum mit hoher Lautstärke ab. verwenden
Seien Sie besonders vorsichtig, wenn Sie Kopfhörer verwenden, da eine zu hohe Lautstärke Ihr Gehör schädigen kann.

Schwere Gegenstände

Stellen Sie niemals schwere Gegenstände auf dieses Produkt. Andernfalls wird das Produkt beschädigt Die Oberseite des Produkts ist zu schwer, sodass das Produkt umkippt oder auf Gegenstände fällt. Beim Herunterfallen des Produkts besteht Verletzungsgefahr.

Fachgerechte Montage des Ständers

Eine unsachgemäße Montage des Ständers kann zum Umkippen des Produkts führen Beim Herunterfallen des Produkts besteht Verletzungsgefahr. Deshalb muss es Um dies zu gewährleisten, muss der Zusammenbau gemäß den Anweisungen im beiliegenden Handbuch erfolgen Es wird garantiert, dass dieses Produkt ordnungsgemäß in seiner Halterung installiert ist.

Sicherungswechsel

Wenn die Sicherung durchbrennt, liegt möglicherweise ein Kurzschluss im Inneren des Produkts vor. Bei Störungen im Stromkreis oder bei Spannungsinstabilität ist es notwendig, einen Fachmann zu konsultieren Identifizieren und ersetzen Sie es, andernfalls besteht Brand- und Stromschlaggefahr.



Précautions de sécurité

Ne jetez pas ce produit

Ne placez jamais ce produit au feu. Sinon ce sera
Provoque la combustion des produits en bois et de leurs composants électroniques internes
Le produit peut exploser, entraînant un risque d'incendie et de blessures.

Eau et corps étrangers

De l'eau, d'autres liquides et (morceaux métalliques, etc.) entrent
Ce produit présente un risque d'incendie et de choc électrique.
dehors Lorsque la situation ci-dessus se produit, les opérations suivantes doivent être effectuées immédiatement.

1. Coupez l'alimentation.
2. Si vous utilisez le cordon d'alimentation pour alimenter l'alimentation, branchez-le à la prise murale Débranchez.
3. Contactez votre revendeur

Démantèlement et reconstruction

Ne démontez jamais ce produit de quelque manière que ce soit ou sa transformation. Sinon, un choc électrique, des brûlures ou autres Cela risque de provoquer des blessures. Toutes les inspections internes doivent être Confiez l'inspection, le réglage et l'entretien à votre revendeur.

Tombé ou frappé

Ce produit est tombé ou a été soumis à un fort impact.
Continuer à l'utiliser après un dommage peut entraîner des risques d'incendie et de choc électrique. Lorsque la situation ci-dessus se produit, les opérations suivantes doivent être effectuées immédiatement.

1. Coupez l'alimentation.
2. Si vous utilisez le cordon d'alimentation pour l'alimentation, connectez le Débranchez-le.
3. Contactez votre revendeur.

Sac plastique

Ne laissez jamais personne retirer l'emballage en plastique utilisé pour emballer ce produit. Mettez le sac de matériel sur votre tête ou mettez-le dans votre bouche, sinon cela pourrait provoquer Risques d'étouffement Les familles avec de jeunes enfants doivent être particulièrement vigilantes
Gardez vos distances avec ce produit et tenez-vous debout

Grimper sur le corps de

l'instrument ou sur son support peut le faire basculer ou Les familles avec de jeunes enfants doivent accorder une attention particulière aux risques de dommages.

Lieu

Évitez de placer ce produit sur des surfaces inégales surface ou tout autre endroit instable. Sinon ce sera
Si le produit tombe, il existe un risque de

Mouvement du produit

Avant de déplacer ce produit, vous devez d'abord le retirer du mur Débranchez le cordon d'alimentation de la prise électrique et débranchez tous les autres Câbles et fils de connexion. Sinon, la ligne pourrait être endommagée, ce qui entraînerait Risque d'incendie et de choc électrique.

Faire le ménage

Avant de nettoyer ce produit, vous devez d'abord retirer le Débranchez le cordon d'alimentation de la prise de courant, sinon cela pourrait provoquer un incendie Risque de catastrophe et de choc électrique.

Interface

Seuls les appareils spécifiés peuvent être connectés à l'interface de ce produit. équipements et appareils. La connexion d'équipements ou de dispositifs involontaires peut provoquer peut provoquer des risques d'incendie et de choc électrique.

Sélection de l'emplacement

Évitez de placer ce produit aux endroits suivants. Non Il existe un risque d'incendie et de choc électrique.
Endroits à haute température ou poussières.
Cuisine ou autres endroits avec des fumées.
Endroits exposés à la lumière directe du soleil ou à tout autre Où ce produit génère des températures élevées.

Volume

Ne jouez jamais de musique à volume élevé pendant de longues périodes. utiliser
Soyez particulièrement prudent lorsque vous utilisez des écouteurs, car un volume excessif peut endommager votre

Objets lourds

Ne placez jamais d'objets lourds sur ce produit. Sinon, le produit Le dessus du produit est trop lourd, ce qui fait basculer le produit ou le laisse tomber sur des objets. Si le produit tombe, il existe un risque de blessure.

Assemblage correct du stand

Un assemblage incorrect du support peut le faire basculer, ce qui entraînerait le produit à Si le produit tombe, il existe un risque de blessure. Il faut donc Il doit être assemblé conformément aux instructions du manuel qui l'accompagne pour garantir que Ce produit est garanti correctement installé dans son support.

Remplacement du fusible

Si le fusible saute, il peut y avoir un court-circuit à l'intérieur du produit. phénomène de circuit, ou instabilité de tension, il est nécessaire de consulter un professionnel Identifiez-le et remplacez-le, sinon il y a un risque d'incendie et de choc électrique.

Safety Precautions

Do not burn down this product

Do not put this product in the fire. Otherwise, it will lead to the burning of wood products and the explosion of internal electronic components, which will cause fire and personnel injury.



Water and foreign bodies

Water, other liquids and (metal sheets, etc.) entering this product are in danger of causing fire and electric shock. In case of the above situation, the following operations should be performed immediately.



1. turn off the power.
2. If you are using a power cord for power supply, unplug it from the wall outlet.
3. Contact your distributor.

Don't dismantle and transform

Do not dismantle or transform this product in any way. Otherwise, there is a risk of electric shock, scald or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your distributor.



Fall or impact

This product is in danger of fire and electric shock after falling or being damaged by strong impact. In case of the above situation the following operations should be performed immediately.



1. turn off the power.
2. If you are using a power cord for power supply, unplug it from the wall outlet.
3. Contact your distributor.

Plastic bag

Do not let anyone put plastic bags for this product on his head or in his mouth. Otherwise, there is a risk of asphyxia. Families with young children should pay special attention to it.



Do not climb piano or bracket

Climbing on the piano body or its support is dangerous of overturning or damage. Families with young children should pay special attention to it.



Placing products

Avoid placing the product on an uneven surface or any other unstable place. Otherwise, it will cause the product to fall down, which will lead to the risk of injury.



Move this product

Before moving this product, you must unplug the power cord plug from the wall outlet and pull out all other cables and connecting wires. Otherwise, it will lead to wire damage, fire and electric shock.



Clean this product

Before cleaning this product, you must unplug the power cord plug from the wall outlet otherwise there is a risk of fire and electric shock.



Socket connection

Only designated devices and devices can be connected to the sockets of this product. Connecting non-designated equipment or devices is dangerous of causing fire and electric shock.



Location selection

Avoid placing this product in the following places. Otherwise there is a danger of fire and electric shock. High temperature or dusty places. Kitchen or other place with lampblack.



Where the product is exposed to direct sunlight or any other place where the product will produce high temperature.

Volume

Don't play music long and loud. Pay special attention when using headphones. Excessive volume can damage your hearing.



Heavy objects

Do not place heavy objects on this product. Otherwise, the top of the product will be overweight causing the product to overturn or drop objects on it, which will lead to the risk of injury.



Heavy objects

The incorrect installation of the bracket will cause the product to fall over, and there is a risk of injury to the personnel. Therefore, it must be assembled in accordance with the instructions attached to the instructions to ensure that the product is properly mounted on its bracket.



Fuse replacement

If the fuse is blown, there is a possibility of short circuit inside the product or voltage instability, need to be professional judgment and replacement, otherwise there is a risk of fire and electric shock.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.