



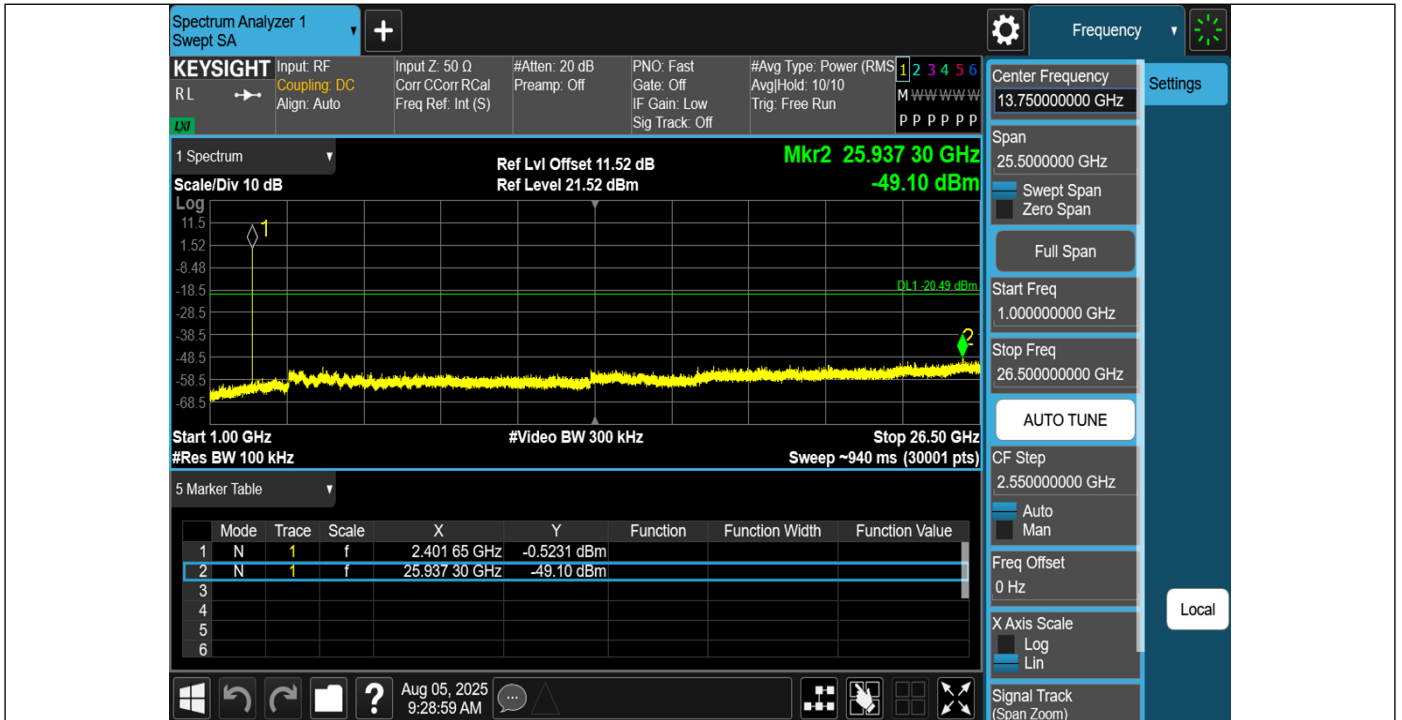

DH5-Ant1-2402-1000~26500-PASS

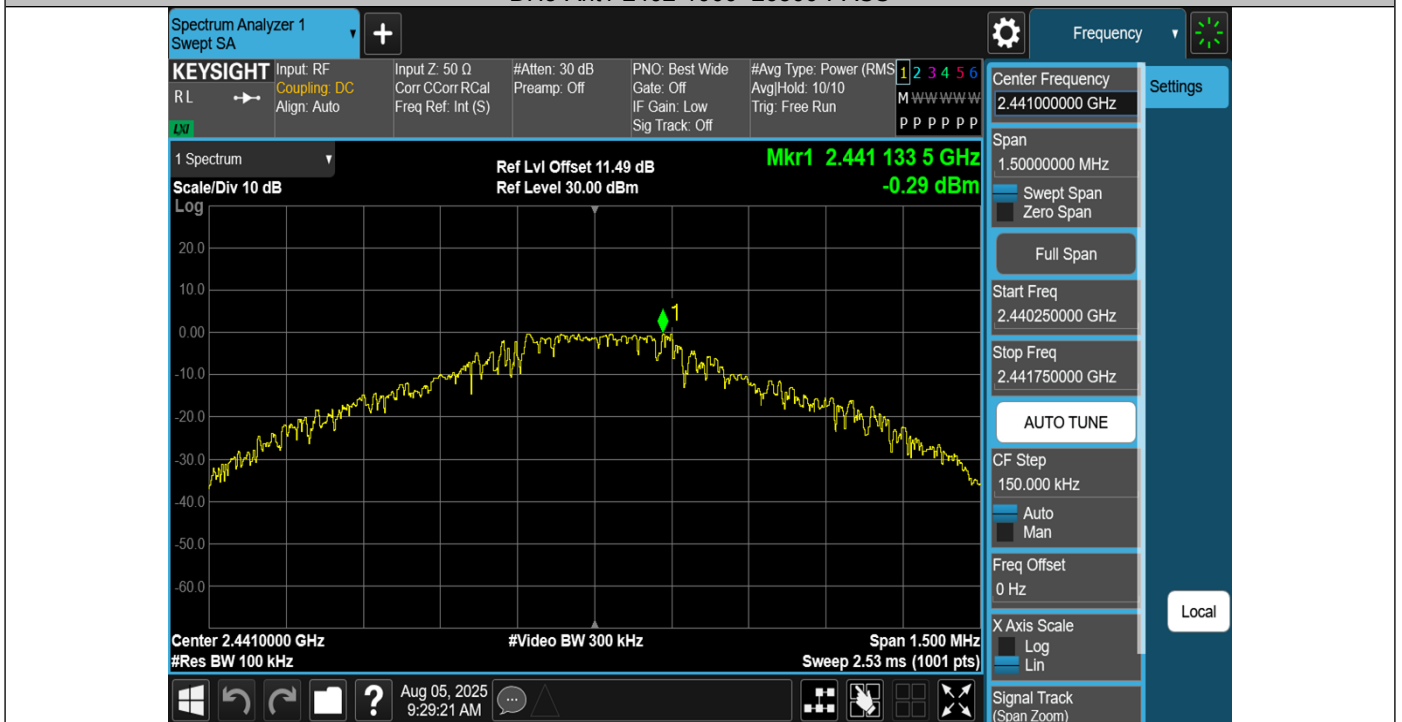


DH5-Ant1-2441-0~Reference-PASS




DH5-Ant1-2441-30~1000-PASS



DH5-Ant1-2441-1000~26500-PASS

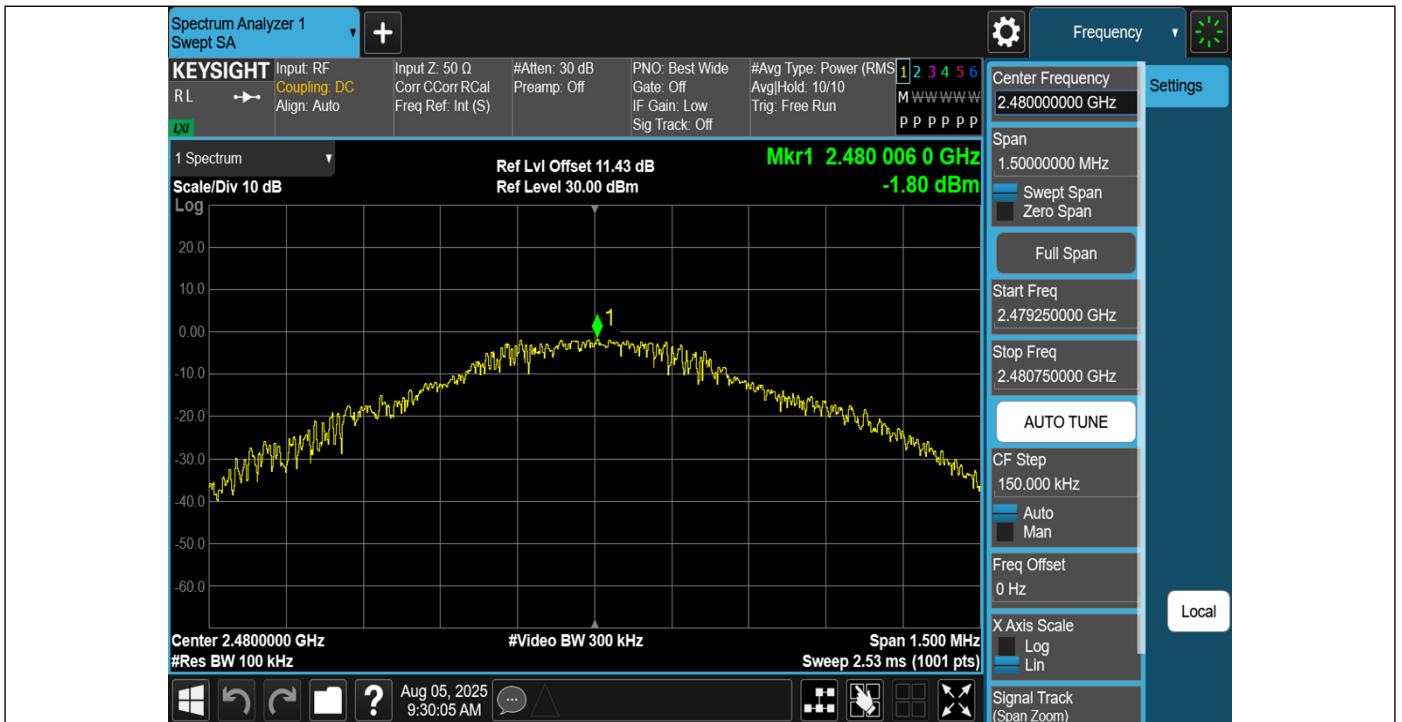


DH5-Ant1-2480-0~Reference-PASS

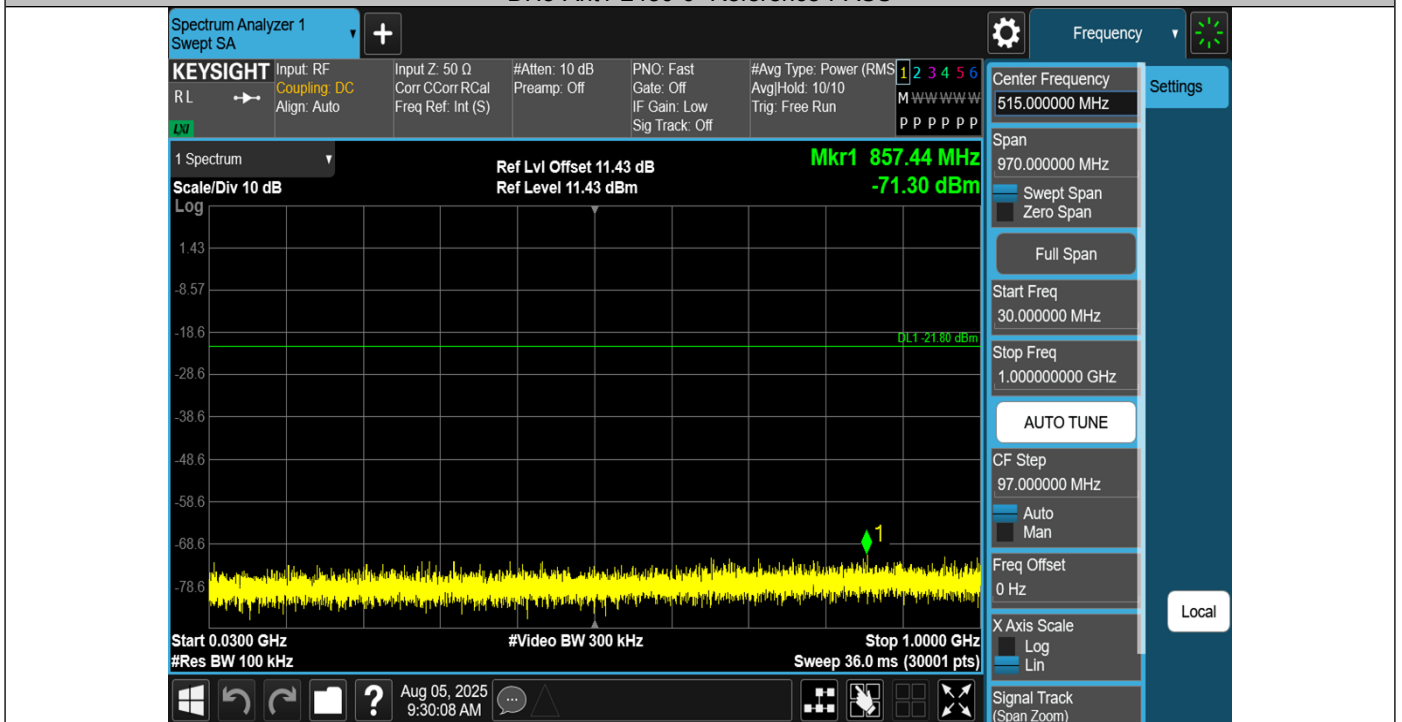

DH5-Ant1-2480-30~1000-PASS




DH5-Ant1-2480-1000~26500-PASS

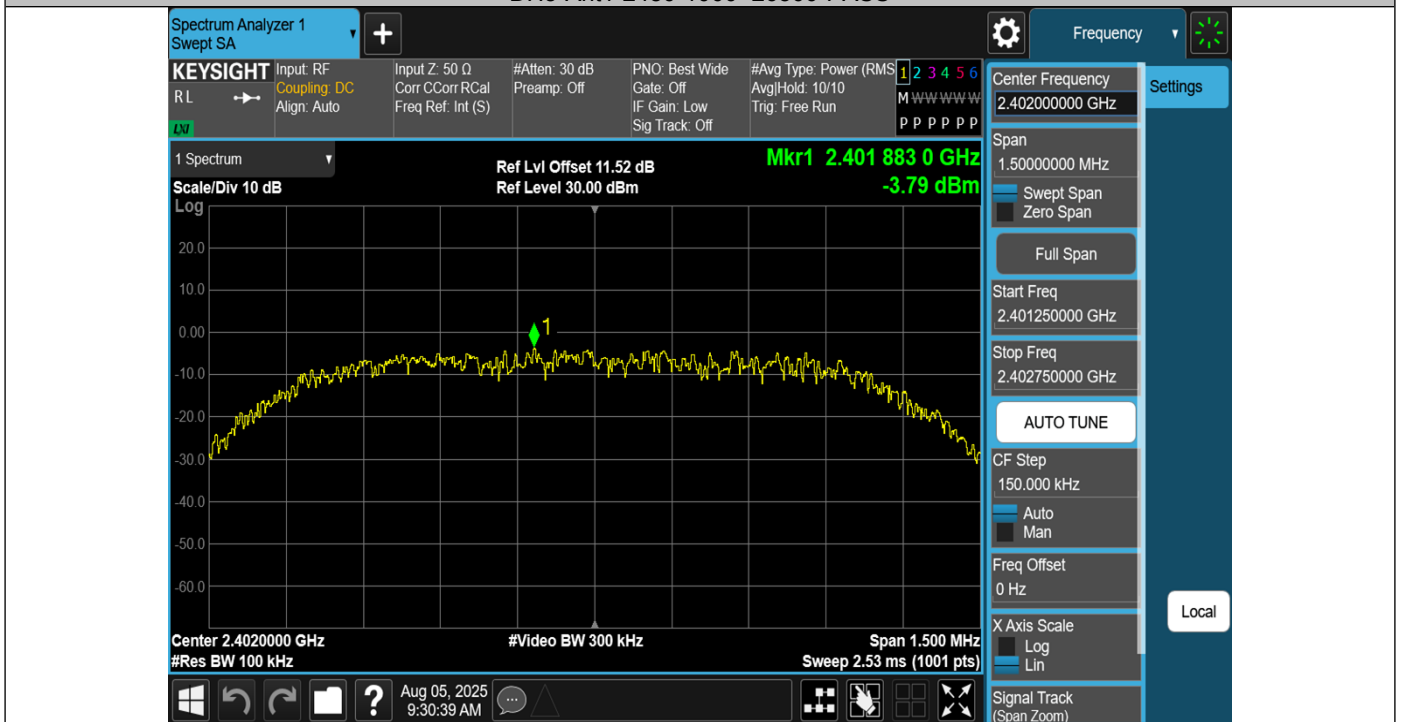


2DH5-Ant1-2402-0~Reference-PASS




2DH5-Ant1-2402-30~1000-PASS

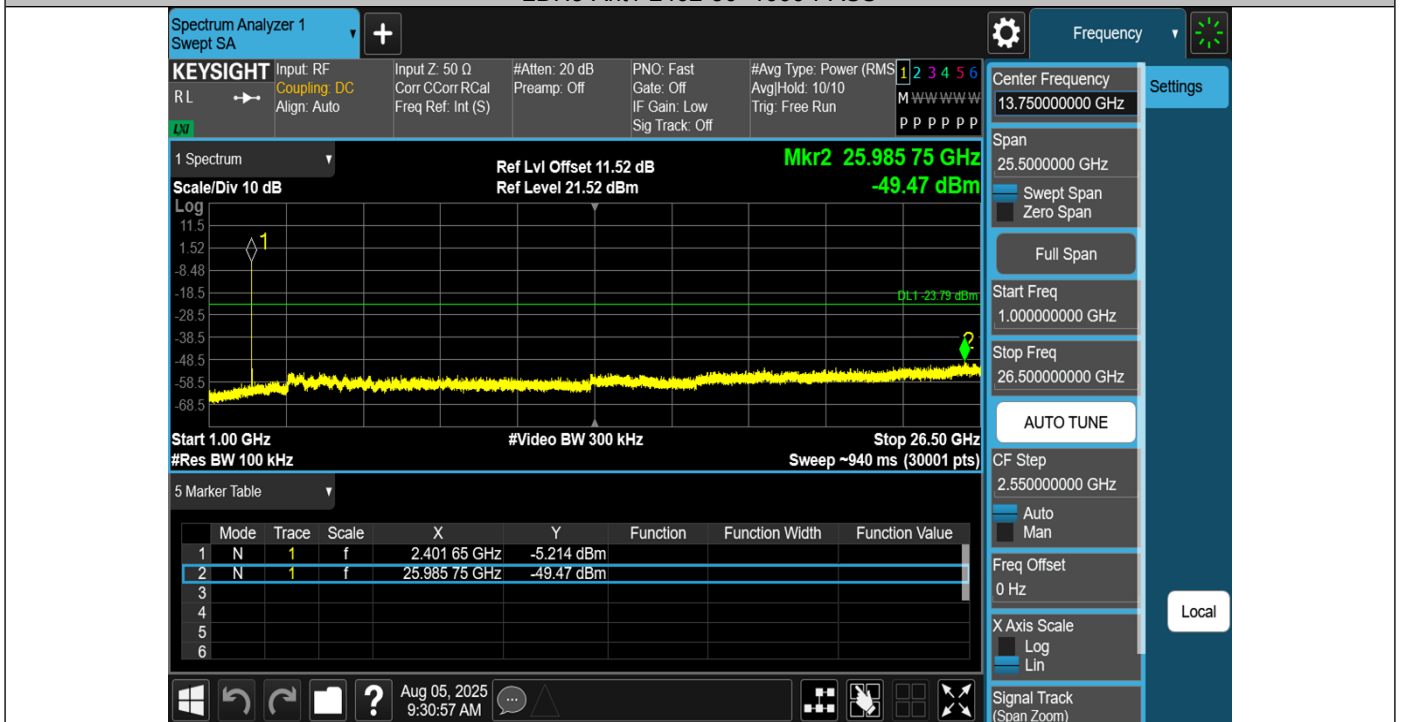


2DH5-Ant1-2402-1000~26500-PASS

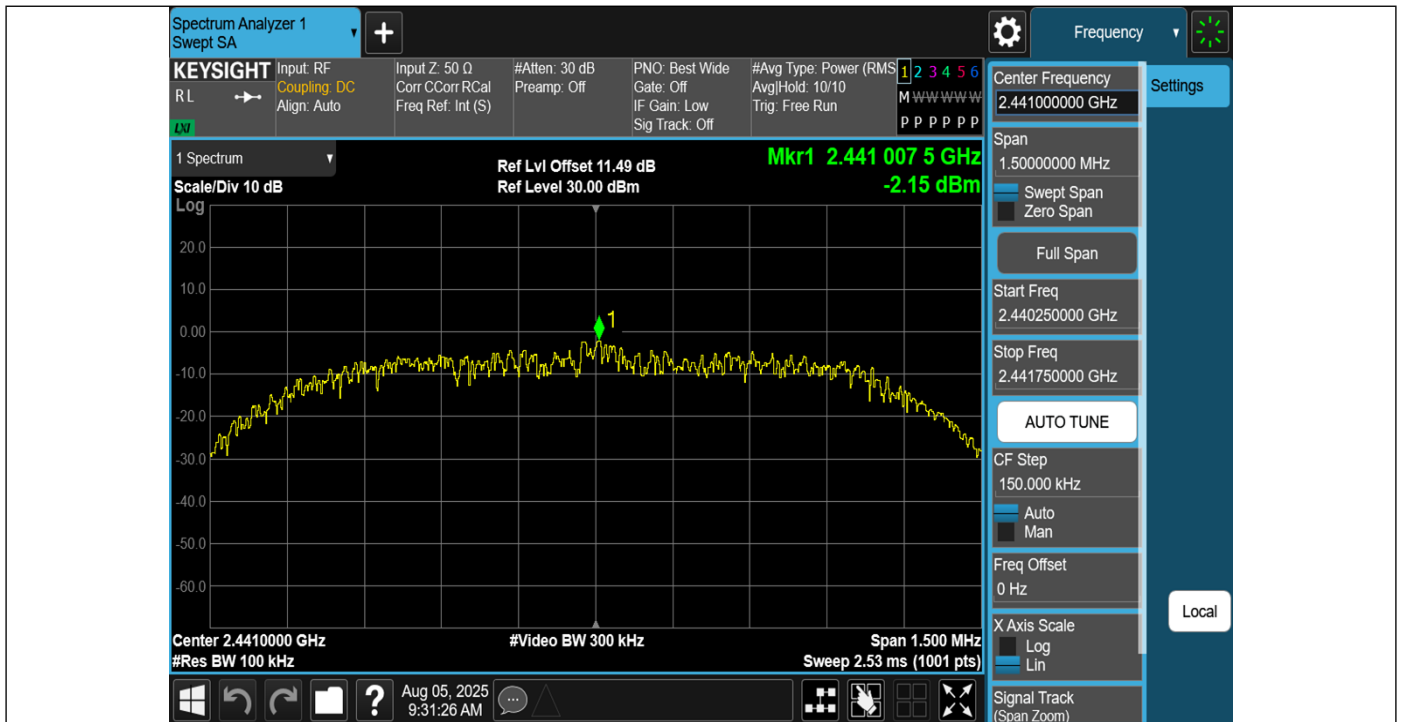


2DH5-Ant1-2441-0~Reference-PASS

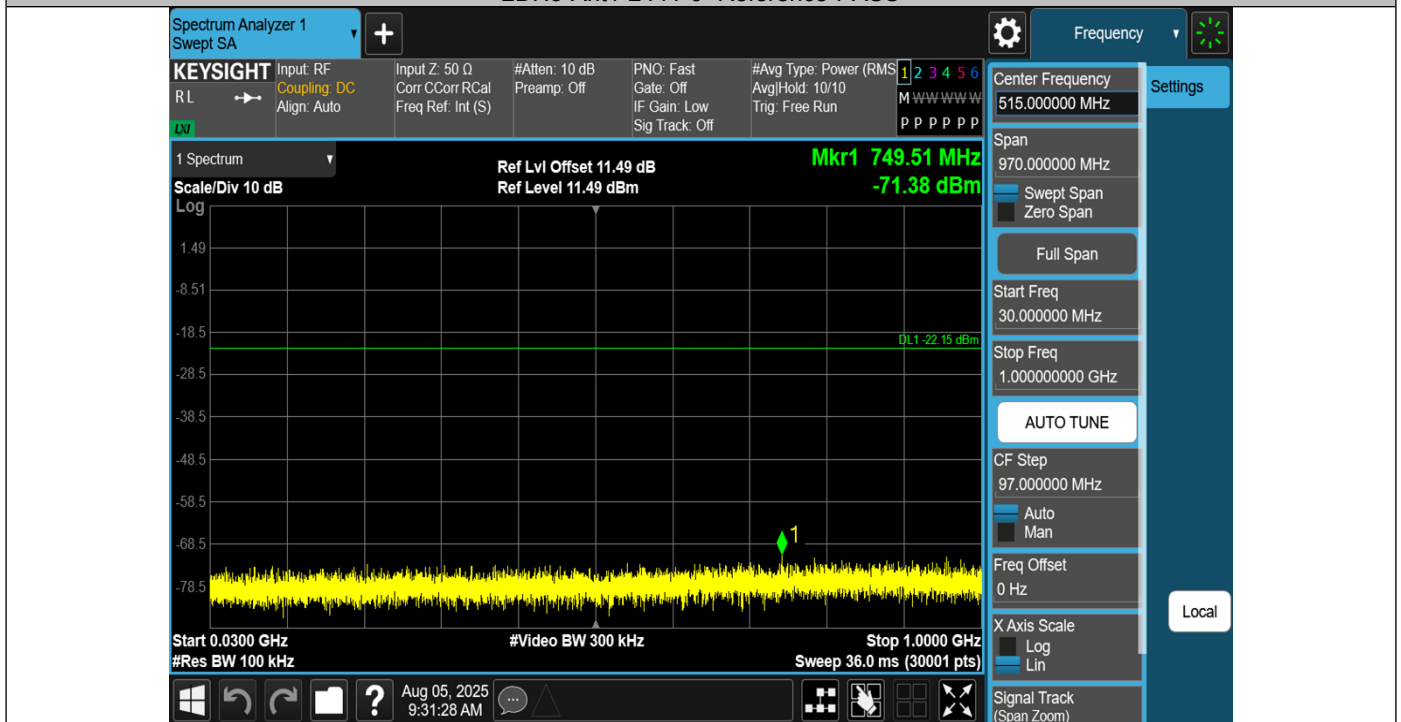

2DH5-Ant1-2441-30~1000-PASS

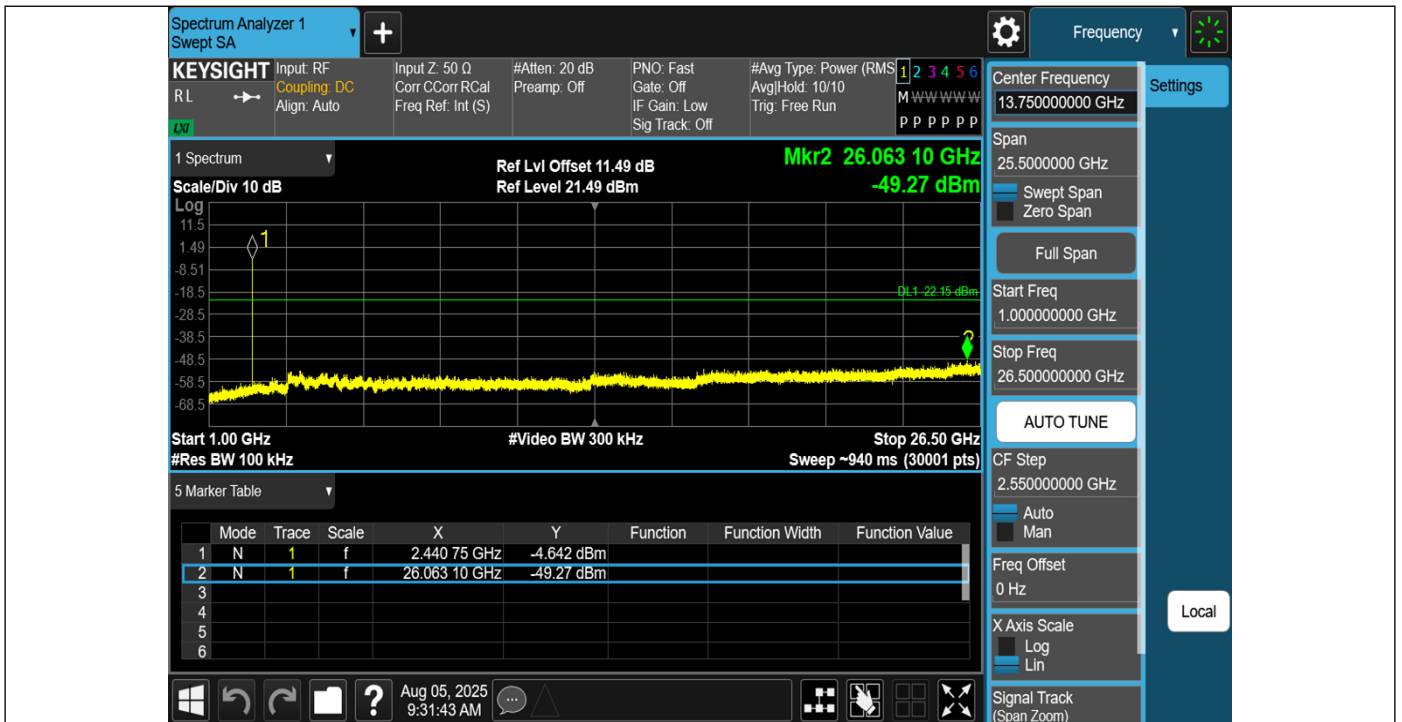

2DH5-Ant1-2441-1000~26500-PASS

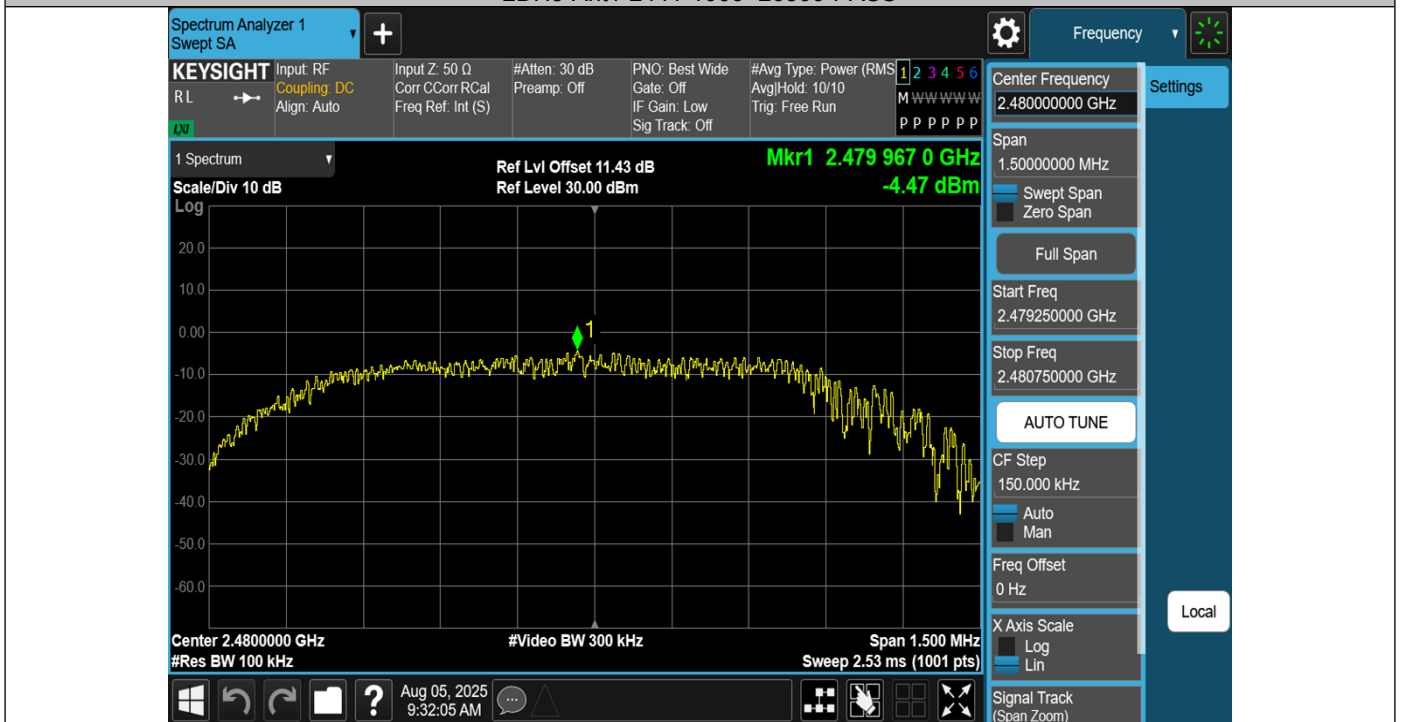

2DH5-Ant1-2480-0~Reference-PASS

