 


On table

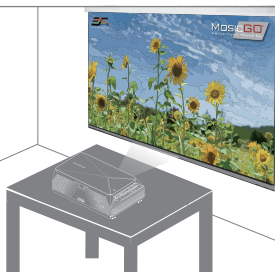



Note1






Keep enough space from and ventilations (20 cm above)

Note2


4 rubber feet are placed on flat surface.
Prevent to block botto's ventilations.

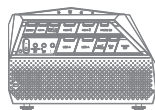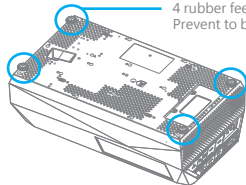

table

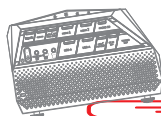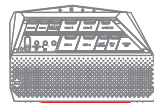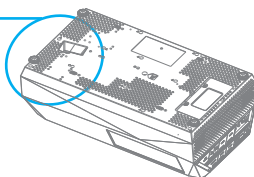

table

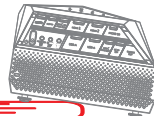



*Note:

Please keep air vents open for heat ventilation. Otherwise, projector will be turned off if it's over heat.

On tripod



Mount on ceiling

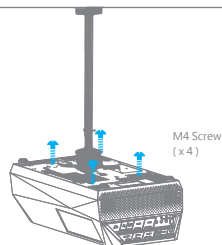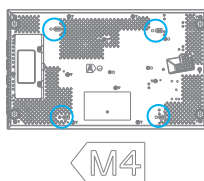

M4 Screw
(x 4)

1. There are 4 screw holes marked "M4".
2. Fasten screws(M4) to your ceiling mount kits.

1 Tripod Components List



Tripod bag



Tripod



Tray (with 2 M6 screws and 2 nuts)



Parts kit



Bubble level



Nuts

M6 screws


2 Assembly



1. Open the tripod. Adjust it to a proper height, and lock it.



2. Turn the tripod holder upright. Put a bubble level on the tripod holder. Adjust it to be horizontal. Then lock it tightly.

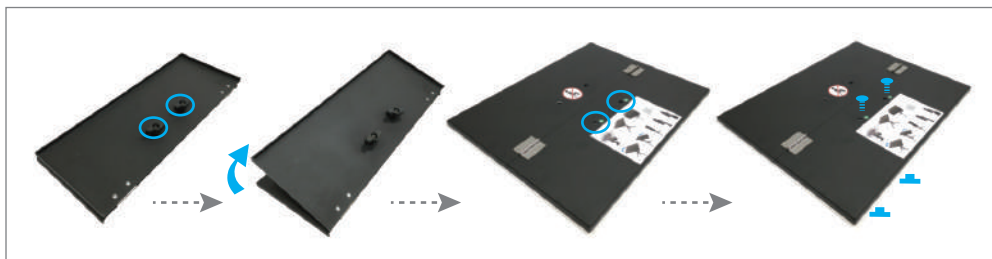

3. After unfolding the tray, remove the two pairs of M6 screws and nuts.



4. Put the tray on the tripod holder, align the two holes (around the big hinge head), and then lock two pairs of M6 screws and nuts.

***Note:**

Keep this side up. It is easy to be folded, and put to bag later.




UP



DOWN


3 The Collection Step

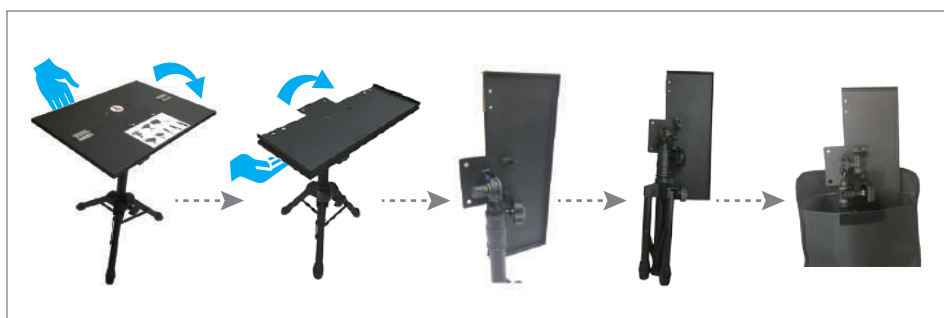


***Note:**

Do not assemble it on the other two holes as below, because it can not be put to bag after folding.




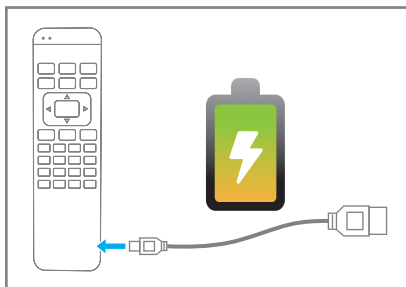


1. Please charge the air mouse fully.

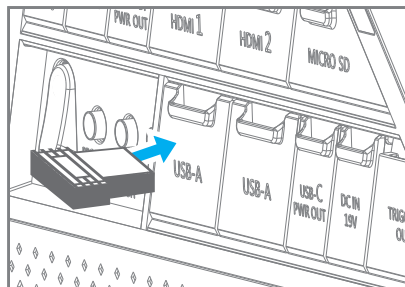

2. Plug air mouse receiver to USB-A slot.

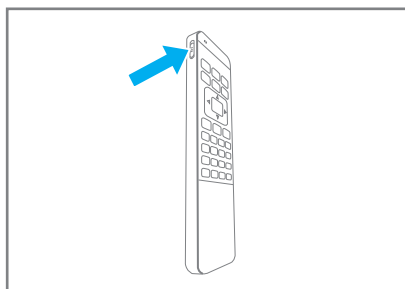


3. Turn on the air mouse.
Use the air mouse to control the Android functions.

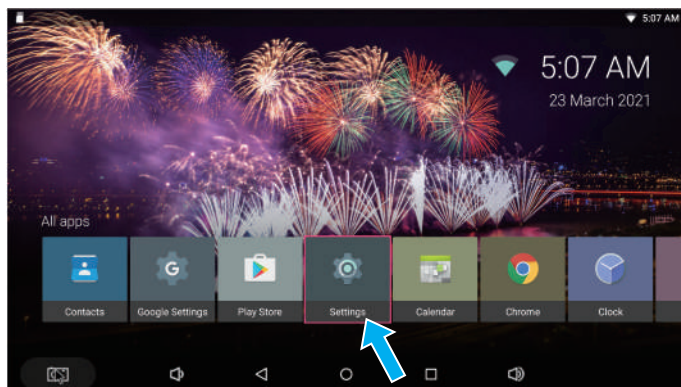


4. Press Settings icon.


5. Press Wi-Fi.

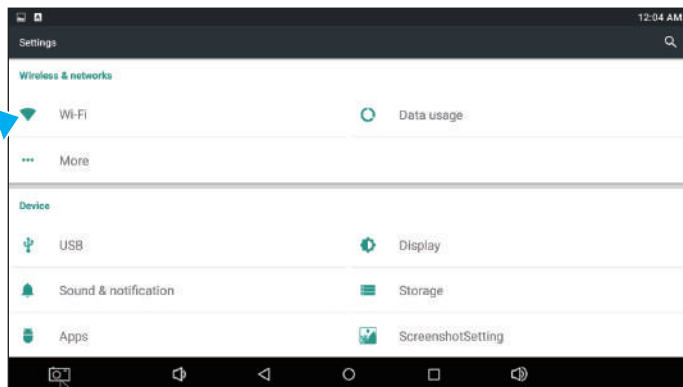


6. Turn on the Wi-Fi.

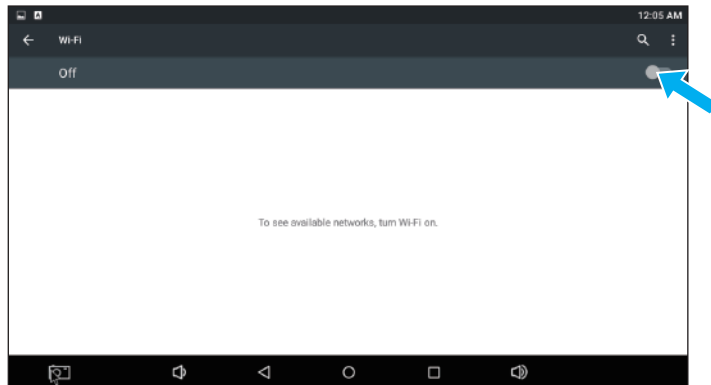


7. Select your Wi-Fi.

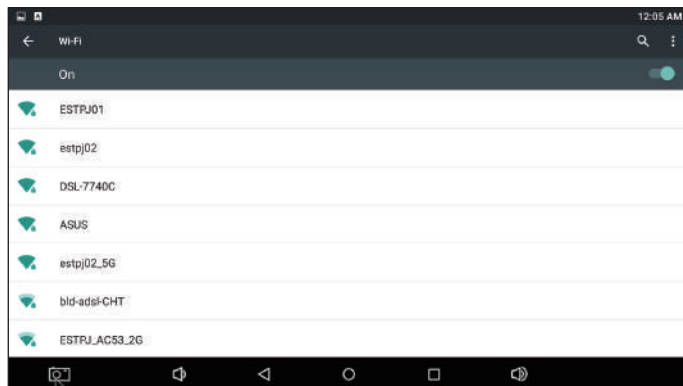


8. Password required.

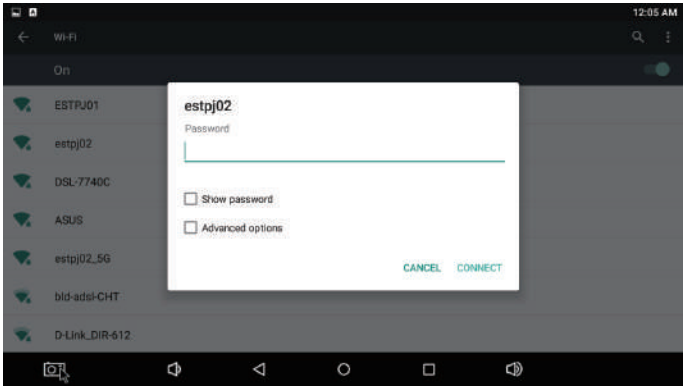


9. enter password.

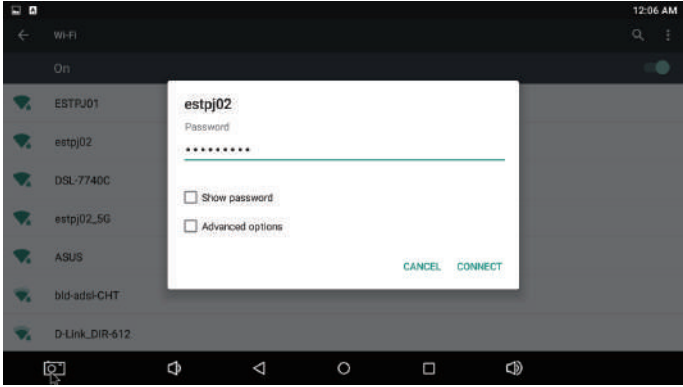

10. Successfully connected to WI-FI.

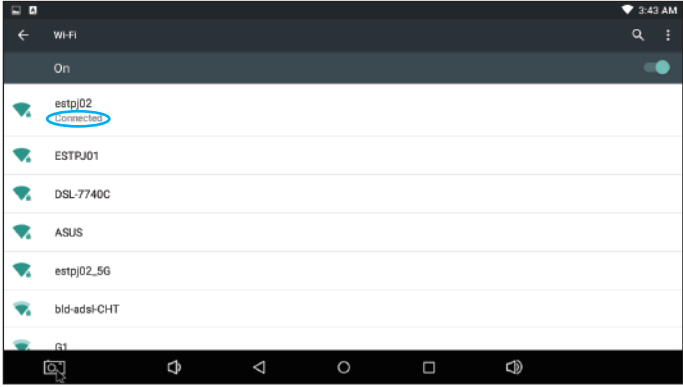

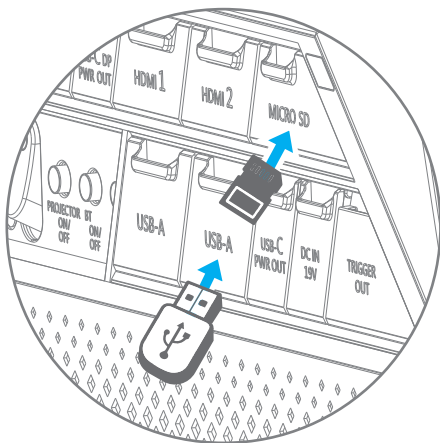


1. Insert micro SD card or USB Disk.
Only FAT/FAT32 file system is supported.




2. Press Gallery icon.

Following picture format are supported: JPG, PNP, GIF, BMP.

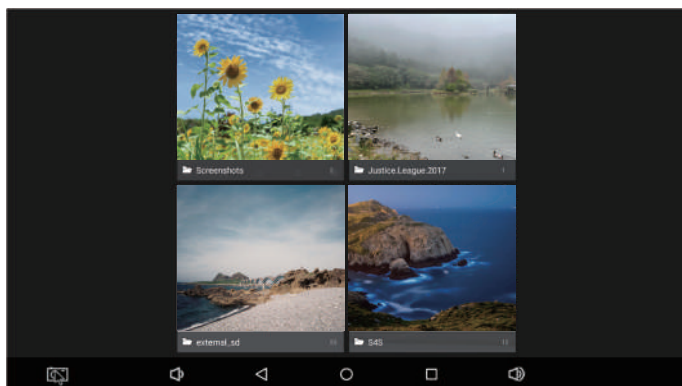

3. Enter the Gallery.

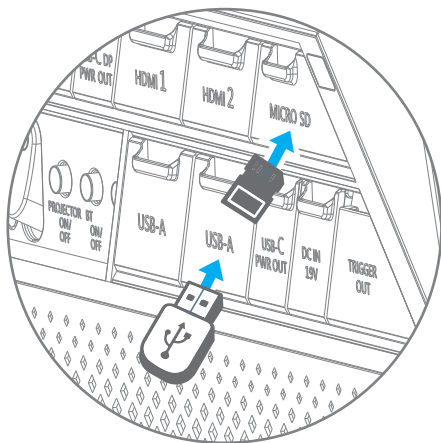


1. Insert micro SD card or USB Disk.
Only FAT/FAT32 file system is supported.




2. Press Video icon.

Following video format are supported: MP4, MOV, AVI, MKV, MTS, TS, VOB, M2TS, M4V.

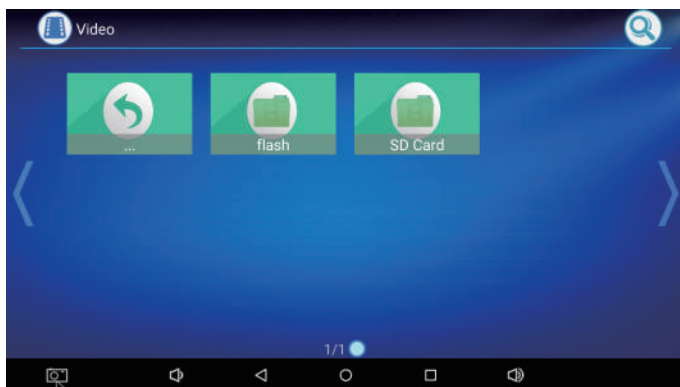

3. Select the files you want.

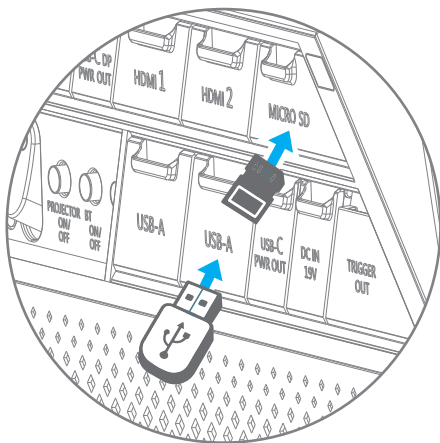


1. Insert micro SD card or USB Disk.
Only FAT/FAT32 file system is supported.



2. Press Music icon.

Following music format are supported: MP3, WAV, AAC, FLAC, APE, OGG.

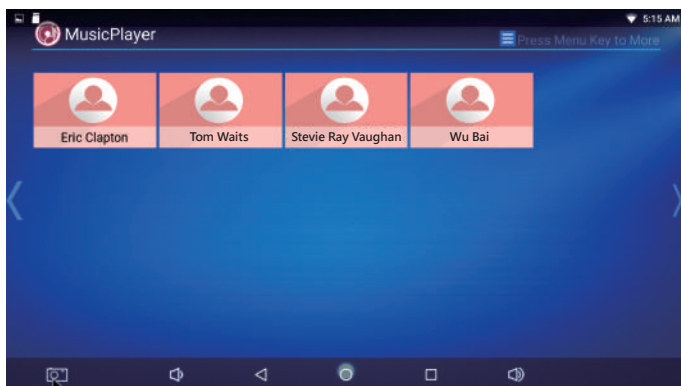

3. Select your music.