

USB cable

Engine

Mechanical bearing


PCB


Battery

ON/OFF switch

IR sensor

out of Standby button

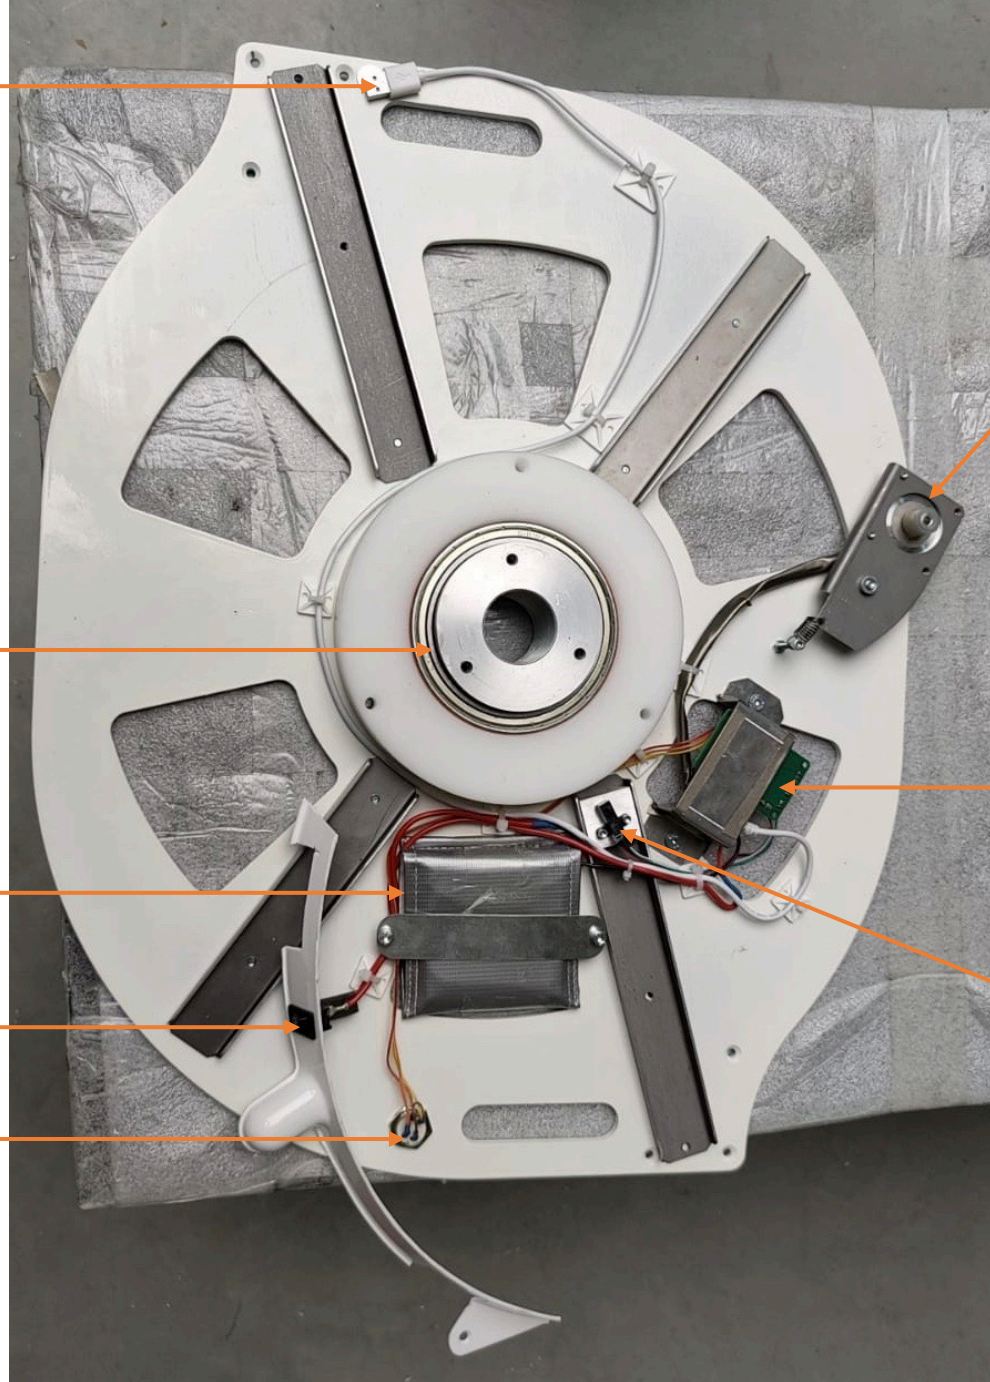

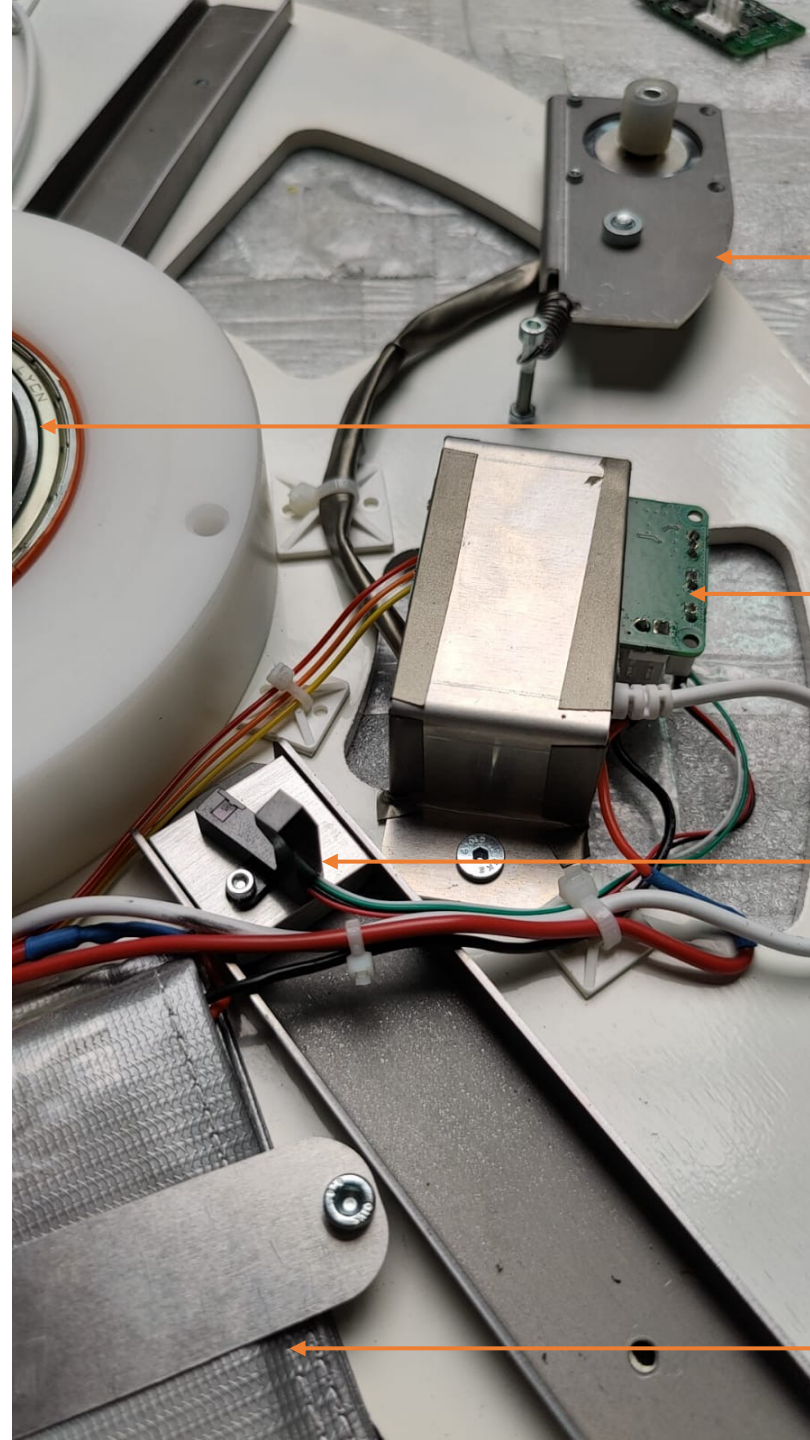

Engine

Mechanical bearing

PCB

IR sensor

Battery