

QUICK USER GUIDE

Tablet 10.1"

Model: VK-TM102-U

Index

Acknowledgments	3
Package contents	4
Overview	5
Safety precautions for batteries	6
Warnings	7
Updates management	9
Android	10
Features	11
Technical data sheet	12
Correct disposal	14

Acknowledgments

This product has been designed to take advantage of mobility and direct interaction via the touch screen and WiFi and Bluetooth connectivity.

The specifications and information contained in this manual are provided only for informational use and are subject to change at any time, without notice, and can not be construed as a commitment by the company. The company assumes no responsibility and does not assume any error or inaccuracy that may appear in this manual, including the products and software described.


Package content

Verify that the following items are included in the package:

x1 Tablets device	x1 Type-c line
x1 American standard adapter	x1 User manual English

If something is missing or damaged, please contact the manufacturer and keep intact the package for transport.

Overview

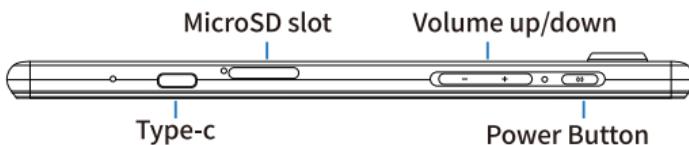

If the device does not respond when you press the power button, the battery is probably completely discharged. Charge the battery for at least 30 minutes (using the Type-c line and the power adapter supplied with the device) then try to switch on the device again.

You can recharge the battery multiple times, but all batteries have a limited life span. If you notice a significant reduction in the battery life of the device, you can contact our company to purchase the battery for replacement.

The device can heat up during prolonged use or if exposed to high temperatures. If the device overheats excessively, stop charging and disable unnecessary functions. Place the device in a cool place and allow it to cool down to room temperature. Avoid touching the surface of the device in case of overheating.

Charging times may vary depending on the ambient temperature and the remaining battery level.

Safety precautions for batteries

Use the correct external power supply. The power adapter of this product can only be used with the power type indicated on the electrical rating label. If you are unsure of the type of power required, please contact our service center.

Battery pack care

The product contains a lithium polymer battery. If the battery pack is handled incorrectly there is a risk of fire and burns. Do not attempt to open or repair the battery pack.

In case of prolonged stop of the device make sure to leave the batteries with a residual charge of about 50%. The device displays a low battery warning when the battery is almost empty. Charge the device immediately to prevent it from turning off automatically.

Warnings

- ! Only the original power adapter and Type-c line cable can be used to charge the tablet. Using different power adapters may damage the tablet.
- ! Make sure you plug the power supply into the power outlet with the correct input voltage. The adapter output voltage is 5.0V DC,2A.
- ! Keep your device away from strong magnetic fields which may damage the device.
- ! Only qualified employees of our company can repair tablets.
- ! We recommend keeping the volume at a safe level to preserve your health. In case of prolonged exposure to loud noise hearing troubles may arise.
- ! Be careful not to drop the device or bump it against objects, it may cause damages not covered by the standard warranty.
- ! Do not expose your device to damp environments, rain or extremely hot environments.
- ! The contact with water, sand or prolonged exposure to high temperatures may cause an irreparable damage.

- ⚠ Do not use chemicals or detergents to clean the tablet, they may corrode the surface.
- ⚠ Do not use your device with wet hands in order to avoid unexpected electrical discharges.
- ⚠ All wireless devices are susceptible to interferences, which could affect the performance.
- ⚠ Do not use the tablet in petrol stations or near fuels or chemicals.

Updates Management

During software updates or during download operations do not remove the power supply, it may cause irreversible data loss.

Any tampering with the software may generate additional costs for recovery.

Android

Start

Press and release the power button on the top right of the tablet.

Power off

Hold for a few seconds the power button
> Select > Power off.

Lock the screen

Press the power button.

Changing the Language of the System

From Settings go to > System > Language & input > Language > Select language.

Features

Dual Camera

It takes pictures, records videos.

Capacitive multi touch

Use your fingers on the screen to control the system.

Type-c

Connect Type-c line.

Slot MicroSD

Support MicroSD up to 128 GB.

Jack audio

Connect headphones or earphones through this input.

Microphone

It captures your voice and all the sounds coming from the surrounding environment.

Speaker

It offers a clear and optimal quality of sound.

Volume keys

+ Increases Volume / - Decreases Volume.

Technical data sheet

Tablet dimensions	Width: 243mm Height: 162mm	Thickness: 9.5mm Weight: 514g
Chip	 T610	T610
Display	 	Dimensions: 10.1 inches IPS Resolution: FHD 1200 x 1920
Touch Screen		G+G+2.5D
Operating system		Android 11 <small>Android is a trademark of Google LLC. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.</small>
Case		
Memory	 	RAM:4GB ROM:64GB
Buttons	 	Power on Volume

Inputs | outputs



- 1 MicroUSB port
- 1 MicroSD slot
- 1 Mini jack port for earphones / microphone

Battery



Lithium Polymer battery:
6.000 mAh 3.8V

Connections



2.4G+5G WIFI 802.11 b/g/n/ac
BT 5.0

Camera
Sensor

- 8 MP Front, 13 MP Rear
- ACCELEROMETER

Correct disposal



EXPLOSION HAZARD if the battery is replaced with a not compliant model. Dispose of used batteries according to the manufacturer's instructions.



DO NOT THROW the battery in the dustbins. The X symbol on the dustbin indicates that it is forbidden to throw the battery in it.



DO NOT THROW our e-tab WiFi in the dustbins. This product has been designed to enable the reuse of some parts and the recycling of other parts. The X symbol on the dustbin indicates that the product (electrical, electronic, batteries containing mercury) should not be thrown in the bins of municipal waste. Check local regulations for proper disposal of electronic products.



DO NOT THROW our e-tab WiFi in the fire. DO NOT short-circuit among the contacts. DO NOT disassemble your tablet.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Specific Absorption Rate (SAR) information:

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: This device has also been tested against this SAR limit.

This device was tested for typical body-worn operations with the back of the This device kept 0 mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of This device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.