 
 
 


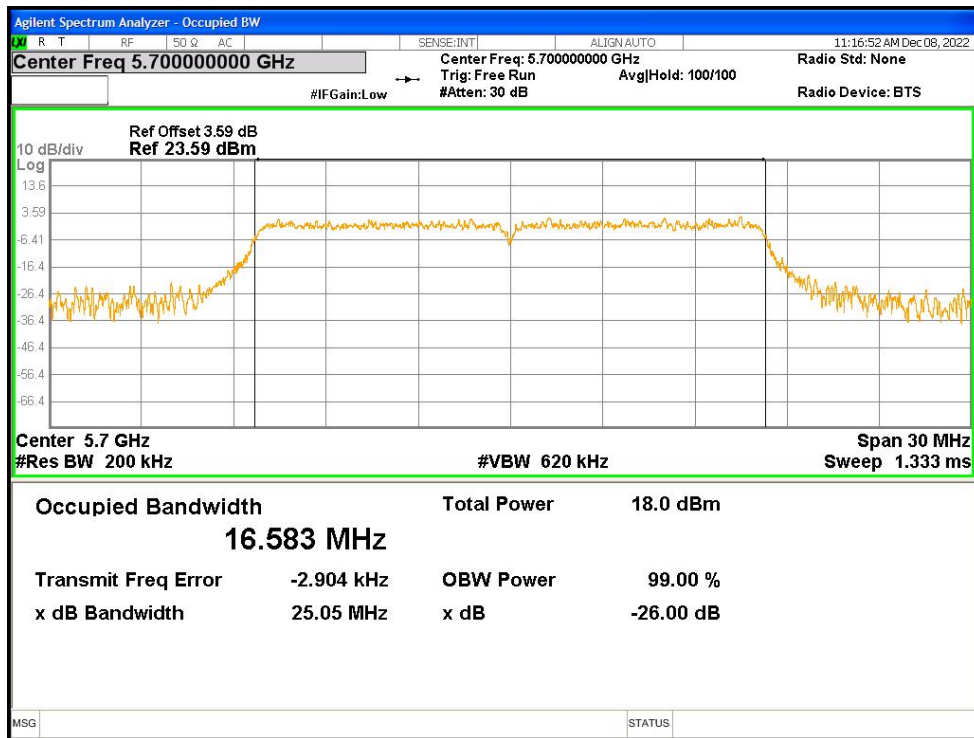


OBW NVNT a 5745MHz Ant1

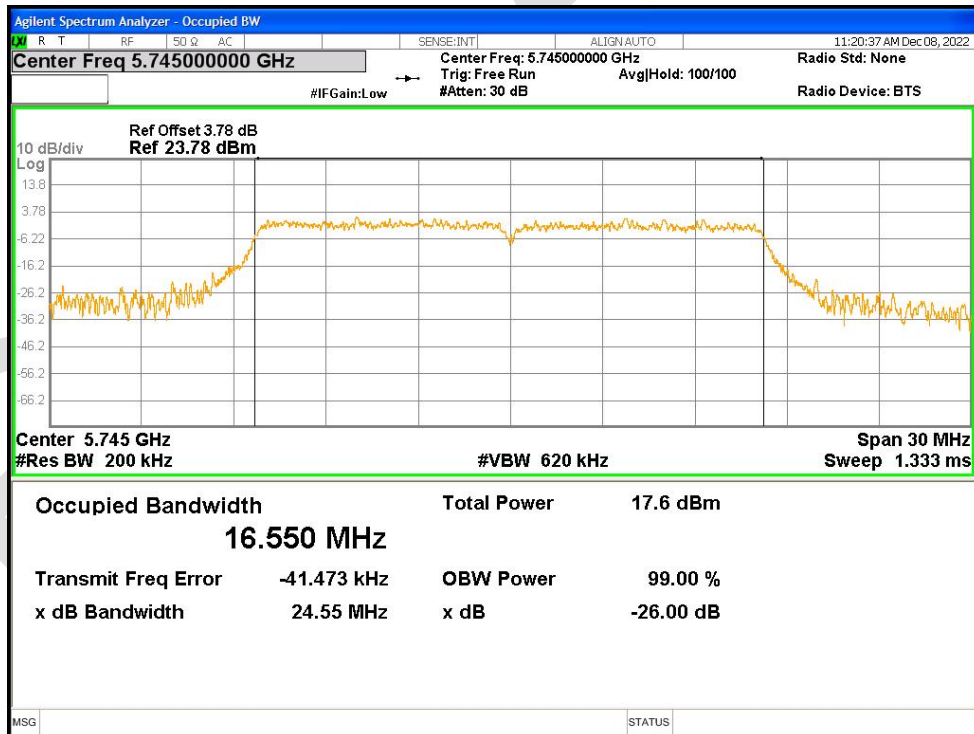


OBW NVNT a 5785MHz Ant1

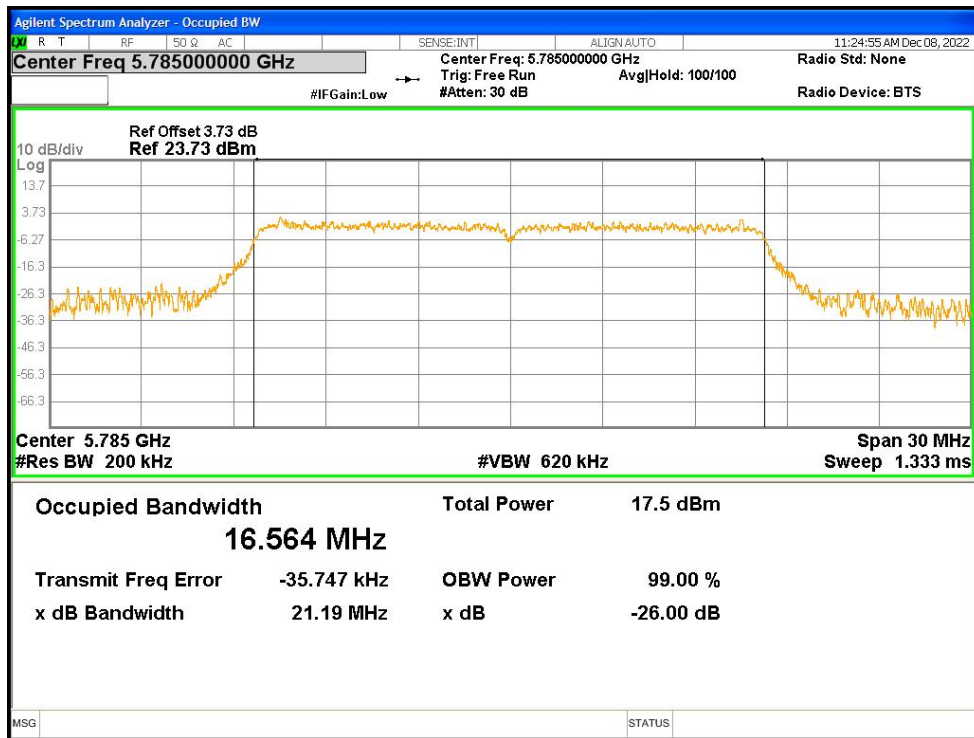

 
OBW NVNT a 5825MHz Ant1

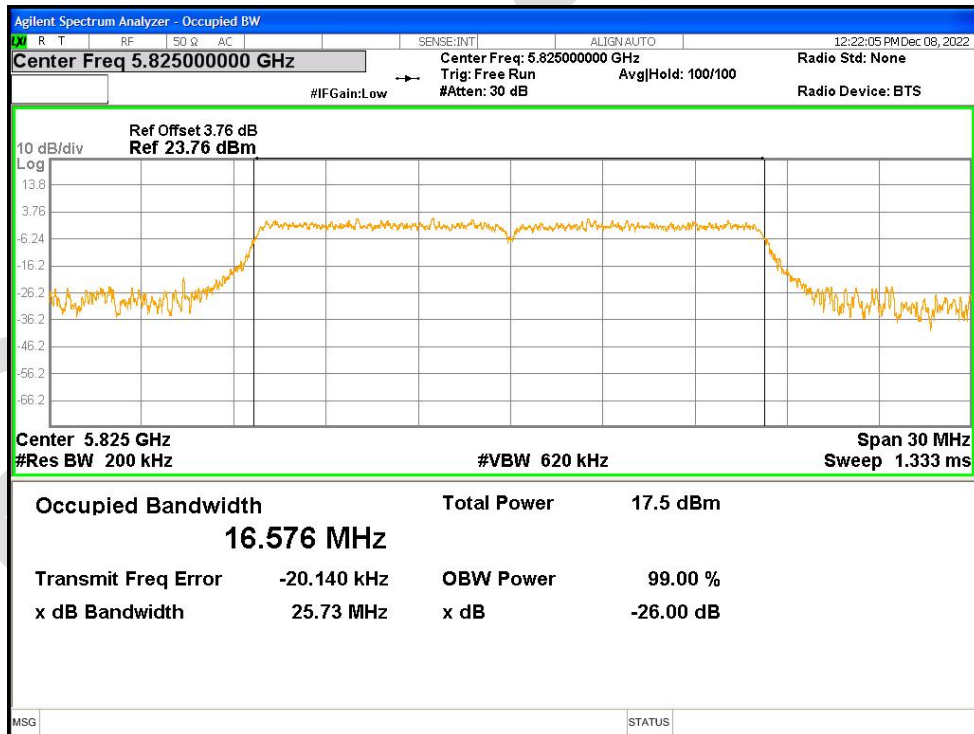


OBW NVNT a 5180MHz Ant2

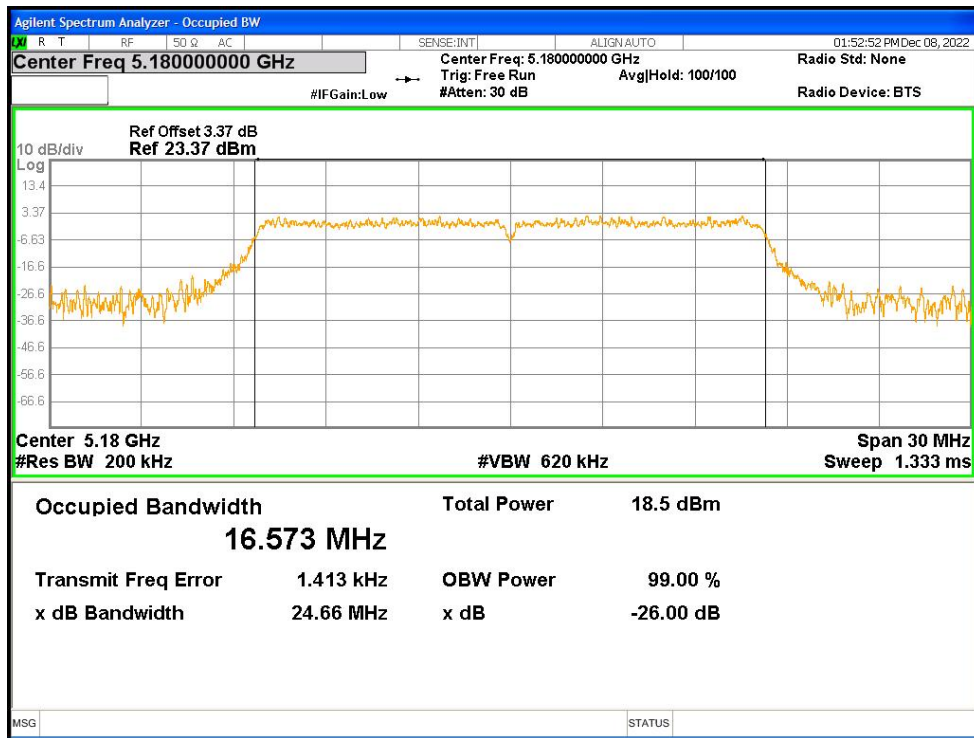 


OBW NVNT a 5200MHz Ant2

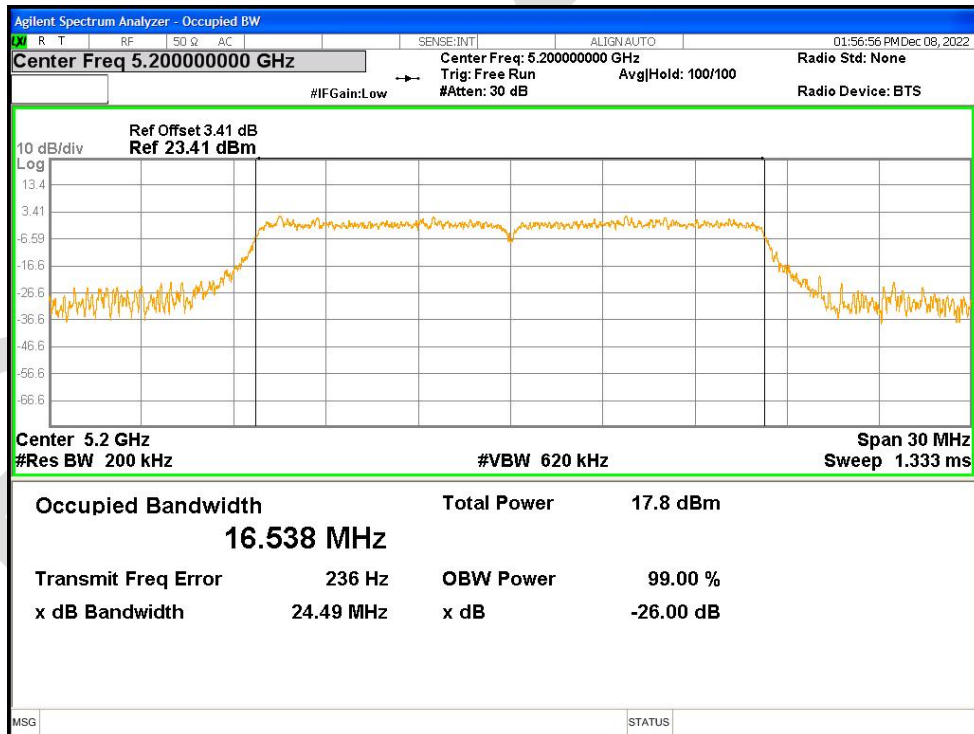 


OBW NVNT a 5240MHz Ant2

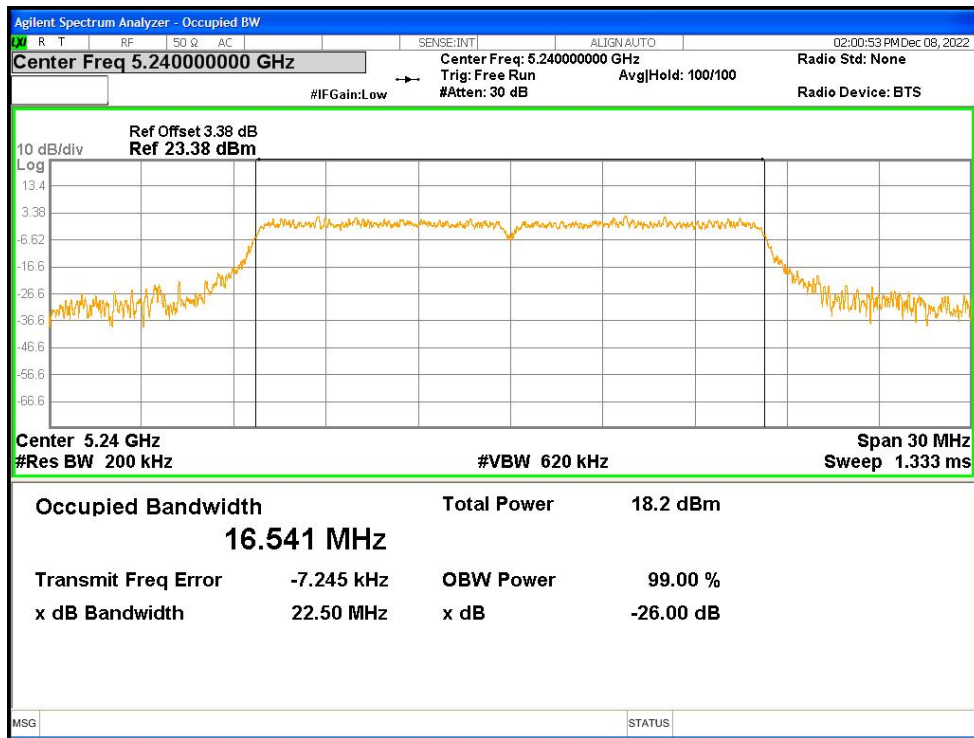 


OBW NVNT a 5260MHz Ant2

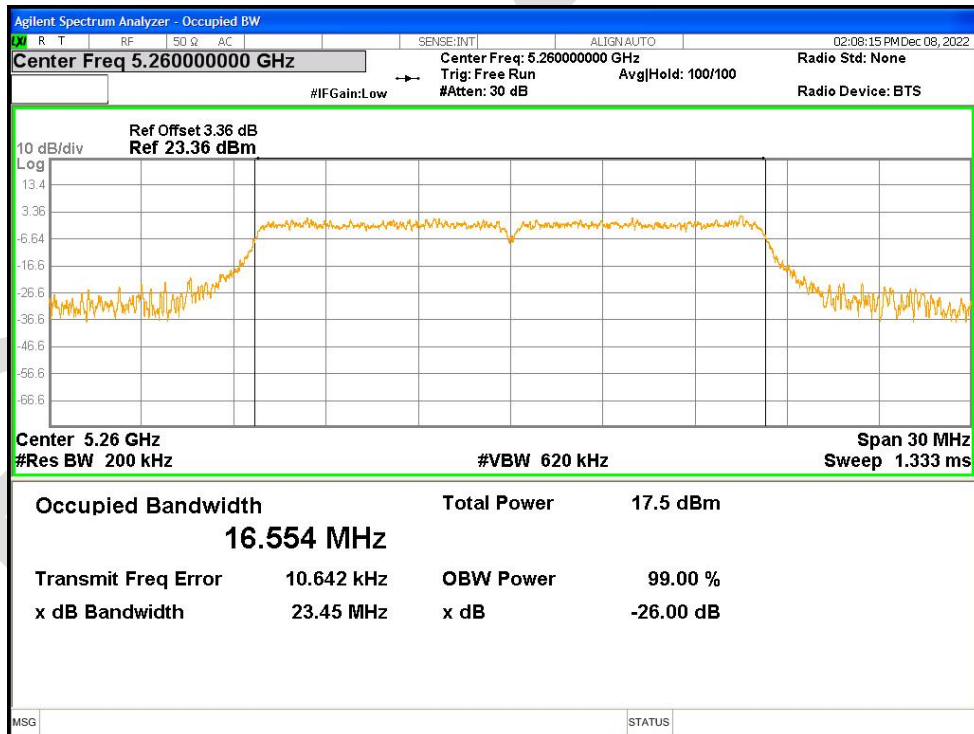 


OBW NVNT a 5280MHz Ant2

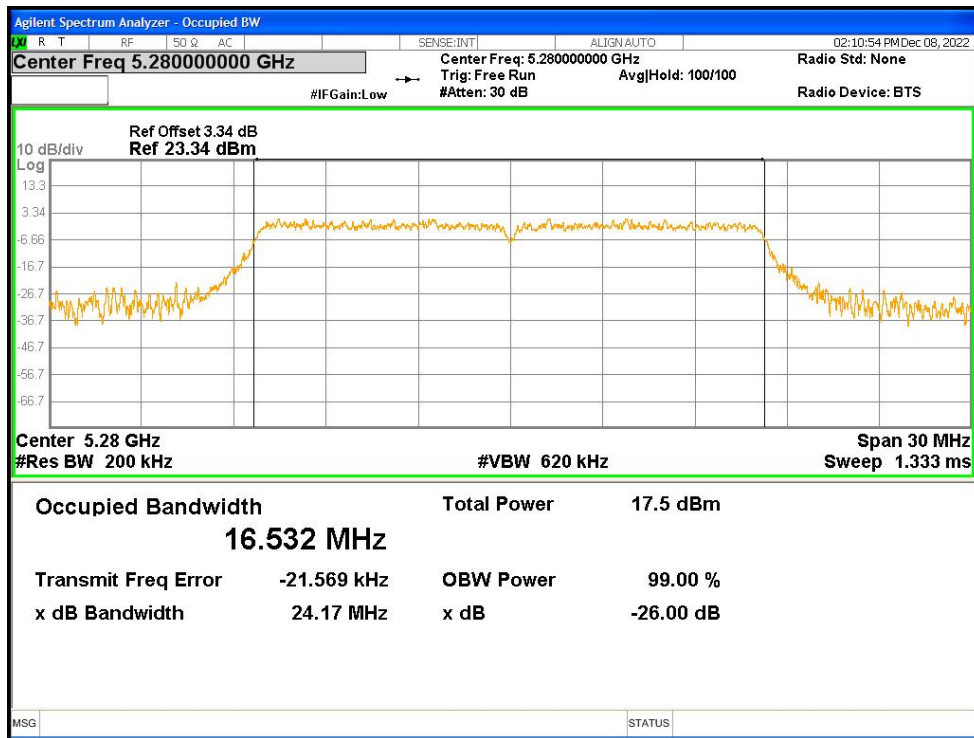 


OBW NVNT a 5320MHz Ant2

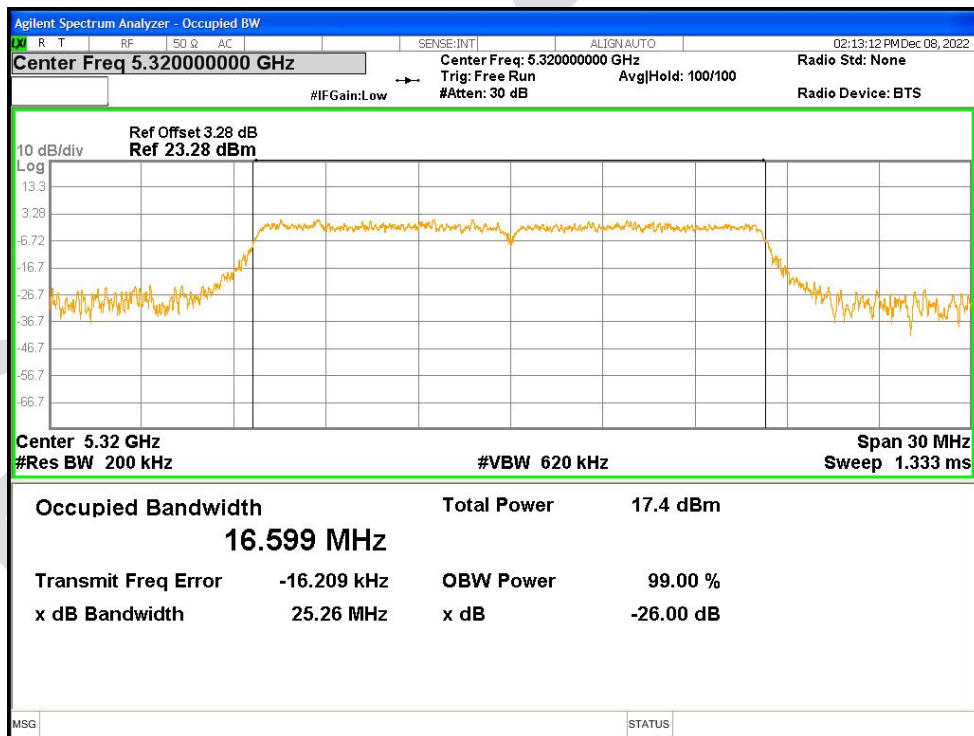 


OBW NVNT a 5500MHz Ant2

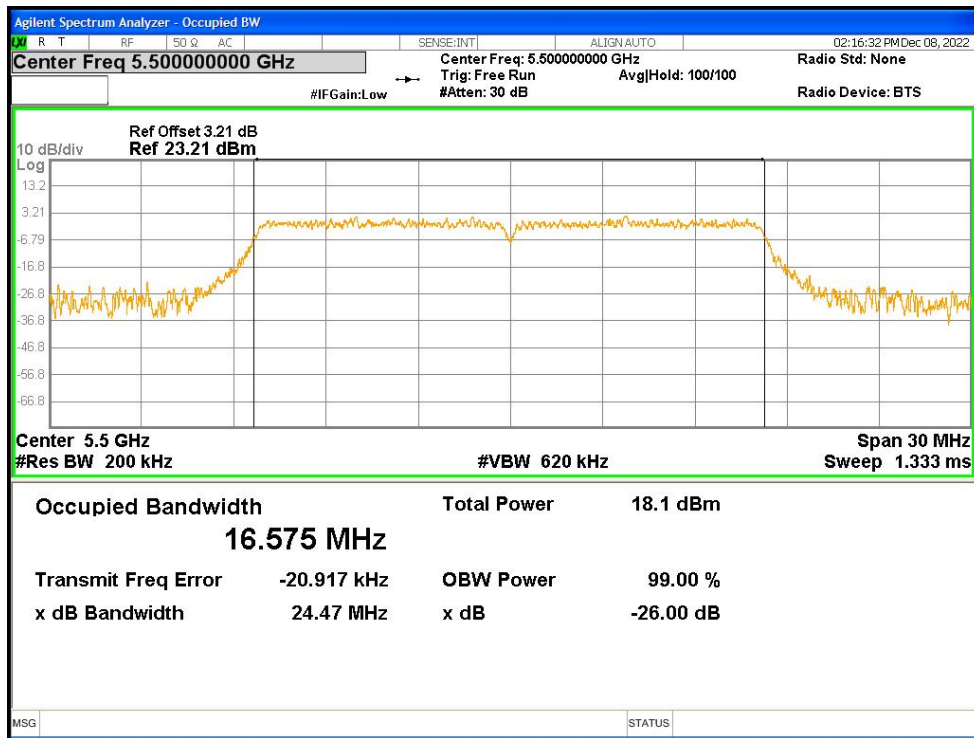 


OBW NVNT a 5600MHz Ant2

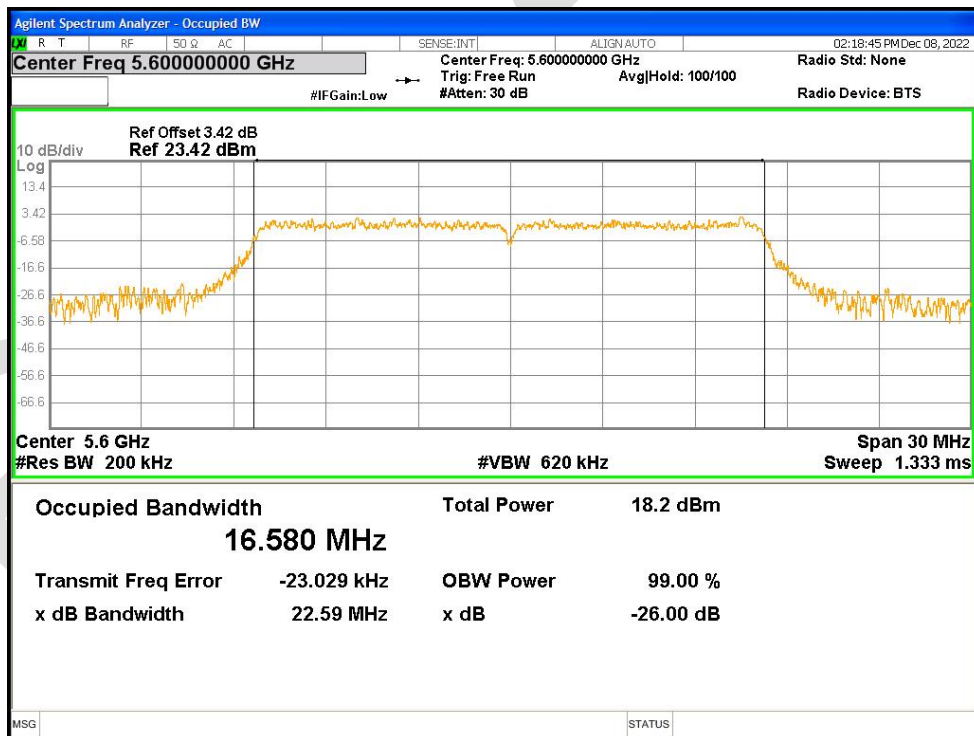 


OBW NVNT a 5700MHz Ant2

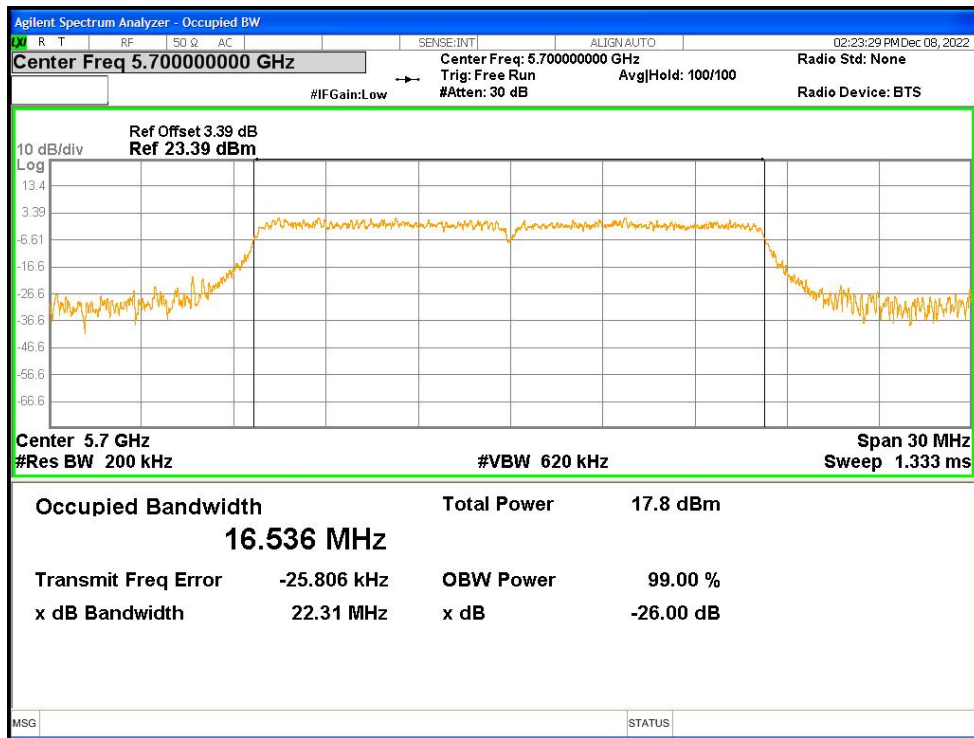 


OBW NVNT a 5745MHz Ant2

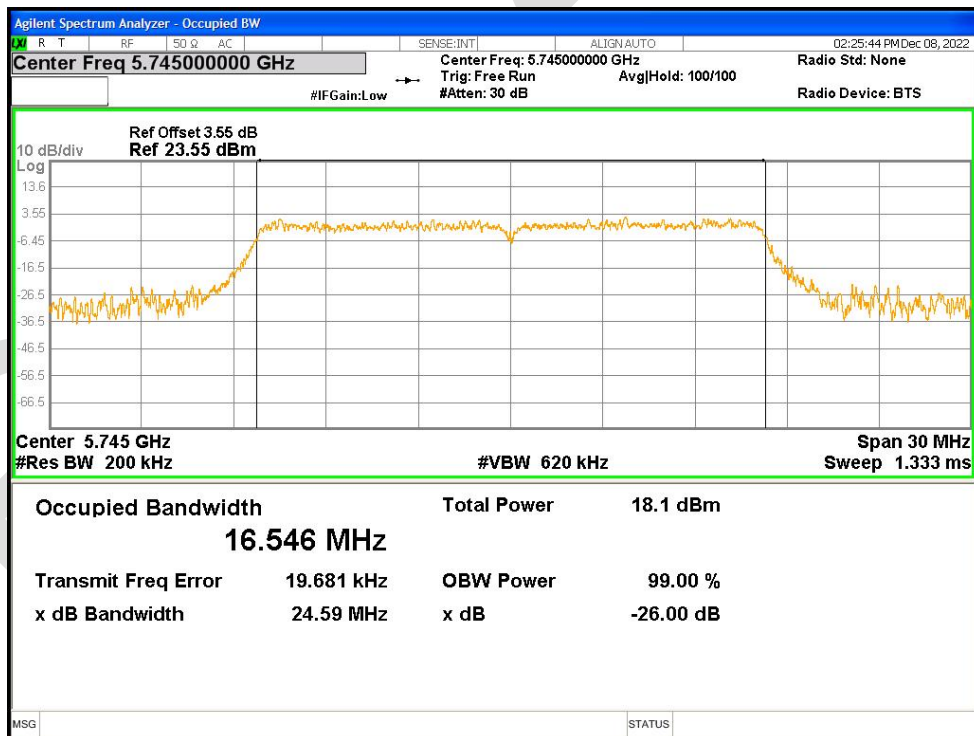 


OBW NVNT a 5785MHz Ant2

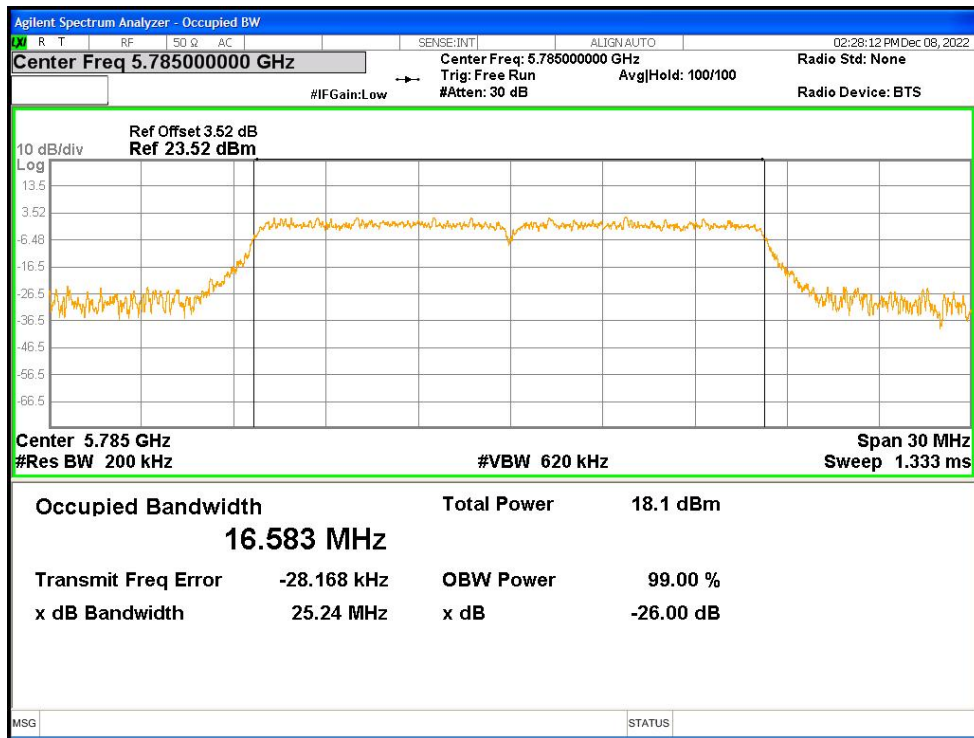 


OBW NVNT a 5825MHz Ant2

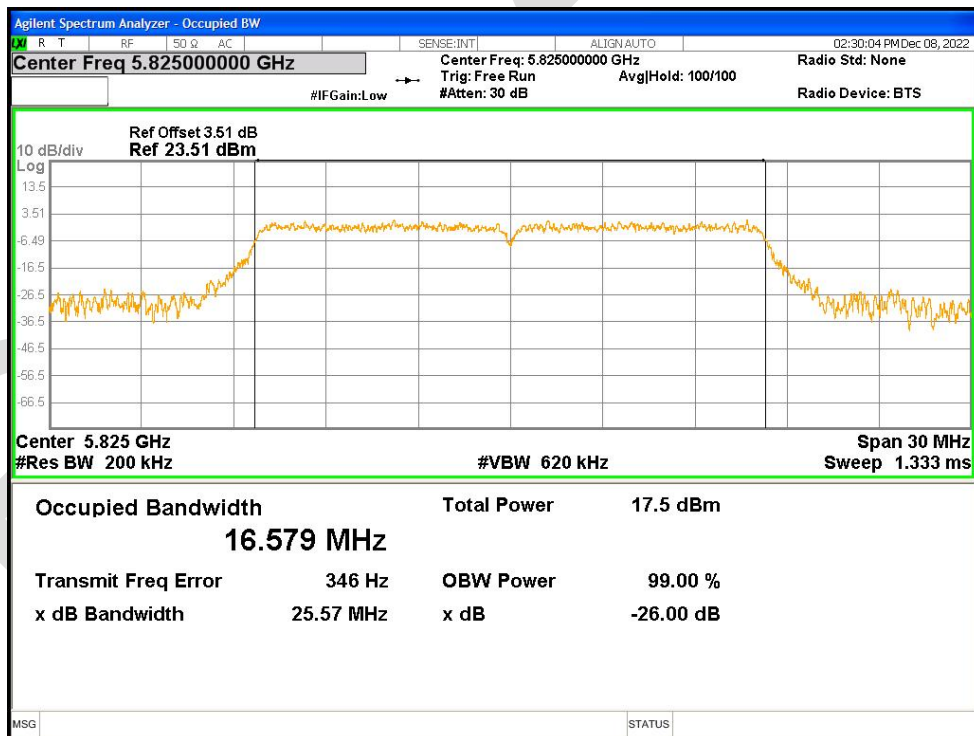 


OBW NVNT ac20 5180MHz Ant1

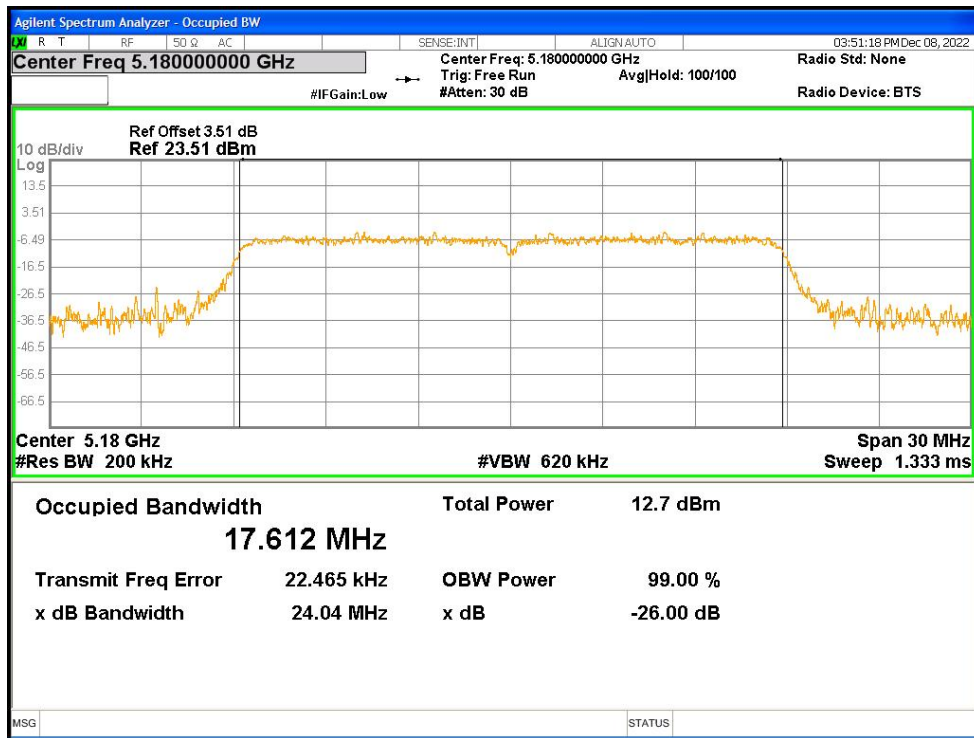 


OBW NVNT ac20 5180MHz Ant2

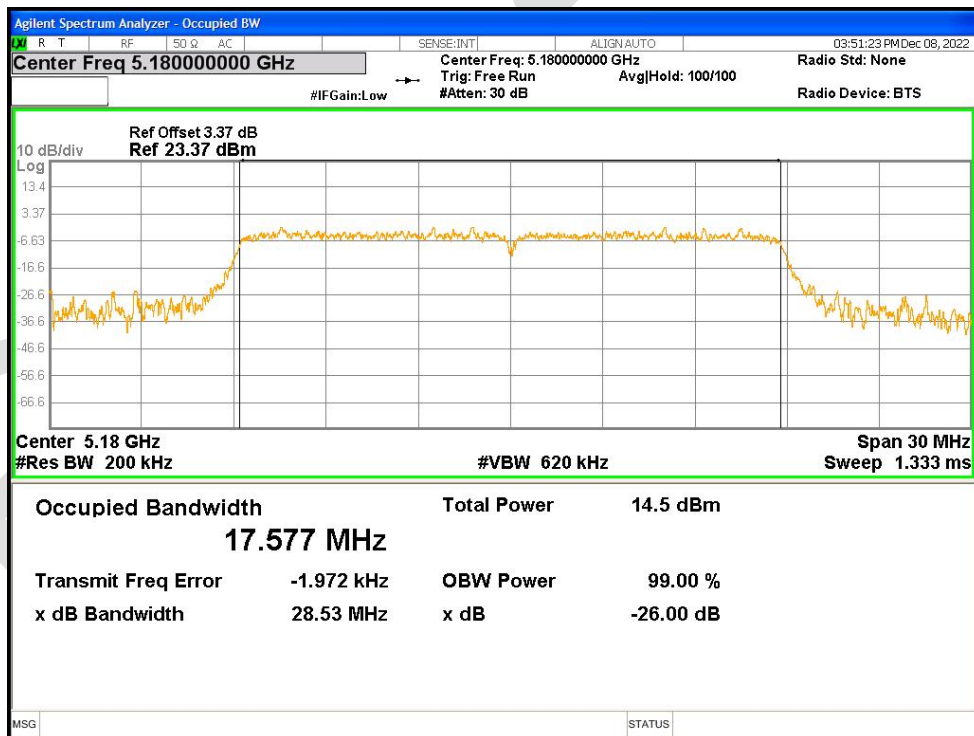 


OBW NVNT ac20 5200MHz Ant1

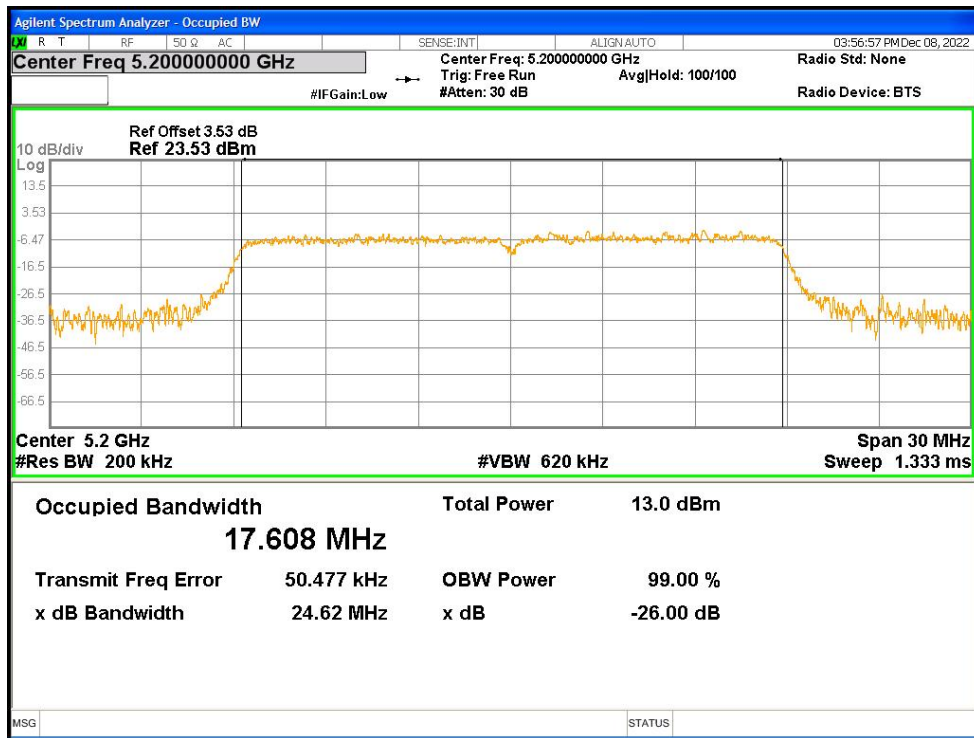 


OBW NVNT ac20 5200MHz Ant2

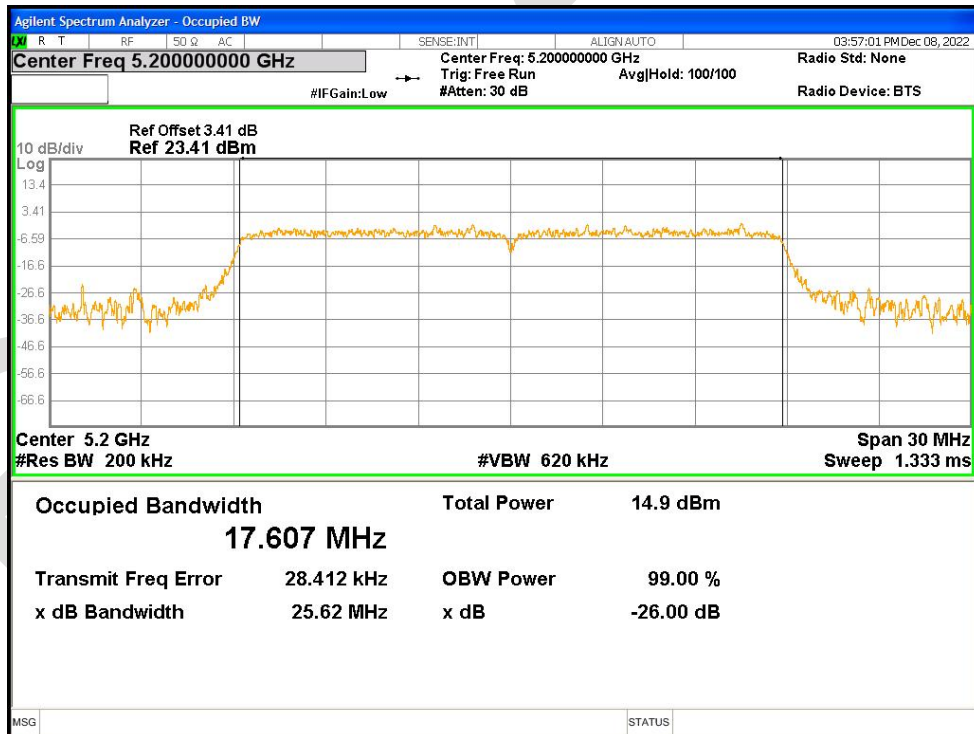 


OBW NVNT ac20 5240MHz Ant1

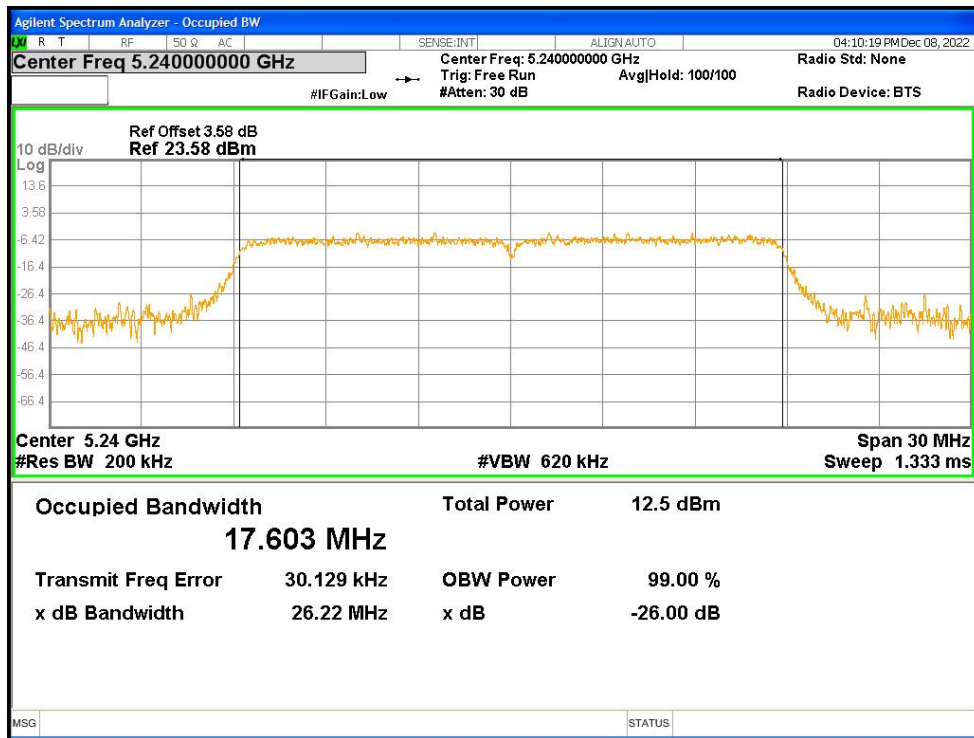 


OBW NVNT ac20 5240MHz Ant2

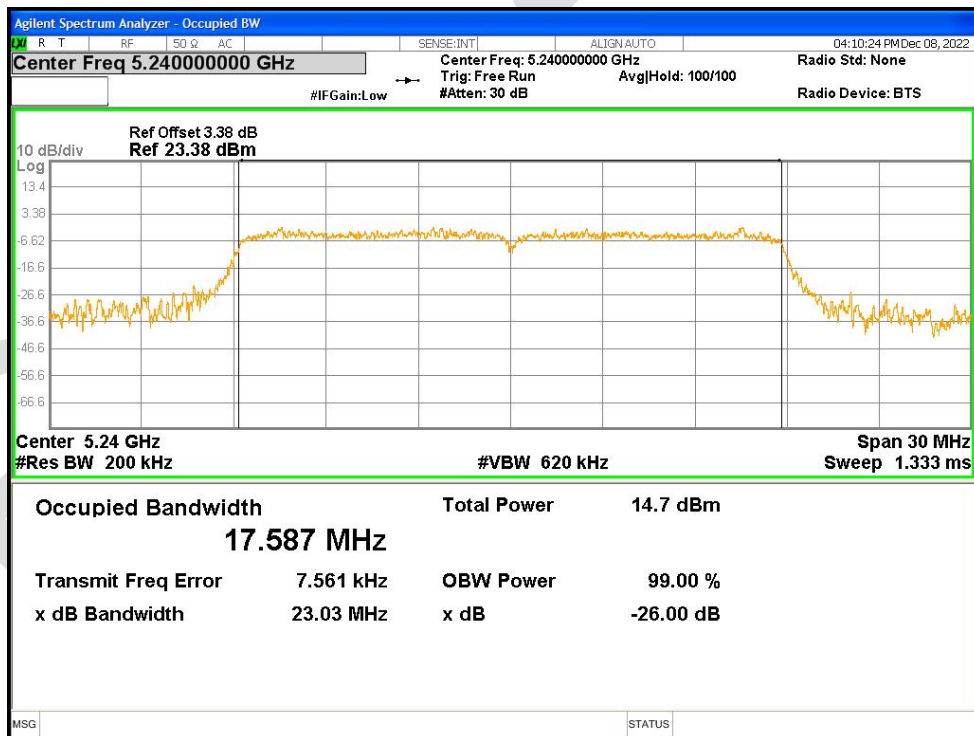 


OBW NVNT ac20 5260MHz Ant1

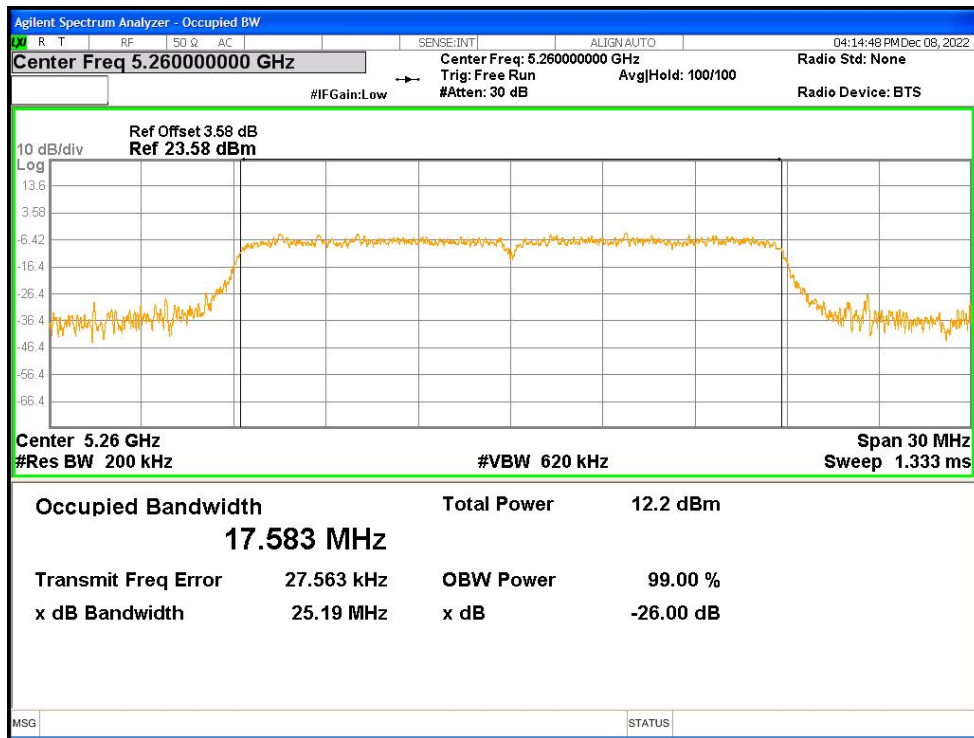 


OBW NVNT ac20 5260MHz Ant2

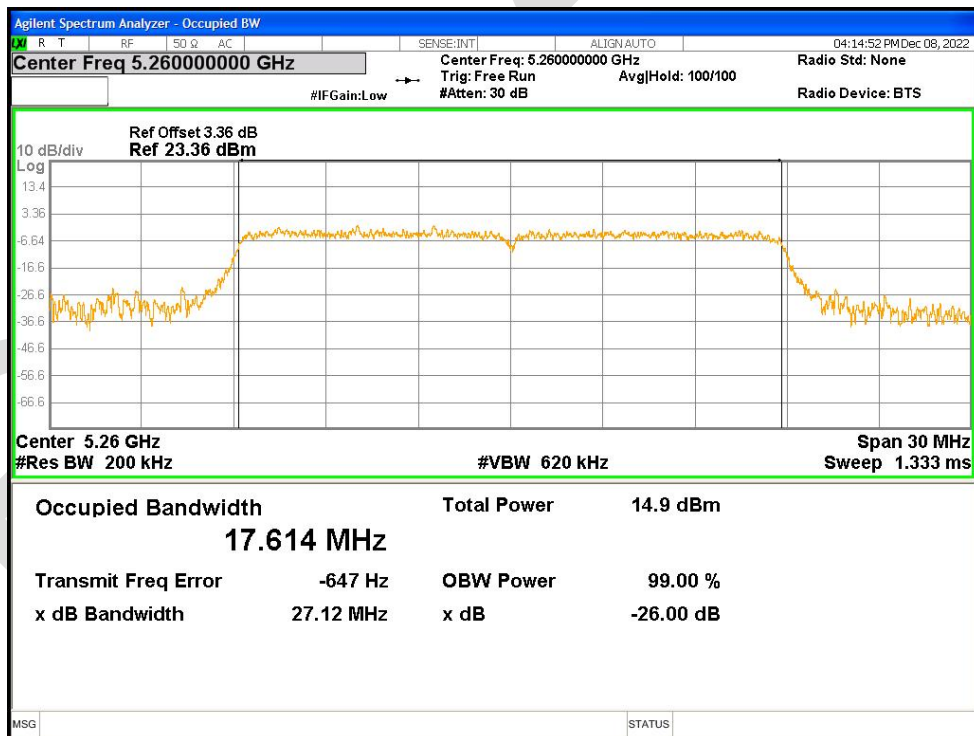 


OBW NVNT ac20 5280MHz Ant1

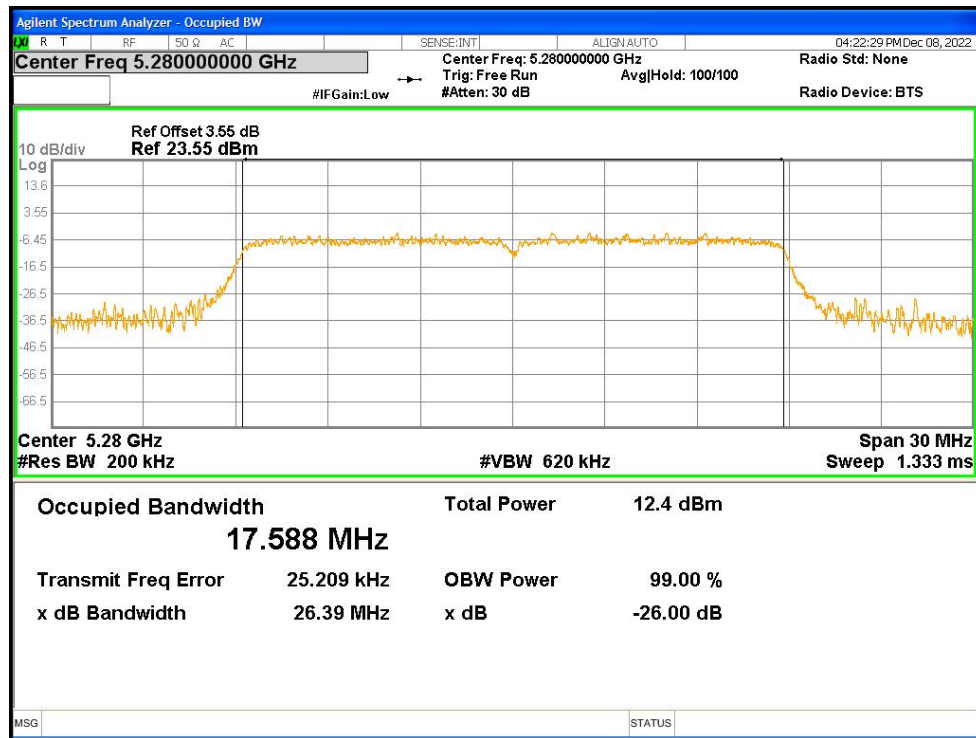 


OBW NVNT ac20 5280MHz Ant2

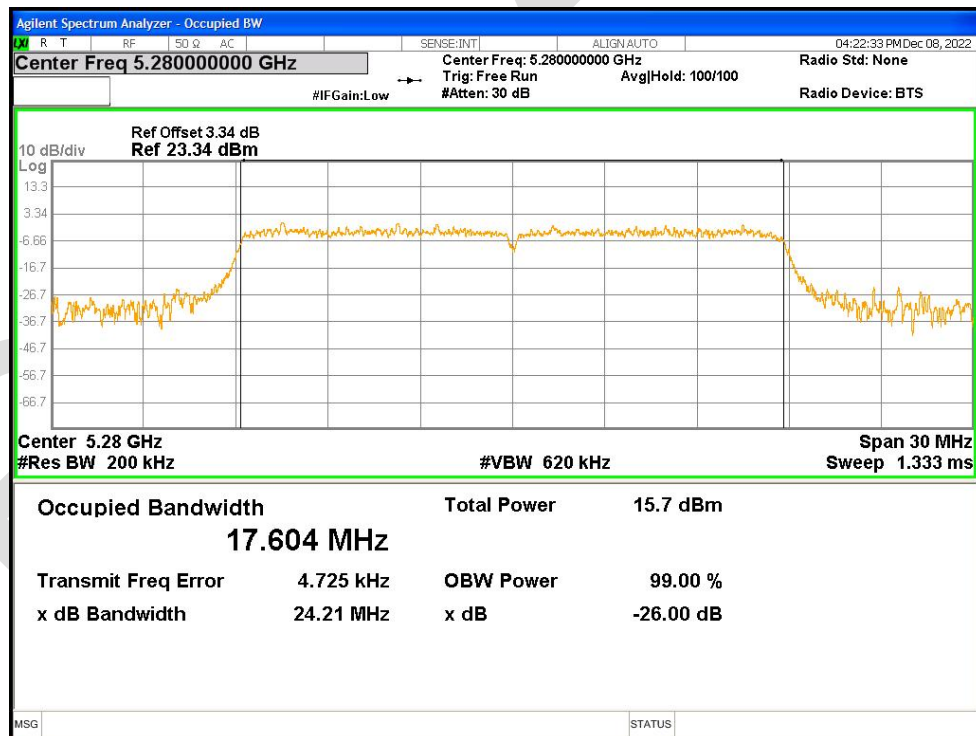 


OBW NVNT ac20 5320MHz Ant1

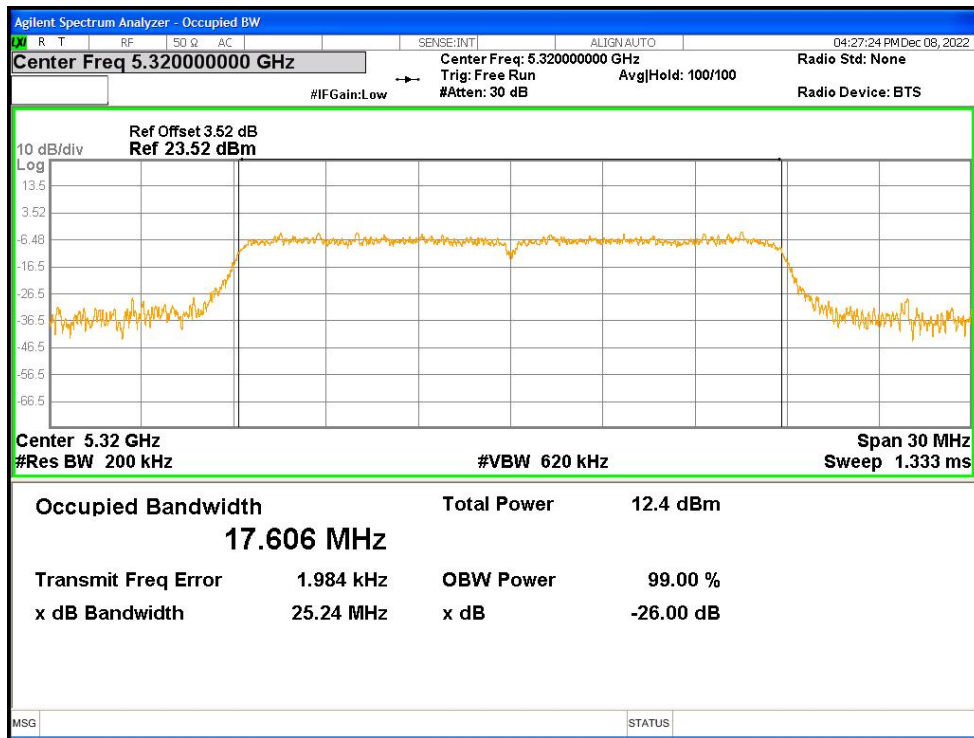 


OBW NVNT ac20 5320MHz Ant2

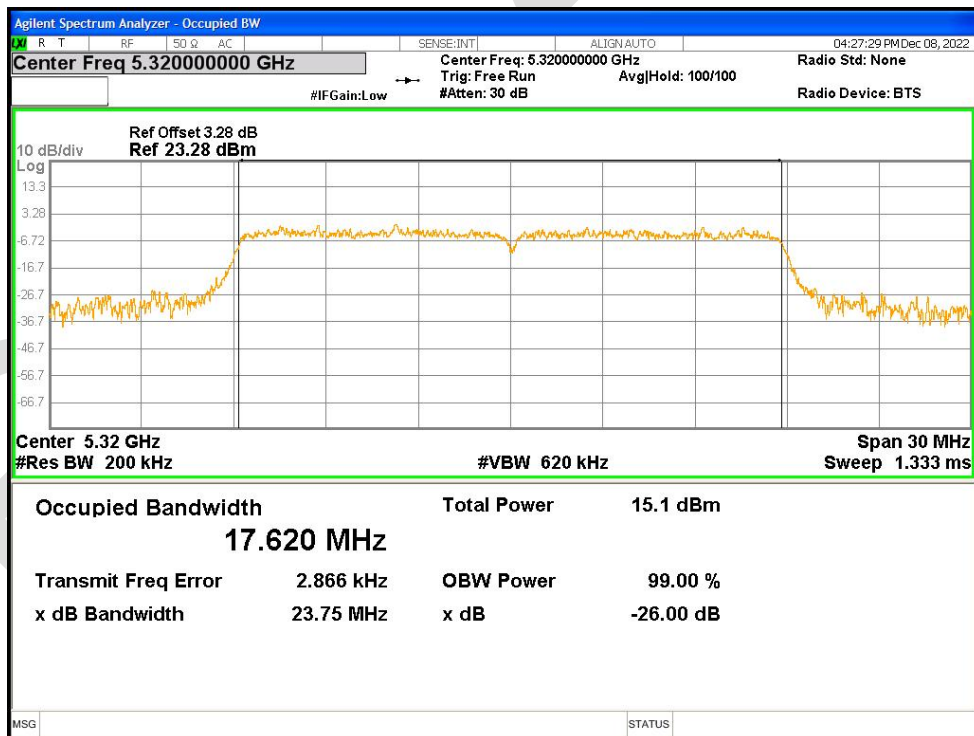 


OBW NVNT ac20 5500MHz Ant1

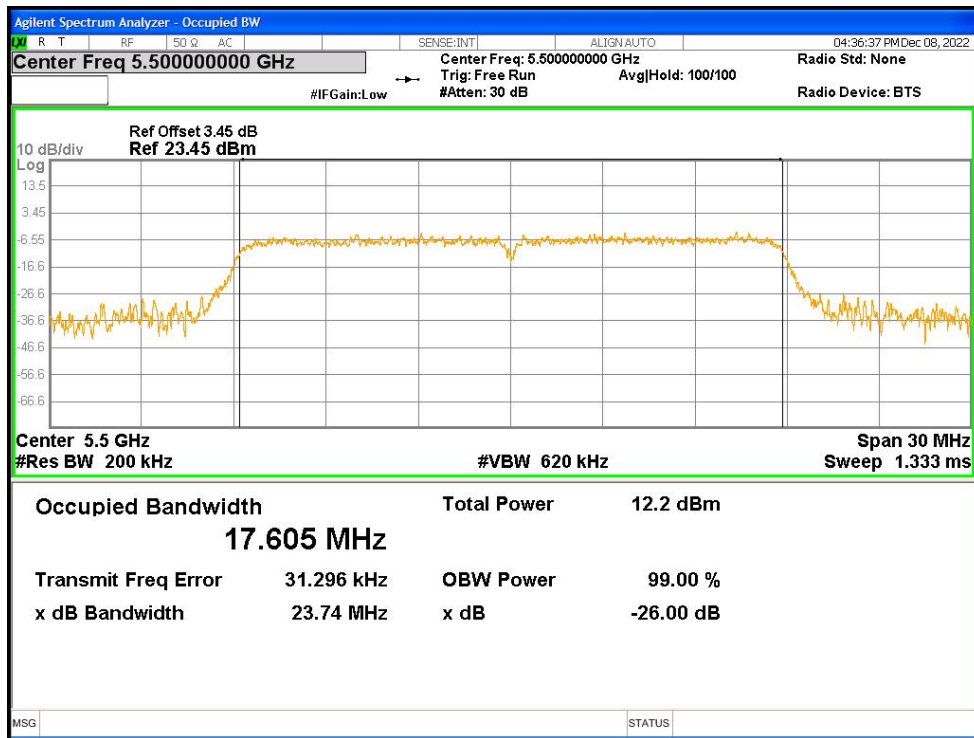 


OBW NVNT ac20 5500MHz Ant2

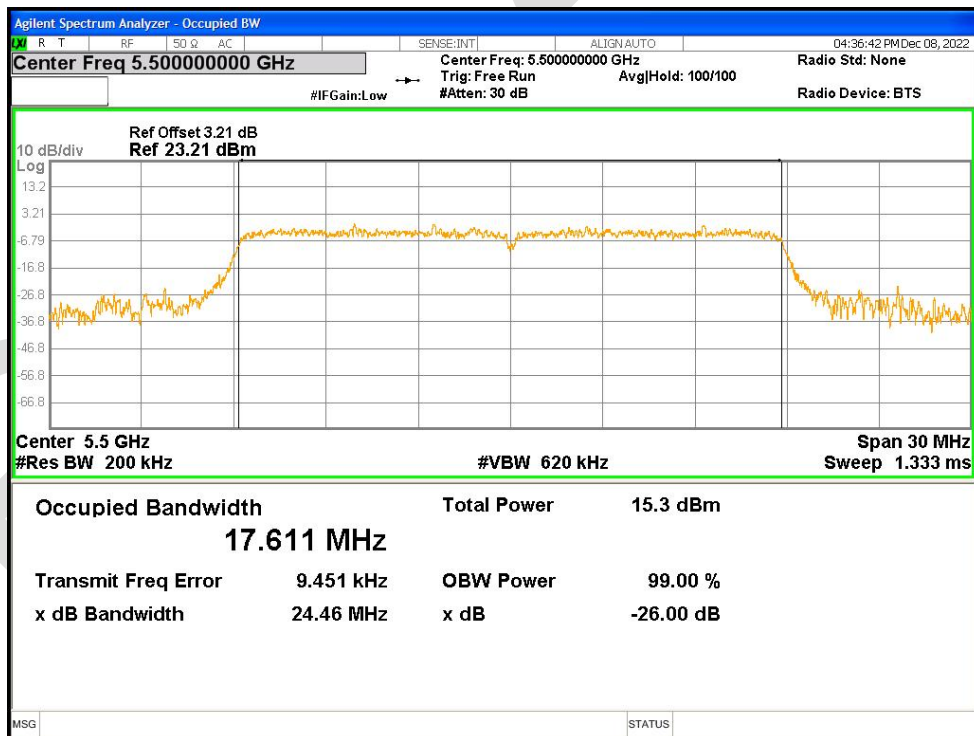 


OBW NVNT ac20 5600MHz Ant1

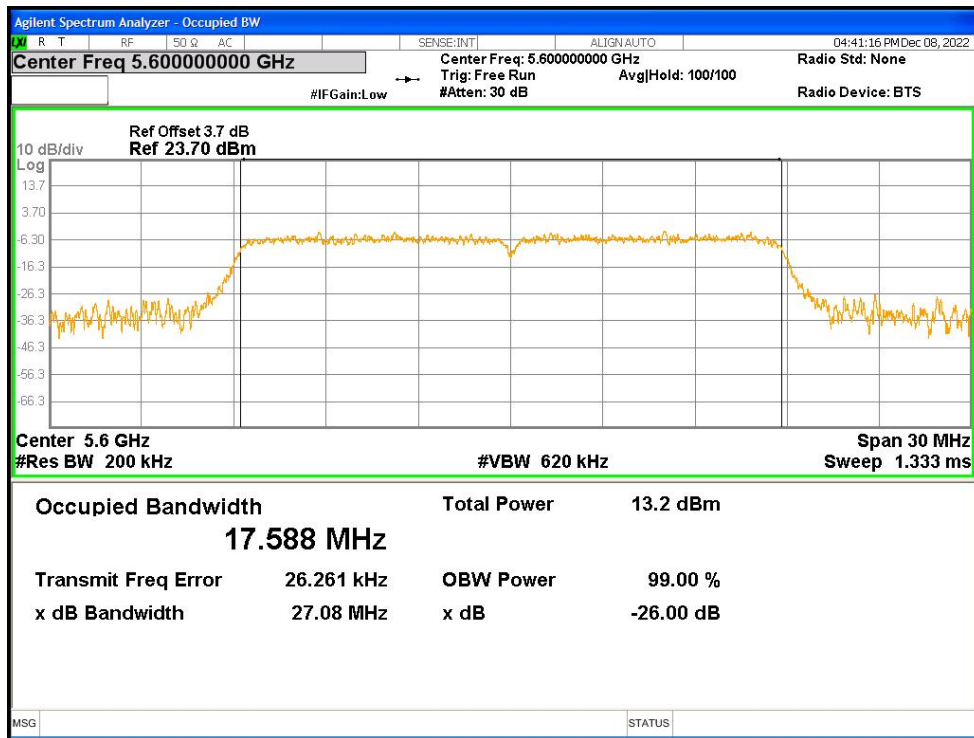 


OBW NVNT ac20 5600MHz Ant2

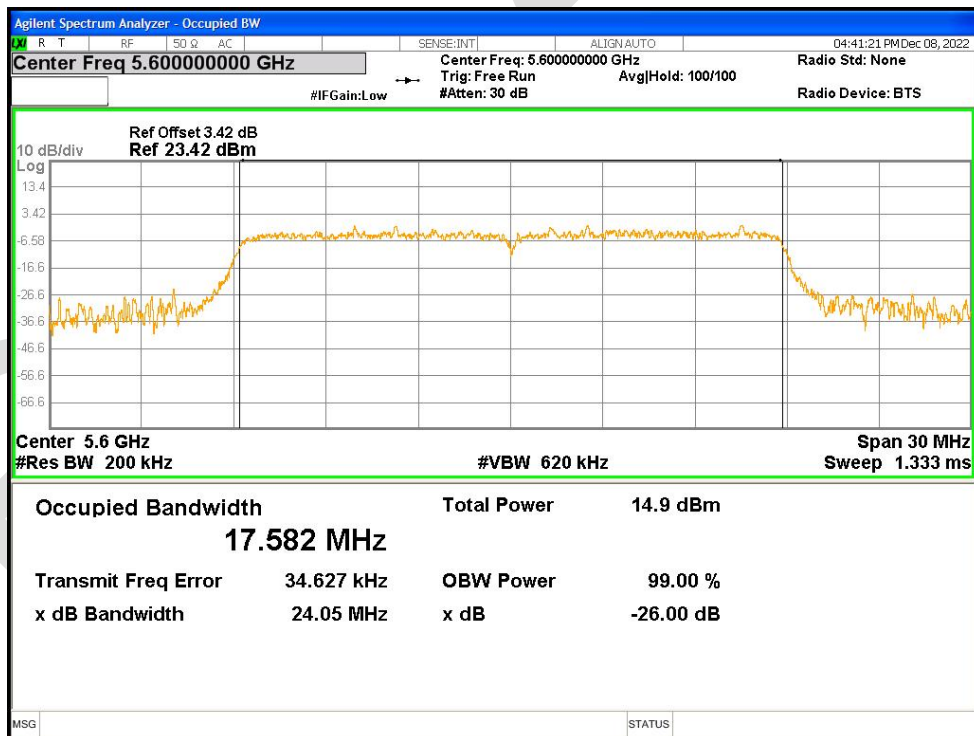 


OBW NVNT ac20 5700MHz Ant1

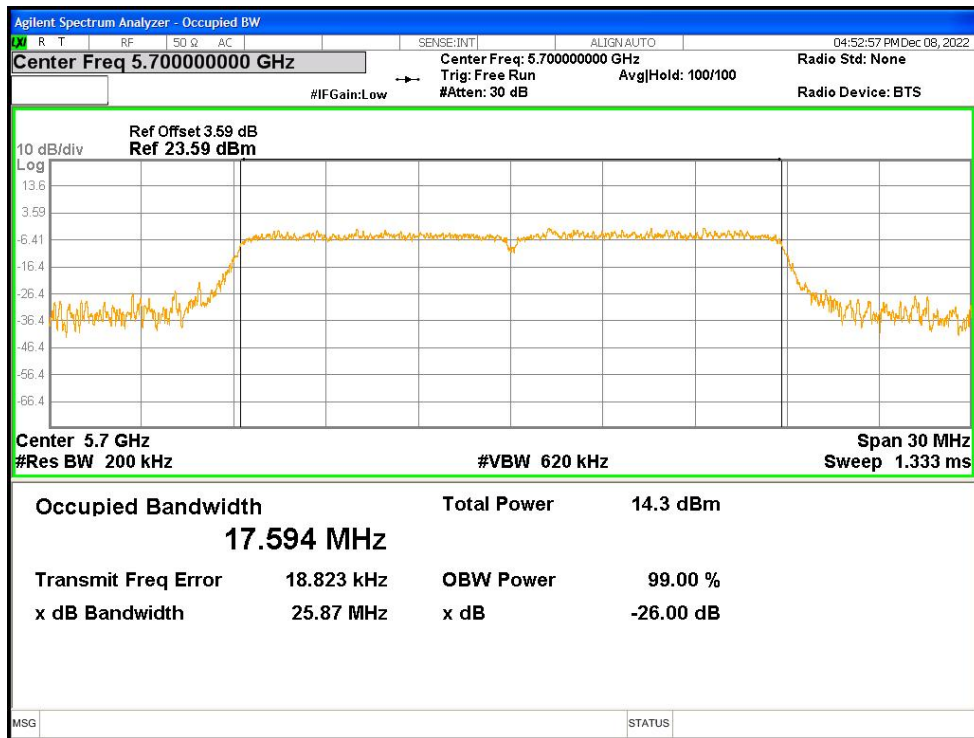 


OBW NVNT ac20 5700MHz Ant2

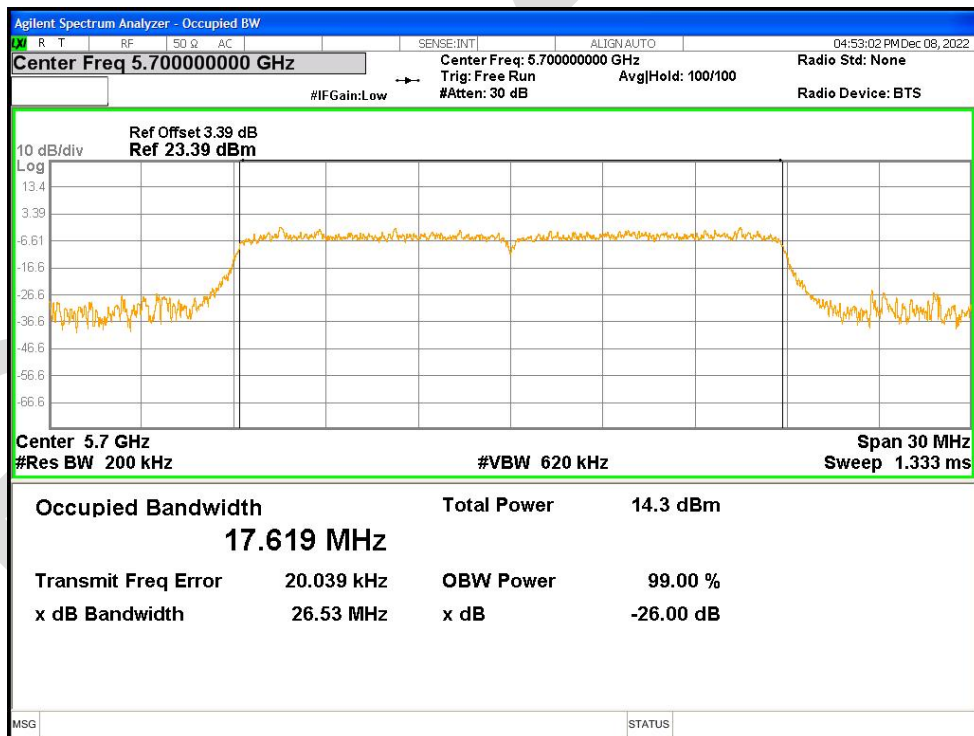 


OBW NVNT ac20 5745MHz Ant1

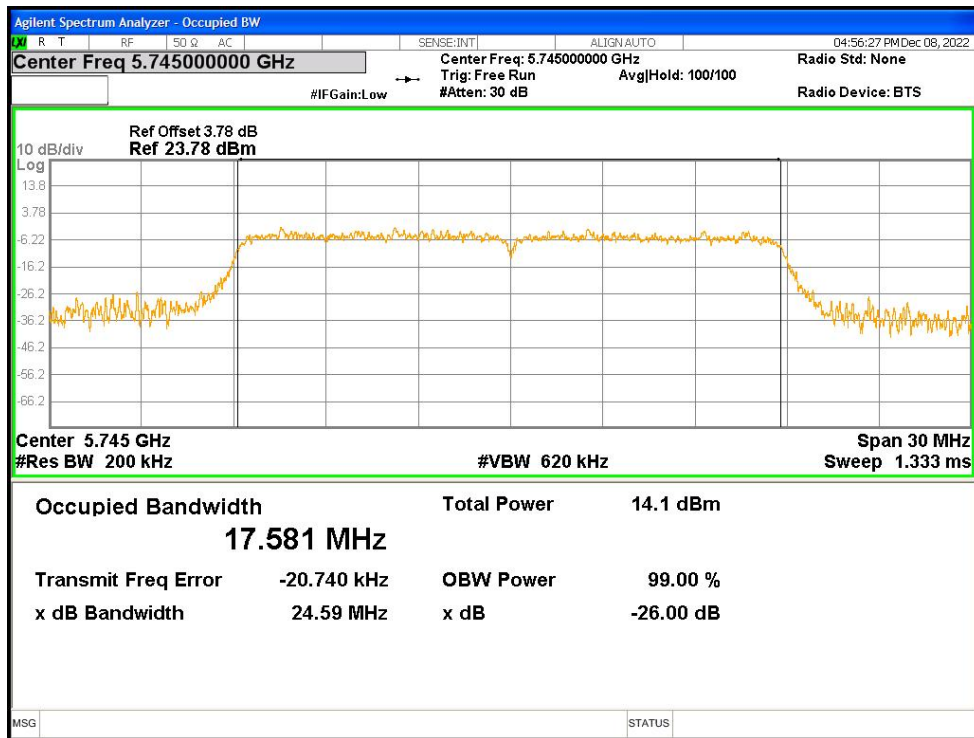 


OBW NVNT ac20 5745MHz Ant2

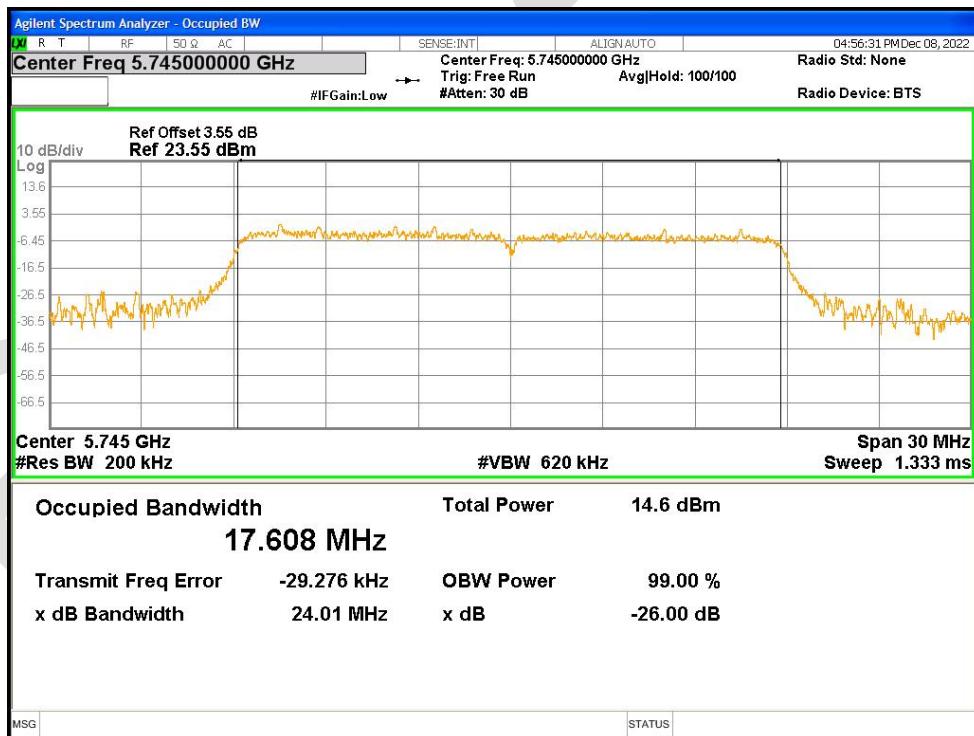 


OBW NVNT ac20 5785MHz Ant1

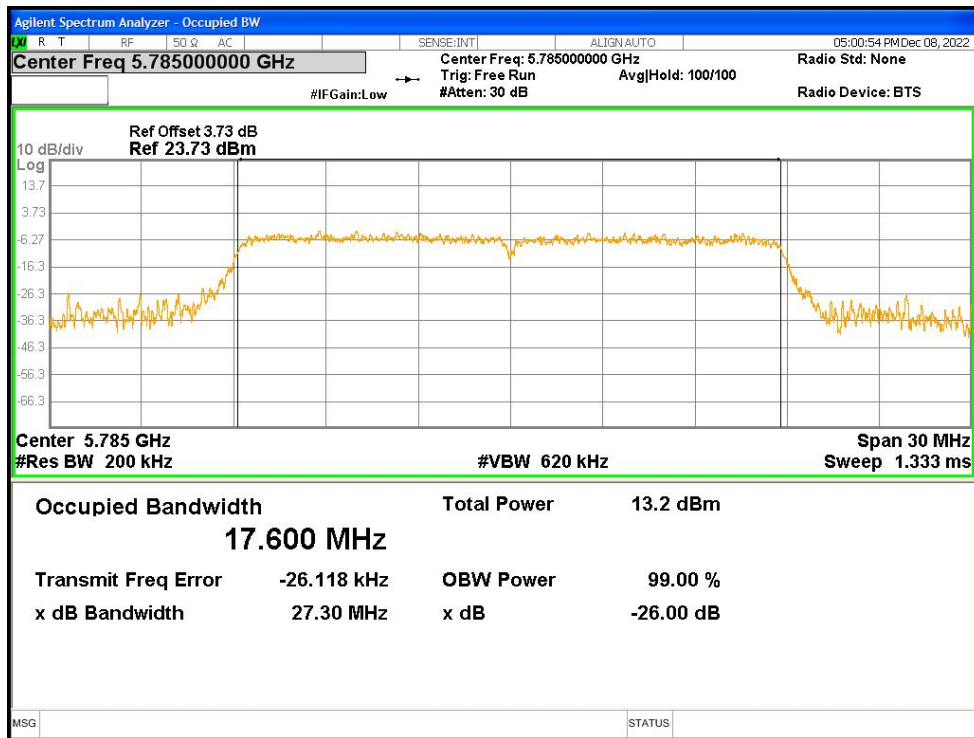 


OBW NVNT ac20 5785MHz Ant2

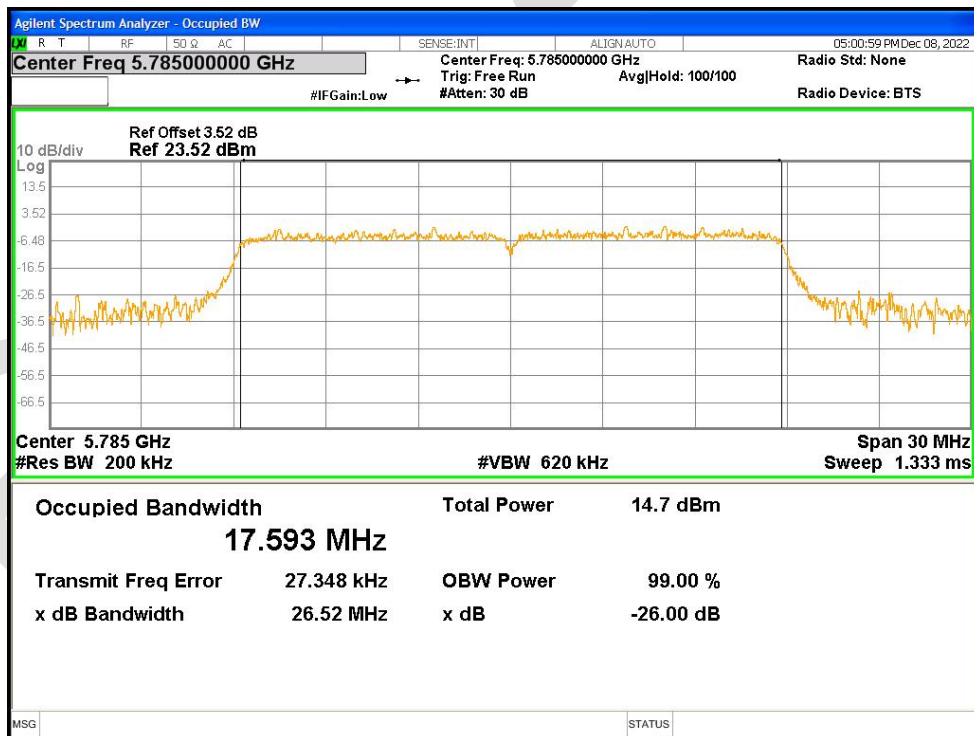 

OBW NVNT ac20 5825MHz Ant1

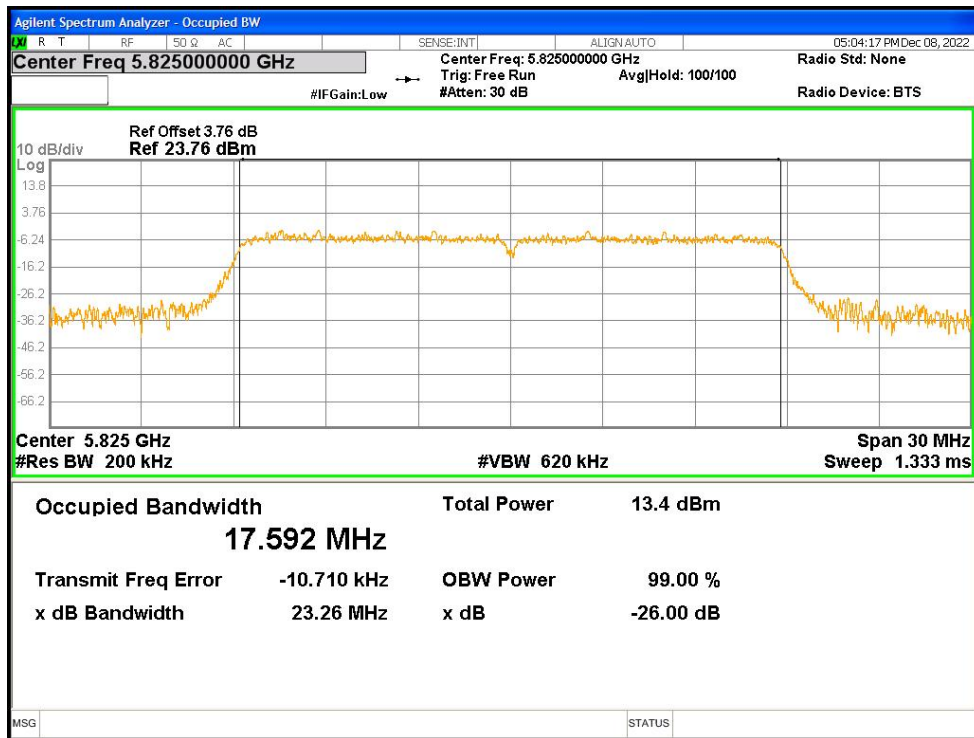 

OBW NVNT ac20 5825MHz Ant2

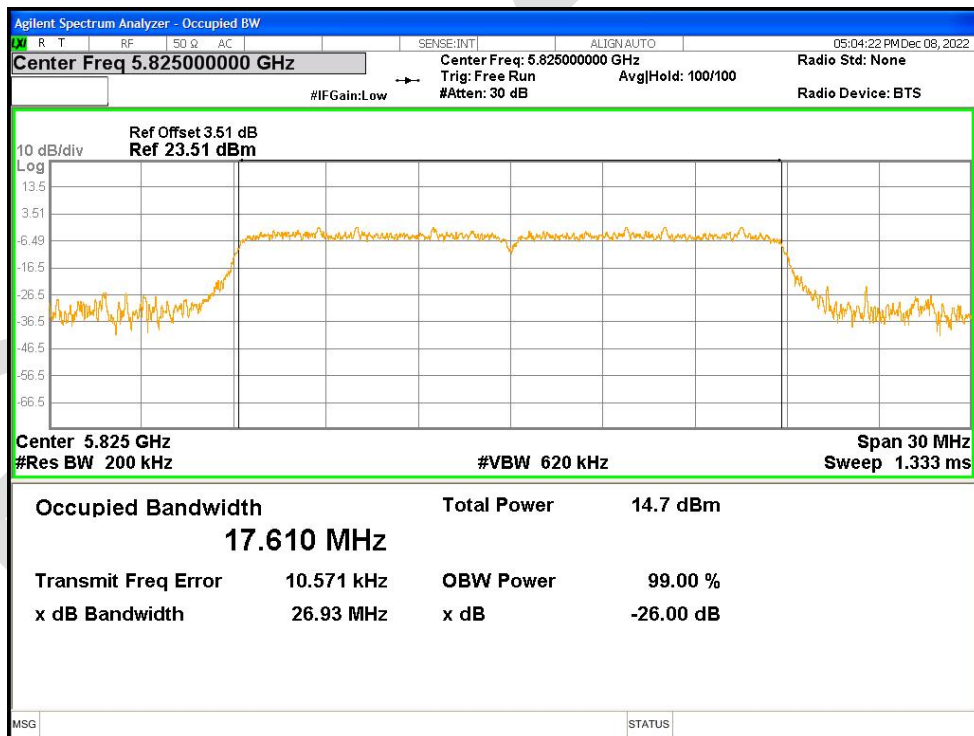 

OBW NVNT ac40 5190MHz Ant1