

63mm

86mm

WYZECP2-KSZP01 V1.0

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Tous changements ou modifications non expressément approuvés par la partie responsable de la conformité peut annuler l'autorité de l'utilisateur à opérer l'équipement.

Utilisez uniquement le chargeur fourni.
Only use the power supply provided.

NEED HELP?

Contact our support team:
<https://support.wyze.com>
Join our Community:
<https://wyze.com/community>



Scan the QR code to learn more

DANS LA BOÎTE

Panneau de la caméra Wyze × 1
Câble USB × 1
Adaptateur d'alimentation × 1
Guide de démarrage rapide × 1

1

2

3

AVANT

4

5

6

ARRIÈRE

7

DESSOUS

1

2

3

Verre
Lumière de statut
Capteur de lumière

4

5

6

Alimentation de courant
Fente de MicroSD (carte MicroSD pas incluse)
Bouton SETUP

7

Microphone

CONFIGURATION

1 Téléchargez l'application Wyze et créez un compte.

Download on the App Store

GET IT ON Google Play

2 Connectez la caméra à une prise de courant et attendez 15 secondes jusqu'à ce que la lumière rouge clignote.

3 Appuyez sur le bouton SETUP pendant 3 secondes jusqu'à ce que vous entendiez une voix.

4 Suivez l'application pour terminer la configuration.

INDICATIONS DE LUMIÈRE

Lumière fixe rouge
Le périphérique est sous tension et est en train de démarrer

Lumière clignotante rouge
Le périphérique est prêt à se connecter

Lumière clignotante rouge et bleue
Connection en cours

Lumière clignotante bleue
Le périphérique est connecté et fini sa configuration

Lumière fixe bleue
Le périphérique fonctionne correctement

INDICATION LUMINEUSE APRÈS INSTALLATION

Lumière rouge solide
Streaming direct ou enregistrement en cours

Lumière clignotante rouge
Sirène active

Lumière bleue solide
Le périphérique fonctionne correctement et aucune opération est en cours

VOUS AVEZ BESOIN D'AIDE?

Contactez nos magiciens du soutien:
<https://support.wyze.com>
Rejoignez notre communauté:
wyze.com/community



Scan the QR code to learn more

Wyze Cam Pan v2

QUICK START GUIDE

IN THE BOX

Wyze Cam Pan × 1
USB Cable × 1
Power Adapter × 1
Quick Start Guide × 1

1

2

3

FRONT

4

5

6

BACK

7

BOTTOM

1

2

3

Lens
Status Light
Light Sensor

4

5

6

Power Input
MicroSD Slot (SD card not included)
SETUP Button

7

Microphone

SETUP

1 Download the Wyze app and create an account.

Download on the App Store

GET IT ON Google Play

2 Connect the camera to a power outlet and wait for 15 seconds until the red status light flashes.

3 Press the SETUP button for 3 seconds until you hear a voice prompt.

4 Follow the Wyze app to finish setup.

LIGHT INDICATORS DURING INSTALLATION

Solid red light
The device is powered on and initializing

Flashing red light
The device is ready to connect

Flashing red and blue lights
Connection is in progress

Flashing blue light
The device is connected and finishing setup

Solid blue light
The device is working properly

LIGHT INDICATORS AFTER SETUP

Solid red light
Live stream is being viewed or a recording is in progress

Quickly flashing red light
Siren is in use

Solid blue light
The device is working properly and no operations are running

FCC WARNING:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RADIATION EXPOSURE STATEMENT:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning

the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED RSS WARNING:

This device complies with ISED licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.
L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire d'interférence, et (2) l'appareil doit accepter toute interférence radioélectrique subie, même si l'interférence est susceptible d'en compromettre le fonctionnement.

ISED RADIATION EXPOSURE STATEMENT:

This equipment complies with ISED RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. Cet appareil est conforme aux limites d'exposition de rayonnement RF ISED établies pour un environnement non contrôlé. Cet émetteur ne doit pas être co-implanté ou fonctionner en conjonction avec toute autre antenne ou transmetteur. Cet équipement doit être installé et utilisé avec une distance minimale de 20cm entre le radiateur & votre corps.