



R35

 
Intelligent Robot Vacuum Cleaner Aspirateur Robot Intelligent

Thank you for choosing PUPPYOO vacuum cleaner.

Please read the user guide carefully before use.

Merci d'avoir choisi l'aspirateur PUPPYOO.

Veuillez lire attentivement le mode d'emploi avant de l'utiliser.

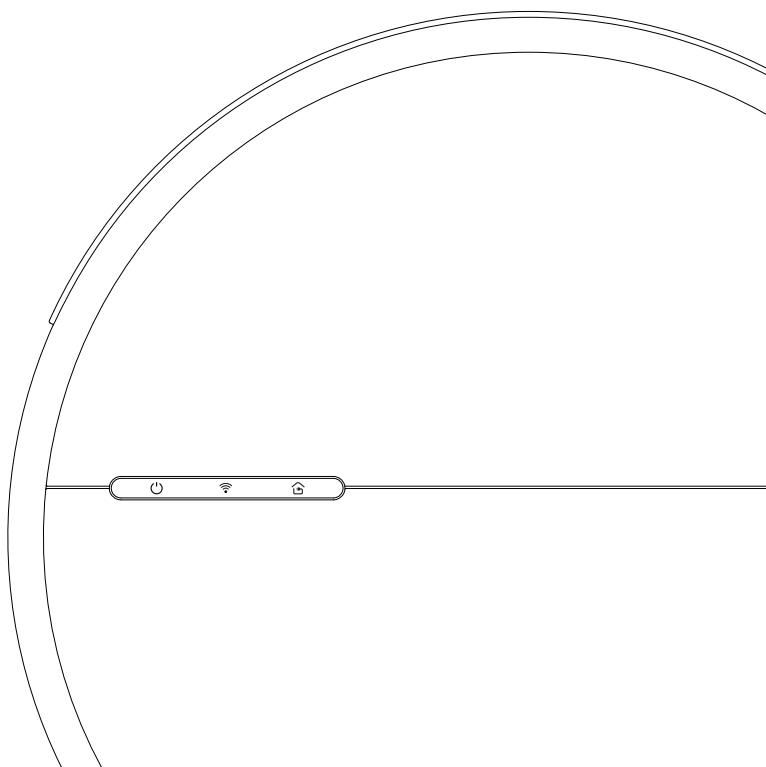

Thank you for you choosing R35 series robot vacuum cleaner, should you have any question on this product, please contact us by phone

Merci d'avoir choisi l'aspirateur robot série R35 si vous avez des questions sur ce produit, veuillez nous contacter par téléphone

 **86-10-5741 7619**

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE), Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

WARNING

To reduce the risk of fire, electric shock, or injury:

1. Do not use outdoors or on wet surfaces
2. Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or plants.
3. Use only as described in this manual. Use only manufacturer's recommended attachments
4. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
5. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
6. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
7. Do not handle charger, including charger plug, and charger terminals with wet hands
8. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
9. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
10. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
11. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
12. Do not use without dust container.
13. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
14. Risk Of Injury. Brush May Start Unexpectedly. Remove The Brush Before Cleaning or Servicing.
15. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
16. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
17. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
18. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
19. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

- 20. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
- 21. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- 22. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- 23. Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.
- 24. Place the cords from other appliances out of the area to be cleaned.
- 25. Do not operate the vacuum in a room where an infant or child is sleeping.
- 26. Do not operate the vacuum in an area where there are lit candles or fragile objects on the floor to be cleaned.
- 27. Do not operate the vacuum in a room that has lit candles on furniture that the vacuum may accidentally hit or bump into.
- 28. Do not allow children to sit on the vacuum.
- 29. Do not use the vacuum on a wet surface.

SAVE THESE INSTRUCTIONS

Household use only.

IMPORTANTES MESURES DE SÉCURITÉ

L'utilisation d'un appareil électrique demande certaines précautions:

LIRE TOUTES LES INSTRUCTIONS AVANT DE FAIRE FONCTIONNER (CET APPAREIL). Le non-respect des mises en garde et des instructions peut causer des chocs électriques, des incendies et/ou des blessures graves.

AVERTISSEMENT.

Pour réduire les risques d'incendie, de choc électrique ou de blessure:

1. Ne pas exposer à la pluie, Ranger à l'intérieur.
2. Ne pas permettre aux enfants de jouer avec l'appareil. Une attention particulière est nécessaire lorsque l'appareil est utilisé par des enfants ou à proximité de ces derniers.
3. N'utiliser que conformément à cette notice avec les accessoires recommandés par le fabricant.
4. Ne pas utiliser si le cordon ou la fiche est endommagé. Retourner l'appareil à un atelier de réparation s'il ne fonctionne pas bien, s'il est tombé ou s'il a été endommagé, oublié à l'extérieur ou immergé.
5. Ne pas tirer, soulever ni traîner l'appareil par le cordon. Ne pas utiliser le cordon comme une poignée, le coincer dans l'embrasure d'une porte ou l'appuyer contre des arêtes vives ou des coins. Ne pas faire rouler l'appareil sur le cordon. Garder le cordon à l'écart des surfaces chaudes.
6. Ne pas débrancher en tirant sur le cordon. Tirer plutôt la fiche.
7. Ne pas manipuler le chargeur, y compris la prise du chargeur, et les bornes du chargeur avec les mains mouillées.
8. N'insérer aucun objet dans les ouvertures. Ne pas utiliser l'appareil lorsqu'une ouverture est bloquée. S'assurer que de la poussière, de la peluche, des cheveux ou d'autres matières ne réduisent pas le débit d'air.
9. Maintenir les cheveux, les vêtements amples, les doigts et toutes les parties du corps à l'écart des ouvertures et des pièces mobiles.
10. Ne pas aspirer des liquides inflammables ou combustibles, comme de l'essence, et ne pas faire fonctionner dans des endroits où peuvent se trouver de tels liquides.
11. Ne pas aspirer de matières en combustion ou qui dégagent de la fumée, comme des cigarettes, des allumettes ou des cendres chaudes.
12. Ne pas utiliser l'appareil si le sac à poussière ou le filtre n'est pas en place.
13. Éviter une mise en marche accidentelle. S'assurer que l'interrupteur est à la position arrêt avant de raccorder la batterie, de lever ou de déplacer l'appareil. Transporter l'appareil en gardant un doigt sur l'interrupteur, ou mettre sous tension un appareil dont l'interrupteur est à la position marche peut causer un accident.
14. Risqué de blessure. La brosse peut commencer de manière inattendue. Enlevez la brosse avant le nettoyage ou l'entretien.
15. Recharger uniquement avec le chargeur prescrit par le fabricant. Un chargeur convenant à un type de batterie peut présenter un risque d'incendie lorsqu'il est utilisé avec une autre batterie.
16. Utiliser uniquement les batteries recommandées pour l'appareil. L'utilisation d'autres types de batteries peut présenter un risque de blessure ou d'incendie.

17. Lorsque l'appareil n'est pas utilisé, tenir la batterie loin d'objets métalliques comme des trombones, des pièces de monnaie, des clés, des clous, des vis ou autres petits objets qui pourraient établir une liaison entre les bornes. Un court-circuit des bornes des batteries peut causer des brûlures ou un incendie.

18. En condition d'usage abusif, du liquide peut s'échapper de la batterie ; éviter tout contact avec ce liquide. En cas de contact accidentel, rincer abondamment avec de l'eau. En cas de contact avec les yeux, consulter également un médecin. Le liquide projeté peut causer des irritations ou des brûlures.

19. Ne pas utiliser une batterie ou un appareil endommagé ou qui a été modifié. Des batteries endommagées ou modifiées peuvent avoir un comportement imprévisible pouvant causer un incendie, une explosion ou un risque de blessure.

20. Ne pas exposer une batterie ou un appareil à la flamme ou à des températures excessives. L'exposition à une flamme ou à des températures supérieures à 130 °C peut causer une explosion.

21. Respecter toutes les instructions de chargement et ne pas charger la batterie ou l'appareil à des températures qui ne sont pas incluses dans la gamme de températures indiquées dans la notice d'instructions. Un chargement mal effectué.

22. Confier les réparations à une personne qualifiée qui utilisera uniquement des pièces de remplacement identiques. Cette façon de faire garantira la sécurité du produit.

23. Ne pas modifier ni tenter de réparer l'appareil ou la batterie sauf comme il est indiqué dans les instructions d'utilisation et d'entretien.

24. Éloigner les cordons d'autres appareils de la zone à nettoyer.

25. Ne pas utiliser l'aspirateur dans une pièce où un nourrisson ou un enfant dort.

26. Ne pas utiliser l'aspirateur dans un endroit où il ya des bougies allumées ou des objets fragiles sur le plancher à nettoyer.

27. Ne pas utiliser l'aspirateur dans une pièce où il ya des bougies allumées sur les meubles que l'aspirateur peut heurter ou se cogner accidentellement.

28. Ne pas laisser les enfants s'asseoir sur l'aspirateur.

29. Ne pas utiliser l'aspirateur sur une surface mouillée.

CONSERVER CES INSTRUCTIONS

Usage Domestique seulement

FCC/IC COMPLIANCE / TM / WARRANTY

To satisfy FCC&IC RF exposure requirements, a separation distance of 20cm or more should be maintained between the antenna of this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended.

Les antennes installées doivent être situées de façon à ce que la population ne puisse y être exposée à une distance de moins de 20 cm. Installer les antennes de façon à ce que le personnel ne puisse approcher à 20 cm ou moins de la position centrale de l'antenne.

This device complies with Part 15 of the FCC Rules / Industrie Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Contents

1. Safety Instruction	02
1.1 Notice for use	02
1.2 Matters need attention	02
1.3 Battery	03
1.4 Usage range	03
2. Product	04
2.1 Main body and components	04
2.2 Parts name	05
3. Product assembly	06
3.1 Adapter and charging stand combination	06
3.2 Installing the charging stand	06
3.3 Installing a dust box or water tank	07
3.4 Using the wet drag function	08
4. Using product	09
4.1 Buttons and indicators	09
4.2 Main body use	10
4.3 APP Operating mode	10
5. APP operation guide	11
5.1 Register and login	12
5.2 Add device	13
5.3 Operation page	15
5.4 More function	16
6. Product maintenance	17
6.1 Battery storage	17
6.2 Clean charging electrode slice	17
6.3 Clean dust container	17
6.4 Clean main brush	18
6.5 Clean side brush	19
6.6 Clean wheels	19
6.7 Clean sensors	19
7. Trouble shooting	20
8. Parameters	21

Contenu

1. Instruction de sécurité	23
1.1 Avis d'utilisation	23
1.2 Les questions ont besoin d'attention	23
1.3 Batterie	24
1.4 Plage d'utilisation	24
2. Produit	25
2.1 Corps principal et composants	25
2.2 Nom des pièces	26
3. Assemblage du produit	27
3.1 Combinaison de l'adaptateur et du support de charge	27
3.2 Installation du support de charge	27
3.3 Installation d'une boîte à poussière ou d'un réservoir d'eau	28
3.4 Utilisation de la fonction de traînée humide	29
4. Utilisation du produit	30
4.1 Boutons et indicateurs	30
4.2 Utilisation du corps principal	31
4.3 Mode de fonctionnement APP	31
5. Guide d'utilisation APP	32
5.1 S'inscrire et se connecter	33
5.2 Ajouter un appareil	34
5.3 Page d'opération	36
5.4 Plus de fonction	37
6. Maintenance du produit	38
6.1 Stockage de la batterie	38
6.2 Nettoyer la tranche d'électrode de charge	38
6.3 Nettoyer le bac à poussière	38
6.4 Nettoyer la brosse principale	39
6.5 Nettoyer la brosse latérale	40
6.6 Nettoyer les roues	40
6.7 Nettoyer les capteurs	40
7. Dépannage	41
8. Paramètres	41

WARNING



Do not use to absorb sharp objects, such as glass sheets, nails, etc., to avoid damage to the product.



Do not use in a wet or flammable, explosive or corrosive environment.



Unplug the power cord for a long time without using the charging stand.



When the product is working, removing the charging stand will cause the machine to fail to recharge normally.



This product can only be used indoors.



Please remove the damaged material before use.



Prevent damage to the machine by inhaling water, oil or other liquids.



Disassemble the scattered wires on the ground before use to prevent the machine from working.



 
The charging stand is placed on a flat, wall-mounted area to prevent product functionality from being affected.

Notice: Children safety



1) This appliance should not be operated by children under 8 years old or people who is physically or mentally disabled or lack of relevant experience and knowledge, unless under the guidance and supervision of people who could be responsible for the user's safety.

2) Prohibit children from playing bags of the appliance, or it may cause suffocation.




1. Safety Instruction

1.1 Notice for use


Before use, please read the safety precautions below carefully.

- * Please read all the instructions before using this appliance.
- * In order to ensure proper operation, please keep this manual appropriately.
- * If you want to give this appliance to a third party, please include this manual along with the appliance.
- * Any operation that does not comply with this manual may result in serious personal injury or damage to the appliance itself.

 
1.2 Matters need attention

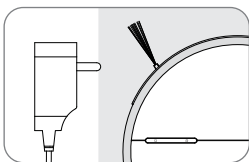

 
- ⚠ This appliance can only work with the adaptor, battery and charge station together with the parcel which committed to this appliance, otherwise it may cause damage to the machine or electric shock or fire.

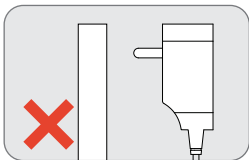

 - ⚠ Please do not use this appliance if the machine or accessories get broken. Please contact with our after-sales service when you meet problem.

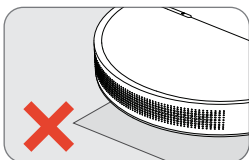

 - ⚠ Please remove the plug from the socket before maintenance.
- ⚠ Please do not touch the plug or the appliance with wet hands, or it may lead to electric shock.
- ⚠ Please contact with our customer service if the cable got broken to avoid danger.

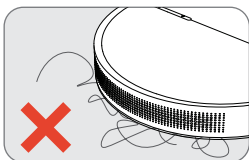


- ⚠ Do not use this appliance in the absence of a fence to avoid accidental fall of the robot.
- ⚠ Please don't replace non-original battery by yourself.
- ⚠ Do not get clothes or any part of your body (hair, finger, etc.) involved in the brush or wheel of the appliance, or it may cause danger.
- ⚠ Don't put the appliances close to fire, inflammable, explosive or corrosive materials.
- ⚠ Please contact with our customer service to get e-edition manual if your manual got lost.

1.3 Battery


- 1) This product is limited to use the battery equipped by the manufacture.
- 2) Please remove the battery before dispose the appliance.
- 3) Please contact with our after sale service if you want to replace the battery. Do not use any other charger to recharge the battery pack.
- 4) If the battery got leakage, do not let the liquid get into the skin or clothes, clean it with dry cloth immediately, and put it back to recycle bin, do not throw it away.
- 5) Please dispose the waste battery of the appliance properly. Batteries contain hazardous substances that are hazardous to the environment. Please follow your local environmental regulations and place it on the required recycling sites.

1.4 Usable range

 
Please use the robot in the above ground environment, otherwise it will not be able to achieve the effect and may even damage the robot.

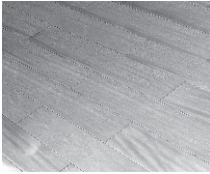

Wood Floor

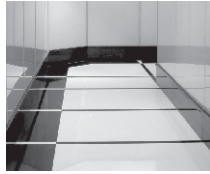 


Tile

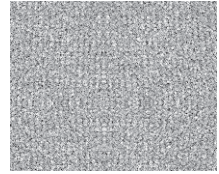 


Short Hair Carpet

2. Product

 
2.1 Main body and components

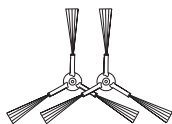


Side brush x2

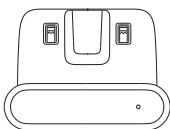 


Charge Station x1

 


Adaptor x1

 


Cleaning Brushx1

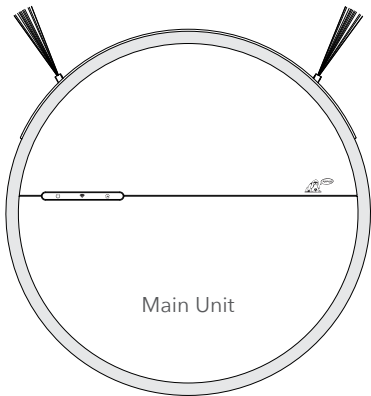 


Main Unit

 

screw driver x1

 

Dust cup x1

 


Mop x1
Pallet x1




Warm tip

Dust cup, filter screen net, and battery are already installed in the main body.

  
2.2 Parts name

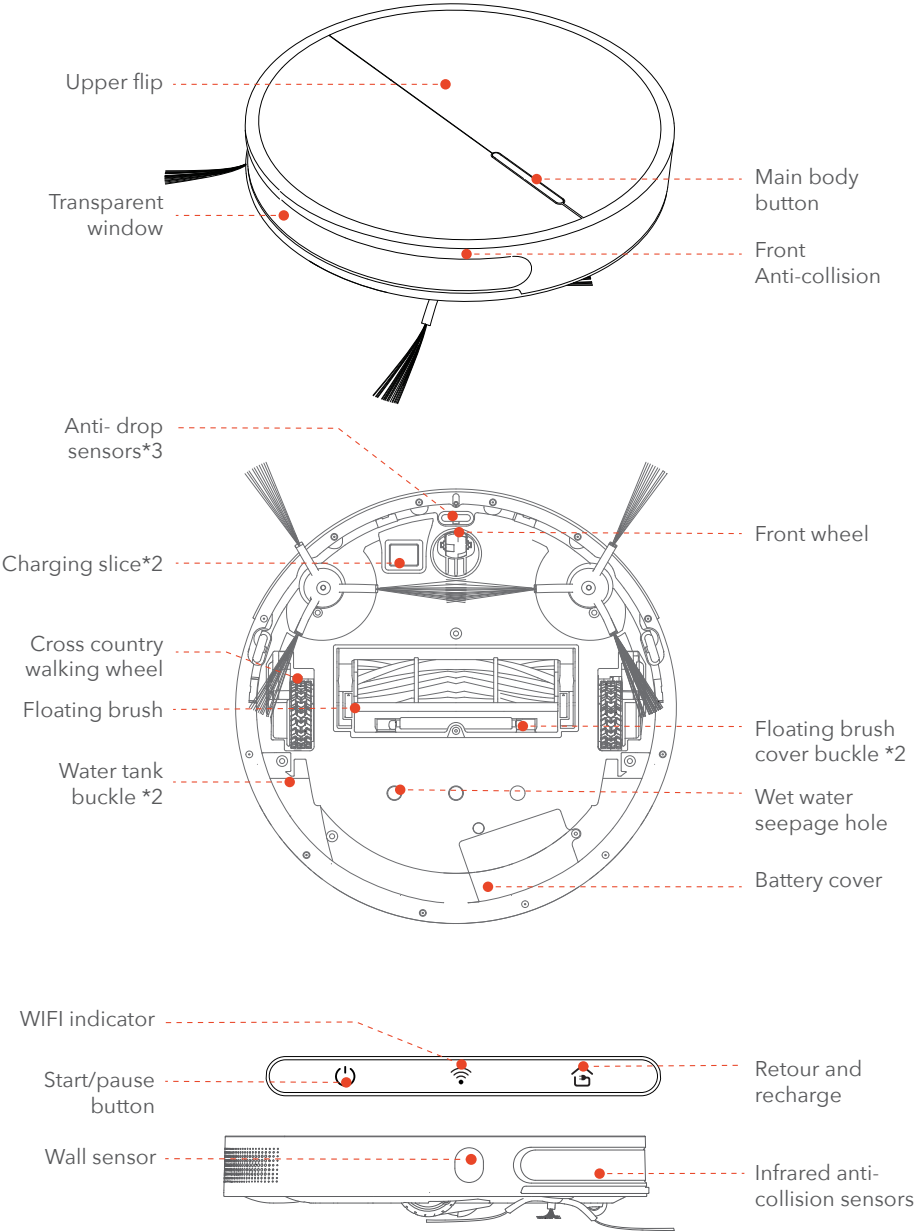

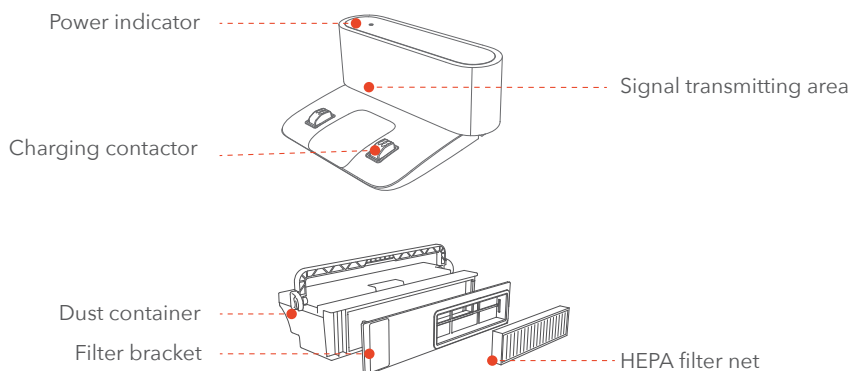

3 Product installation

 
3.1 Adapter and charging stand

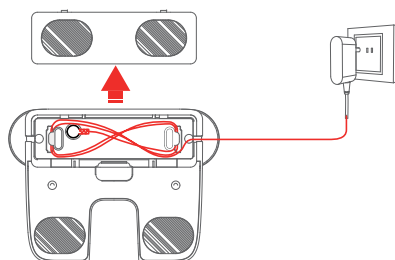

1. Open the bottom plate of the charging stand.
2. Insert the adapter cylindrical plug into the DC connector inside the charging stand.
3. Depending on the distance, the excess line "8" is wrapped around the bobbin as shown.
4. Cover the gusset, place the charging stand against the wall and place the adapter into the power outlet.

3.2 Installing the charging stand

 
1. Place the cradle on a flat surface that is perpendicular to the wall. 1.5 meters ahead. There must be no obstacles within 0.5 meters of the left and right. Press firmly on the cradle to make it more securely attached to the floor.

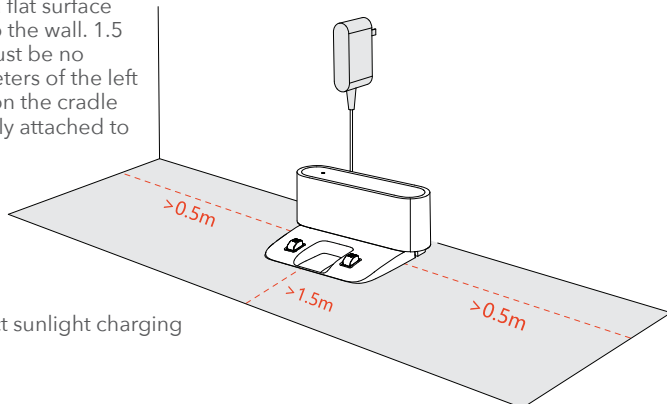

Please avoid direct sunlight charging stand

⚠ 2. Before use, be sure to remove the protective strip on the device's bumper to ensure the normal use of the device.

 3. Power on: Push the On/Key to "On" and press the Start/Pause button.

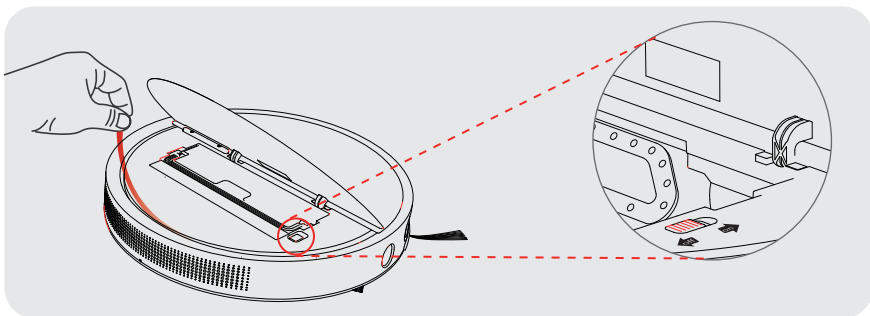

Wall sensor



 
WIFI indicator




Retour and recharge

4. Use
Method 1: Press the button on the top cover of the main unit to start, pause and recharge.
Method 2: Use the App to operate. For instructions, see the "APP Operation Guide" on the following page.


3.3 Install dust container or water tank

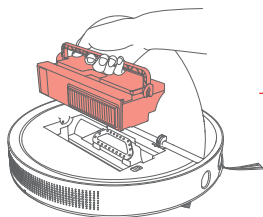

 1. First insert the handles into the dust box.

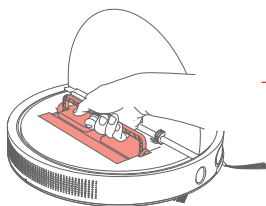

 2. Put in a dust box or water tank.

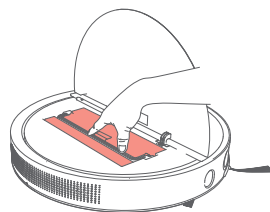


3. Flatten the handle to ensure that the dust box is stuck at both ends.

3.4 Use the wet drag function




Note

 
Do not use the mop function on the carpet

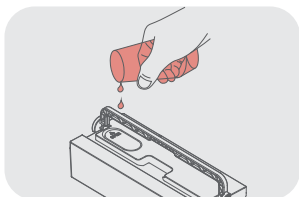

 
1. First fill the water tank to 90% and close the water inlet. (Note: If the metal contact on one side of the water tank is wet, please dry it and put it in the dust box.)

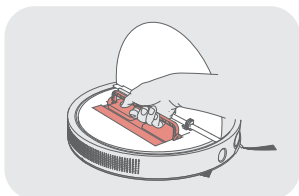

 
2. Put the water tank after the water injection into the dust box, and ensure that the handles are flattened at both ends.

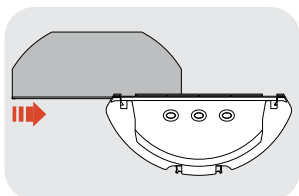

 3. Insert one end of the mop straight from the entrance of the carriage and flatten the mop.

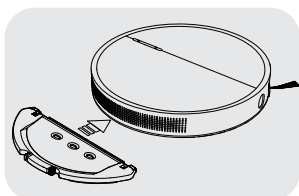

 4. Push the pallet with the mop pasted from the rear of the robot to the rear of the machine. When you hear the click, the pallet is installed.

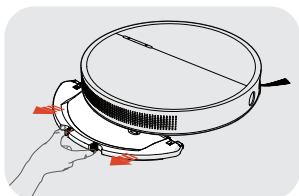

5. When removing the carriage, squeeze the two buckles at the end of the carriage to remove it smoothly.

- ⚠ 1) After installing the water tank and mop, the sweeping machine will automatically switch to wet drag mode. If you want to switch to the vacuum mode, you need to take out the water tank, remove the carriage, and then put it into the dust box.
- ⚠ 2) After the wet drag, please empty the water tank and wash and dry the mop.

4. Using product

4.1 Buttons and indicators



 Start/pause button


 WIFI indicator

 Retour and recharge

Button	Button description
Retour and recharge button 	1. When the machine is in standby state, the power light will display "blue", press the recharge button, and the machine enters the recharge mode. 2. When the machine is in standby state, the power light will display "blue". Press and hold the recharge button to remind the user to enter the WiFi distribution mode. The WIFI indicator will flash. After the distribution is successful, the WIFI indicator will be on. 3. When the machine is low, the machine's recharge button light is red, and when the machine is charging on the cradle, the machine's recharge lamp flashes blue.
 Start/pause button	When the machine is in standby state, the power light shows "blue", press the power button, and the machine enters the automatic cleaning mode.
 WIFI Indicators	When the machine enters the distribution network, the indicator light flashes. After the distribution network is successful, the indicator light is always on.


4.2 Use of main body

 1. Side brush assembly

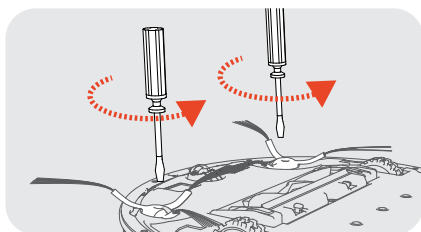


Install the side brush and use a screwdriver to load the side brush into the sweep. Screw the corresponding position on the bottom of the grounder.

 2. Turn on

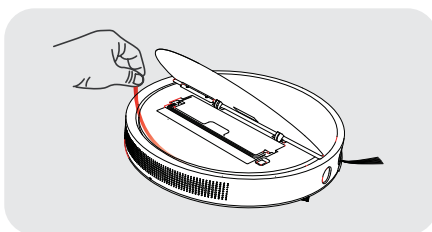

- 1) Before use, be sure to remove the protective strip on the device's bumper to ensure that the device is in normal use.
- 2) Turn on the power and push the on/off button located in the main unit to "ON".
- 3) After the switch is turned on, there will be a voice prompt. After the device is turned on, you can operate it.

 3. Clean and stop

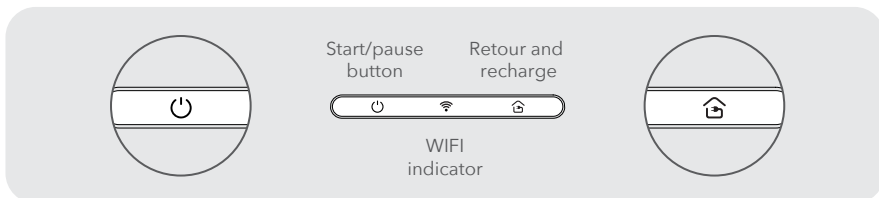

1) Clean

 
Press on/off button after it turns on, and it will begin to clean.

2) Stop

When the sweeper is cleaning or retour and recharge, press the "on/off key" and the main body will stop.

- 1) Automatic retour and recharge, when the cleaning is completed or the battery is low, it will search charge station and recharge automatically.
- 2) Manual retour and recharge, when the sweeper is in the pause state, press the back charge button on the top cover of the machine or the back charge button in the APP, the sweeper will actively look for the charging stand to charge.

5. Turn off

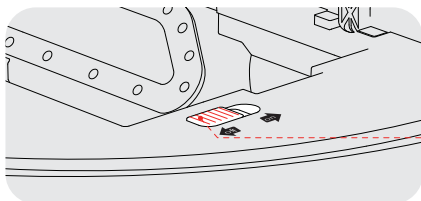

When not in use for a long time, you can push the key to push off, and then sweep the machine.

On/off button

4.3 APP mode of operation

There are more modes of operation on the APP side. See the APP User Guide in the manual for details.

5. APP operation guide

Attention

The document will update because of APP update or other reasons, and can only be used as a guidance, unless otherwise stated. Description, information and suggestions don't constitute any guarantee.

Summary

The Puppy App is a smart home app based on Android and iOS. This document mainly guides the first-time user to operate the software, explaining the operation steps and precautions of the software.

Use environment

Mobile phone download APPios 10.0 or above or Android 8.0 or above mobile phone, search for APP in the APP Store or Google Play to download and install. Or scan the QR code to download:

APP file name: PUPPYOO R3X

After downloading, follow the normal procedure to install the app to find the corresponding indicator icon in the application.

 


PUPPYOO R3X


Use environment

After the mobile phone opens the "PUPPYOO R3X" app, after registering and logging in, follow the APP prompts to set up the sweeper and network settings.


5.1 Register and login

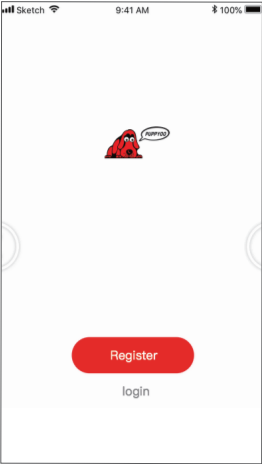

 1. The above picture shows the interface after the APP is opened. On this interface, you can enter the registered phone number and password to log in. You can also click "Register" below to register.

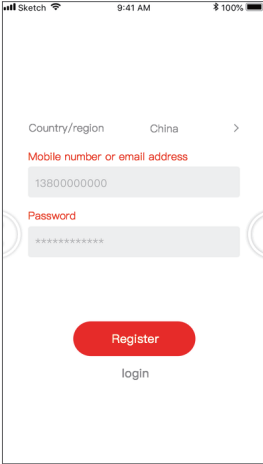


 2. Enter the mobile number in the "Registration" screen shown above and set a login password. Click "Register" to send a verification SMS to this mobile number.

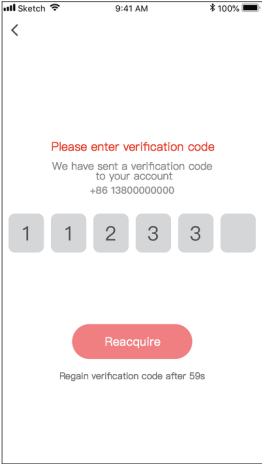


3. You can complete the registration by entering the six-digit verification code received by the SMS.

 5.2 Add device

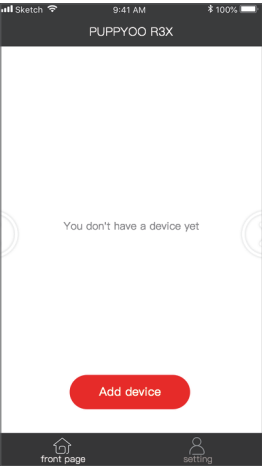


There are three ways to add a device:

 - 1) Scanning device QR code image
- 2) Identify from photos
- 3) Manual input

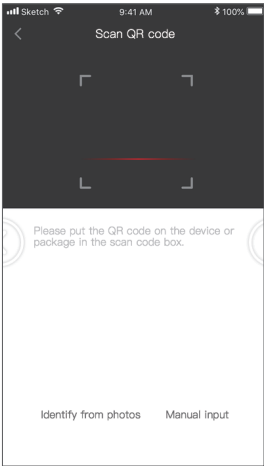

 
1. Click on "Add Device" to scan this QR code or manually enter the device number: r-35- for device addition.

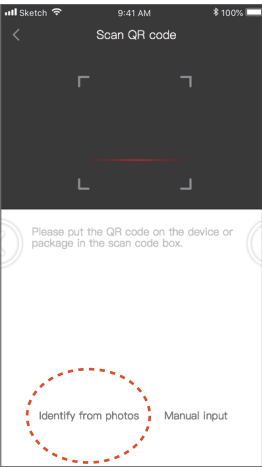


2. Click "Identify from photo", the device QR code is stored in the mobile phone album to identify the success.




 
3. When "Manual Input", enter the device number at the top of the screen: r-35- Click "Next".

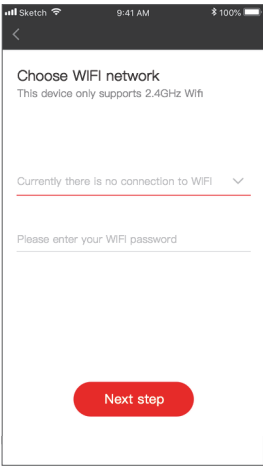



 
4. Connect to home WiFi, enter the WiFi name and password, and click Next.

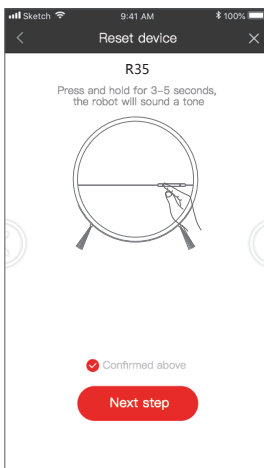

  5. Open the cover of the machine, push the power button to "ON", the start button "⏻" lights up, Enter the standby state. After long press the refill button "🔄", the prompt sounds, the wifi "📶" light flashes, indicating that the network mode is entered. At this time, release the button and follow the APP prompt to proceed to the next step.

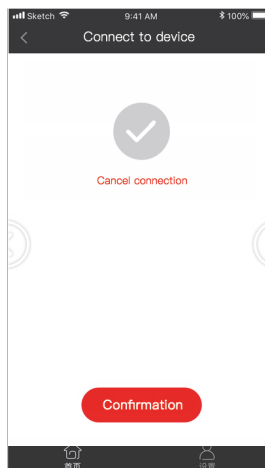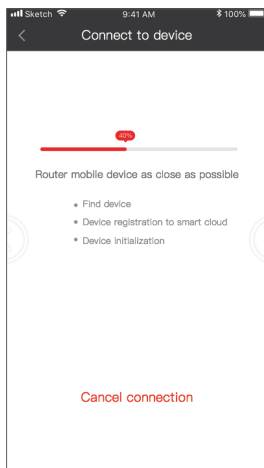


   6. After waiting for the robot to be bound and added successfully, click the robot icon to enter the control page.

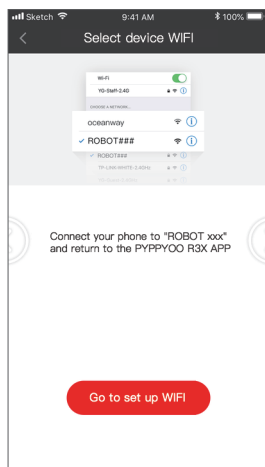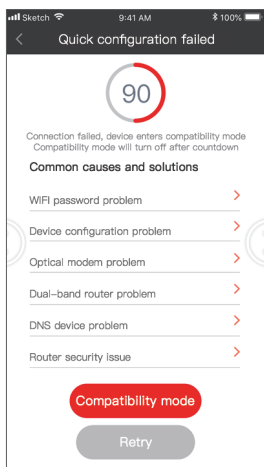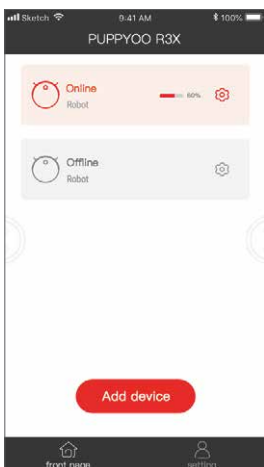

7. Compatibility mode. When the fast configuration fails, the device enters the compatibility mode and completes the binding operation as shown in the figure.

 
5.3 Operation page

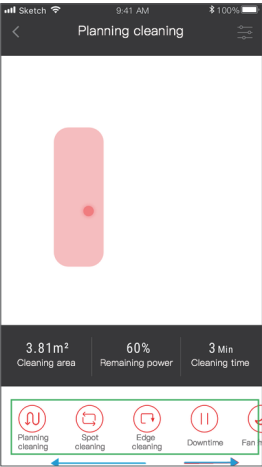


- On the main control page, there are three cleaning modes: "Planning Cleaning", "Spot Cleaning" and "Edge Cleaning" buttons.
- To switch the cleaning mode, first stop the current cleaning mode, and then click other cleaning modes.

Spot cleaning:
After using the remote control function of the APP to move the robot to the target position, select "fixed cleaning", and the robot will focus on the point and perform cleaning in the range of 1.5*1.5m.


 
Note: The lower control bar can be swiped left and right for other item selection.

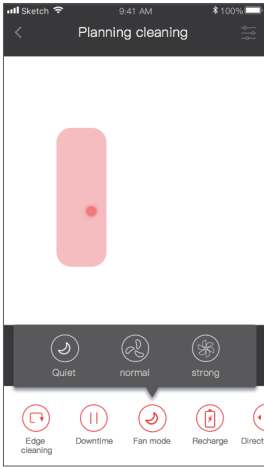

 
Fan mode:
Select "fan mode", 3 position suction can be adjusted.

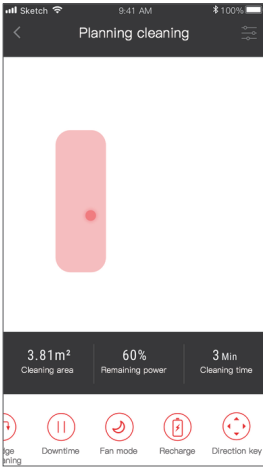

  
Direction key:
Select "Direction key" to enter the virtual remote control option, long press the direction key to control the direction of the robot.

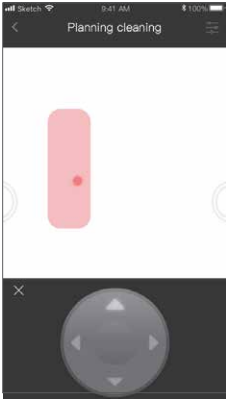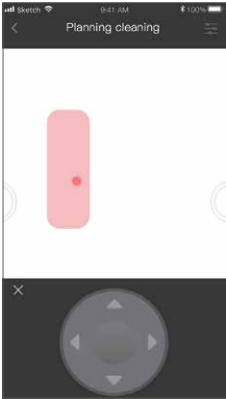


 
5.4 More function

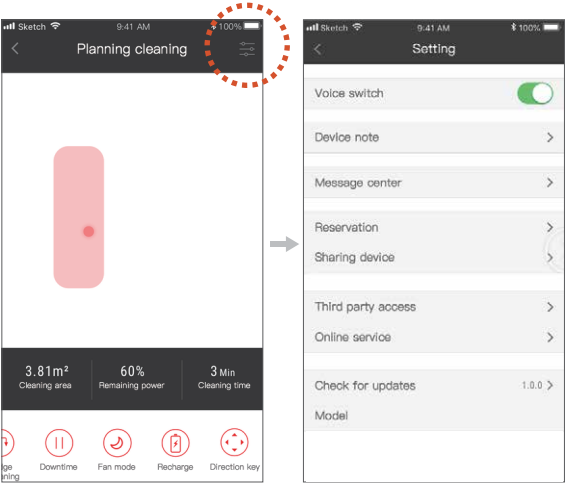

 Click the “” icon in the upper right corner of the operation page to enter the setting page, and click to enter the corresponding function.

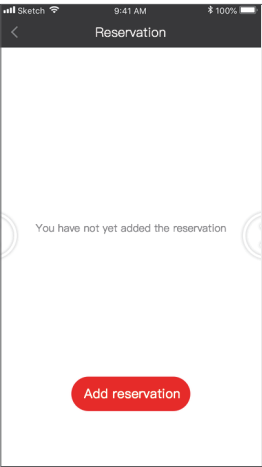

  
1. Reservation.
Select "Reservation" to set and save the scheduled cleaning time.

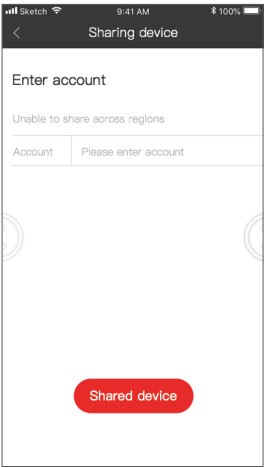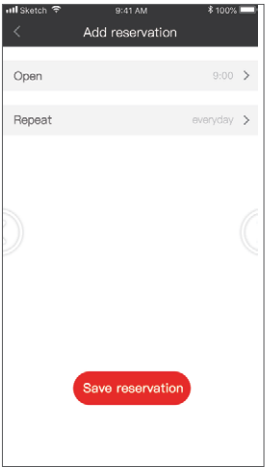

2. Sharing devices: Select "Share Device" to allow multiple users to jointly manage a robot. (Shared users need to download the app first and complete the registration)

6. Product maintenance

 6.1 Battery storage

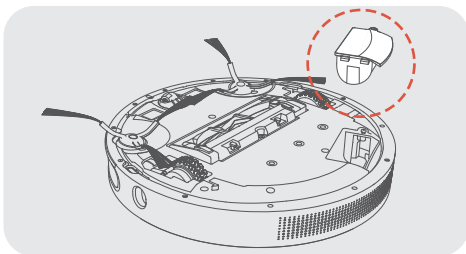


Tips

Please clean and maintain the sweeping robot regularly according to the usage.

Do not use the sweeper for a long time, please fully charge the battery, then remove the battery and store it in a cool, dry place. Keep the bottom of the sweeper dry.

 6.2 Clean charging contactor

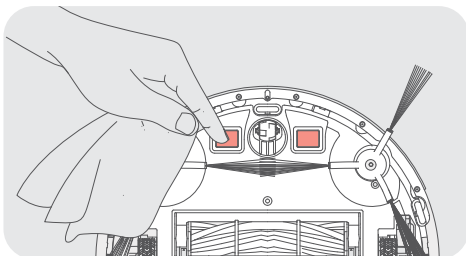


1. Please turn off the power or pull out the plug.
2. Please clean the machine with dry cloth each month.
3. Don't clean it with oils.

6.3 Clean dust container

Draw out the dust box as shown and clean it.

Both the dust box and the filter can be cleaned using running water and a blower. After cleaning the dust box and filter assembly, replace the original path.

 
⚠ Warning: After washing, be sure to dry it thoroughly before replacing the machine.

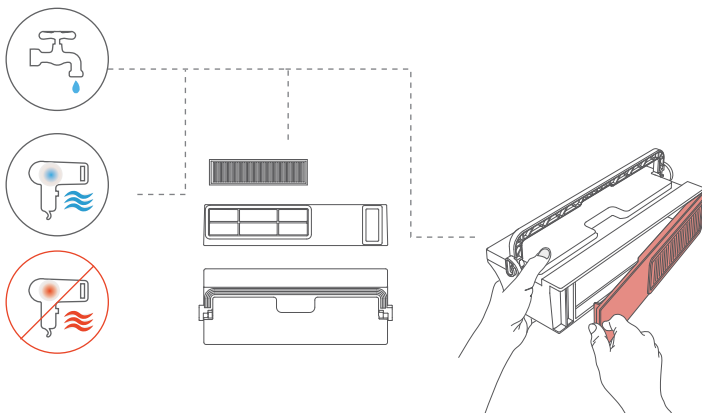


6.4 Clean main brush

1. As showed in the picture,push lock bar and pull up;Grad the main brush and pull up;

 
2. Take out rubber bar and main brush.

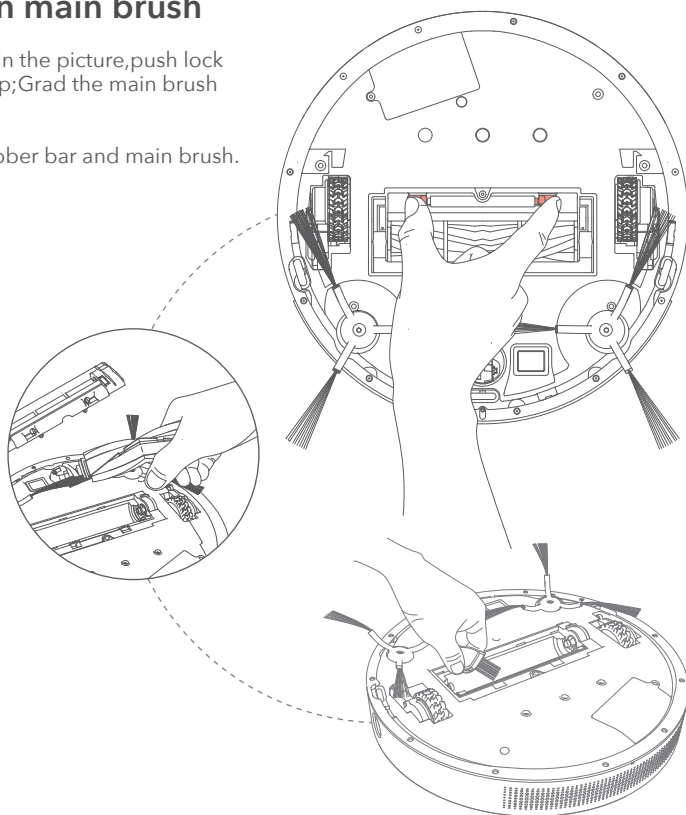

 3. Use a cleaning brush to clean the middle, middle and middle sweeps, and sweep the middle. Hair and other wraps on the brush should be cleaned regularly.

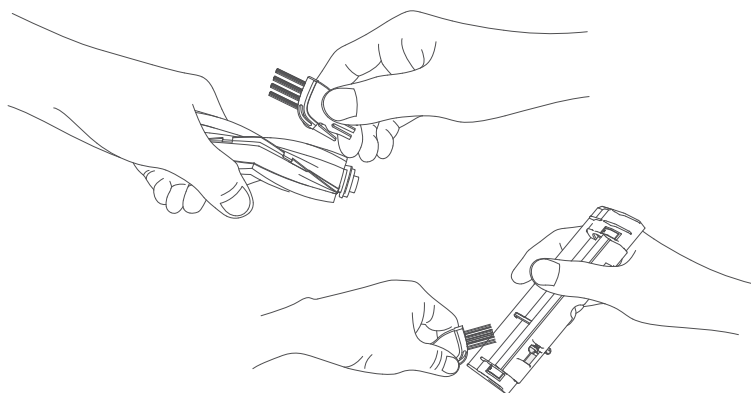


 6.5 Clean side brush

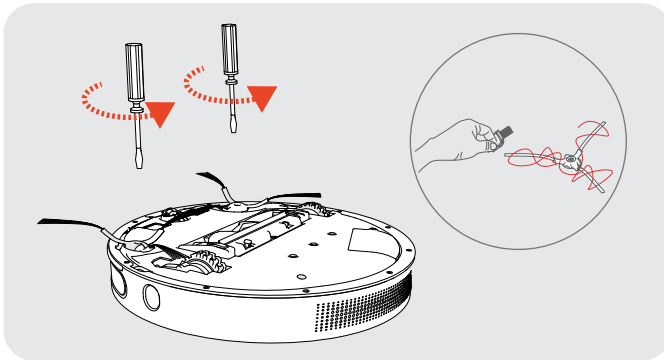


Remove the side brush as shown, and use a cleaning brush to clean the side brush and the wrap around the card slot.

 6.6 Clean wheels

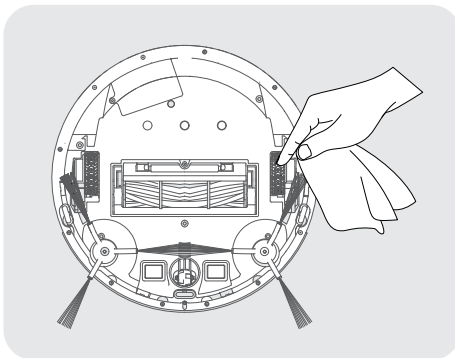

As shown in the figure, Clean the wheels in front and on both sides of the machine with the cleaning brush regularly. The wheel shaft may be entangled with hair, cloth, etc. Please clean it in time.

 6.7 Clean the Infrared Distance Sensors

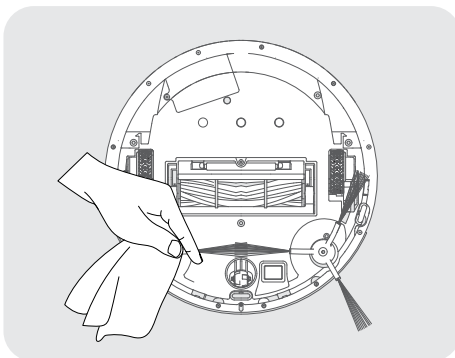

It is recommended that after each cleaning work, carefully wipe the translucent plate and sensor with a dry cotton cloth to prevent dust accumulation from affecting the product performance.

7. Trouble shooting

Trouble indicator:

Red indicator flash on high frequency, please follow voice reminder and check problems

Trouble	Reason	Solution
Dust container problem	Dust container taken out	Set dust container into main body
Off-ground problem	Robot is lifted up or halt	Put robot back to ground
Ground-examine problem	Anti-drop sensors blocked or placed on a high place	Check if sensors are blocked, do not place it on a high place
Anti-collision problem	Collision bar or anti-collision sensors get stuck	Check if collision bar or anti-collision sensors are blocked or disturbed
Main wheel problem	Main wheel is stuck or twined	Check if there are entanglements
Side brush problem	Side brush is stuck or twined	Check if there are entanglements
Roller brush problem	Roller brush is stuck or twined	Check if there are entanglements
Stuck problem	Main body is stuck	Check if Main body stuck
Unknown problem	Unknown problem	Restart device and try again
Low power	Low power	Charge the robot



Warm tips:

If you can not rectify the problem by referring to the above methods, please contact customer service.

8. Parameters

Main body		Accessories	
Operating voltage	DC14.4V	Adapter	
Rated power	25W	Output voltage	DC24V
Battery	Li-ion battery	Output current	⎓ 1A
Battery capacity	2500mAh	Charging station	
Charging time	3-5 hours	Charging station model	CD024
Working time	120 mins	Input voltage	24V
Working temperature	0°C-45°C		
Charging temperature	4°C-40°C		
Storage temperature	0°C-45°C		
Working humidity	≤80%RH		
Product size	φ320*61mm		



Warm tip:

All rights reserved by puppy including modification of technic and design, and right of interpretation

“⎓” DIRECT CURRENT SYMBOL

“⏻” STANDBY SYMBOL

ATTENTION



Ne pas utiliser pour absorber des objets pointus, tels que des feuilles de verre, des ongles, etc., afin d'éviter d'endommager le produit.



Débranchez le cordon d'alimentation pendant une longue période sans utiliser le support de charge.



Ce produit ne peut être utilisé qu'en intérieur.



Évitez d'endommager la machine en inhalant de l'eau, de l'huile ou d'autres liquides



Ne pas utiliser dans un environnement humide ou inflammable, explosif ou corrosif.



Lorsque le produit fonctionne, le retrait du support de charge empêche la machine de se recharger normalement.



Veuillez retirer le matériau endommagé avant utilisation.



Démontez les fils éparpillés sur le sol avant utilisation pour éviter que la machine ne fonctionne.



Le support de charge est placé sur une surface murale plane afin d'empêcher que les fonctionnalités du produit ne soient affectées.

Avis: sécurité des enfants



1) Cet appareil ne doit pas être utilisé par des enfants de moins de 8 ans ou des personnes ayant une déficience physique ou mentale ou un manque d'expérience et de connaissances pertinentes, sauf sous la direction et la surveillance de personnes qui pourraient être responsables de la sécurité de l'utilisateur.

2) Interdire aux enfants de jouer aux sacs de l'appareil, sinon cela pourrait provoquer la suffocation.



 
1. Instruction de sécurité

1.1 Avis d'utilisation

Avant utilisation, veuillez lire attentivement les précautions de sécurité ci-dessous.


- * Veuillez lire toutes les instructions avant d'utiliser cet appareil.
- * Afin de garantir un fonctionnement correct, veuillez conserver ce manuel correctement.
- * Si vous souhaitez donner cet appareil à un tiers, veuillez inclure ce manuel avec l'appareil.
- * Toute opération non conforme à ce manuel peut entraîner des blessures graves ou des dommages à l'appareil lui-même.

1.2 Les questions ont besoin d'attention

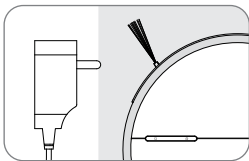

⚠ Cet appareil ne peut fonctionner qu'avec l'adaptateur, la batterie et le poste de charge avec le colis qui contient cet appareil. Dans le cas contraire, cela pourrait endommager la machine ou provoquer un choc électrique ou un incendie.

 
⚠ Veuillez ne pas utiliser cet appareil si la machine ou ses accessoires sont cassés. Veuillez contacter notre service après-vente lorsque vous rencontrez un problème.

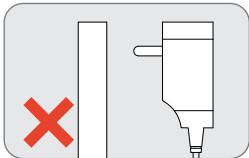

⚠ Veuillez retirer la fiche de la prise avant la maintenance.


⚠ Ne touchez pas la fiche ni l'appareil avec les mains mouillées, cela pourrait entraîner un choc électrique.

 ⚠ Veuillez contacter notre service clientèle si le câble était cassé pour éviter tout danger.

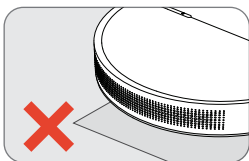

⚠ N'utilisez pas cet appareil en l'absence d'une clôture pour éviter une chute accidentelle du robot.

 ⚠ Veuillez ne pas remplacer la batterie non-originale par vous-même.

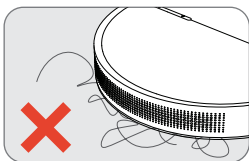

⚠ Ne faites pas entrer de vêtements ou d'autres parties de votre corps (cheveux, doigts, etc.) dans la brosse ou la roue de l'appareil, cela pourrait être dangereux.

⚠ Ne placez pas les appareils près des flammes, des matériaux inflammables, explosifs ou corrosifs.

⚠ S'il vous plaît contacter notre service clientèle pour obtenir le manuel e-edition si votre manuel a été perdu.

1.3 Batterie

 
- 1) Ce produit est limité à l'utilisation de la batterie fournie par le fabricant.
- 2) Veuillez retirer la batterie avant de jeter l'appareil.
- 3) Veuillez contacter notre service après-vente si vous souhaitez remplacer la batterie. N'utilisez aucun autre chargeur pour recharger la batterie.
- 4) Si la batterie présente une fuite, ne laissez pas le liquide pénétrer dans la peau ou les vêtements, nettoyez-le immédiatement avec un chiffon sec et remettez-le dans la corbeille à papier, ne le jetez pas.
- 5) Veuillez éliminer correctement la pile usée de l'appareil. Les batteries contiennent des substances dangereuses pour l'environnement. Veuillez respecter les réglementations environnementales locales et placez-le sur les sites de recyclage requis.

1.4 Plage d'utilisation

S'il vous plaît utilisez le robot dans l'environnement hors sol, sinon il ne sera pas en mesure d'atteindre l'effet et pourrait même endommager le robot.



Parquet

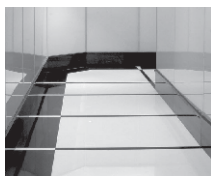


Tuile




Tapis de cheveux courts

2. Produit

 2.1 Corps principal et composants

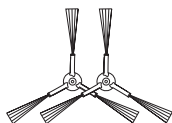


Brosse latérale x2

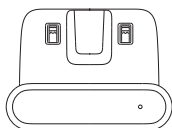 


Station de charge x1



 
Adaptateur x1




Brosse de nettoyage x1

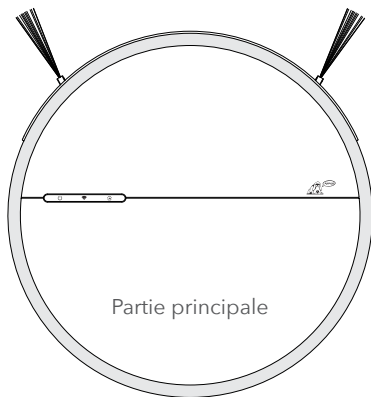 


Partie principale

 


Tournevis x1

 

Coupe poussière x1

 

Balai x1
Palette x1

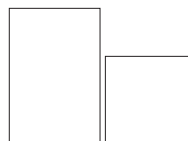 

Manuel de l'utilisateur x1
Certificat d'approbation x1



Pointe chaude

Le godet à poussière, le filtre à tamis et la batterie sont déjà installés dans le corps principal.