

Quick Start Guide

Poooli L3



Content

Packing List 1

Appearance 2

Using Guide 3

Download APP 5

Connection 6

APP Setting 7

Replace Supplies 8

Official Supplies Types 13

Safety 14

FCC 15

Packing List



Poooli L3



Quick Start Guide



 
Thermal Paper Roll



USB Cable

⚠️ Note: The packing items are actually based on the order.

Appearance



- ① LED Indicator
- ② Power Button
- ③ Paper Outlet
- ④ Cover Opening Button
- ⑤ TYPE-C Charging Port



- ⑥ TPH
- ⑦ Paper Guide
- ⑧ Platen
- ⑨ Fastener for Top Cover
- ⑩ Reset Button

Using Guide

💡 LED Indicator Status

- Green LED is lighting: power on/standby/fully charged/printing
- Green LED is slowly flashing: receiving gray-scale data
- Green Notifly LED is slowly flashing: charging/firmware updating
- Red LED is lighting: cover opened/rot of paper
- Red LED is quickly flashing: low-power status (quick flash twice, slow flash once)/TPH over temperature
- Red LED is slowly flashing: label positioning failure

🔌 Charging

Use it for the first time after purchase

- Recommended to use after full charge
- For computer USB port charging only

🔌 USB Cable

- In addition to the supplied USB cable, you can also use the charging cable of mobile device
- Recommended to use the supplied USB charging cable to charge
- It takes about 3.5 hours to charge with 5V/1A

📄 Paper Purchase

- From APP, Tmail, Jingdong Mall
- Official website (www.poooli.com)

Download APP

Scan the QR code below or search for "Poooli" in the app store to download and install the app:



Official WeChat service:



Official Weibo service:



Connection



Smartphone



Register and log in to the app, click Add Device. Connect to the device by searching for Bluetooth or scanning code.

APP Setting



 
- Bluetooth 4.0
- Bluetooth pairing
- If the first connection succeeds, the next time you start the application, it will be automatically connected to Poooli.




- Simple operation
- APP setting
- You Can view information such as remaining power, firmware versions in device management.

Replace Supplies


1. Place the printer on the flat surface.

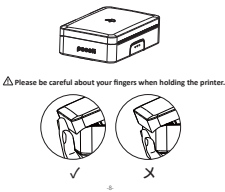

 
2. Press the cover opening button, and the top cover will be opened automatically.

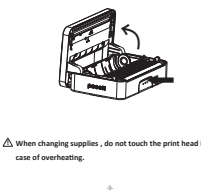

 3. Insert two paper guides into the corresponding place (57.8/80/110) according to the paper width, and then place the paper roll.

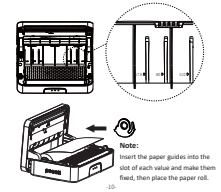

 
1) 2-inch width: insert two paper guides into the place of 57.8 as the figure shown below:

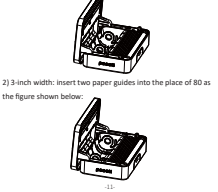

2) 3-inch width: insert two paper guides into the place of 80 as the figure shown below:



 3) 4-inch width: insert two paper guides into the place of 110 as the figure shown below:

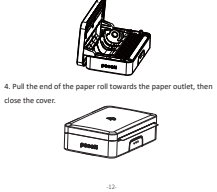

Official Supplies Types

Self-adhesive Paper	With adhesive backing, cuttable size, can be preserved for 10 years
Ten-year Thermal Paper	Clear printing, stable color rendering, suitable for daily use, can be preserved for 10 years
Gray-scale Paper	Suitable for photo printing, waterproof, oil proof and scratch proof, can be preserved for 7 years
Label Paper	Stickers with adhesive backing, fixed size, can be preserved for 10 years
Affordable Thermal Paper	Affordable, suitable for text printing, can be preserved for 7 years
All Posioli paper does not contain Bisphenol-A. If the printer failure is caused by using other paper, you will not be able to enjoy the three guarantee policy.	

Safety

- Battery Overheating**
 - When charging is completed, please unplug the USB cable.
 - To avoid fire, do not charge at high temperature (e.g. meeting room, bonfire nearby, etc.).
- Charger Attention**
 - Print Head Management and Cautions**
 - There may be damage to the print head due to improper charging.
 - We recommend not to use Posioli in high humidity or dusty areas.
- Burn Hazard**
 - Print Head Overheating**
 - After printing, do not touch the print head directly to prevent burn.
- Charging Port Damage**
 - Charging Cautions**
 - Please gently insert or unplug the USB cable to prevent excessive damage to the charging port.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

FCC

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm the radiator your body. Use only the supplied antenna. FCC ID: 2AUJ5-L3