

215.90 mm

139.70 mm

Tonka®

5+



 
MIGHTY MONSTER

RC

STEEL DUMP TRUCK


CHECK OUT OUR WEBSITE FOR VIDEOS ON HOW TO OPERATE THE VEHICLE AND TROUBLESHOOTING ISSUES! WWW.TONKA.COM/SUPPORT

COMPONENT CHECKLIST

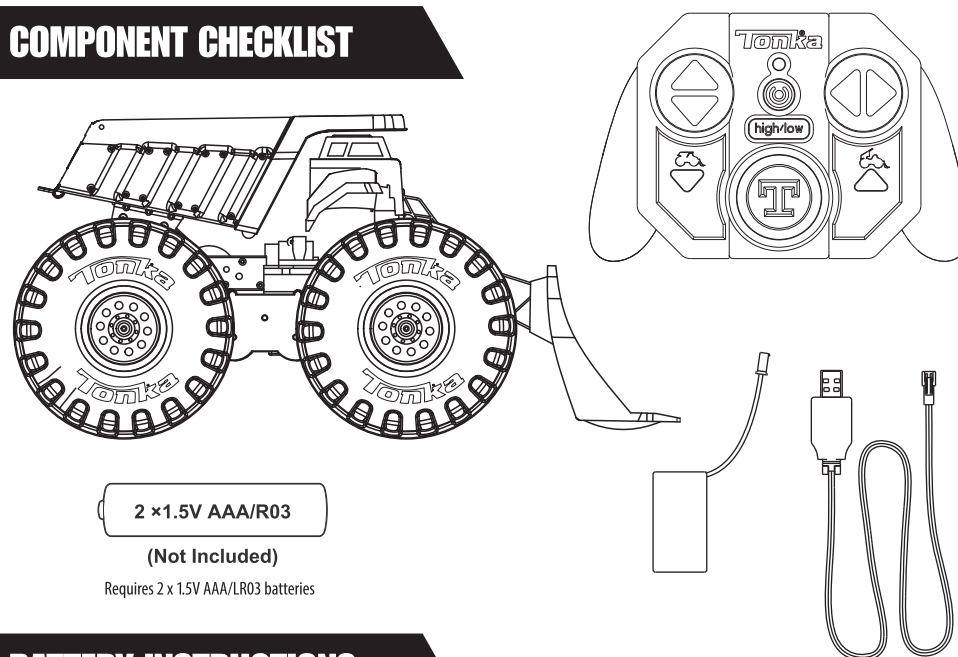


BATTERY INSTRUCTIONS

 1. To charge, remove the 7.4V lithium rechargeable battery from battery compartment outlined in the above diagram by using a Phillips head screwdriver.

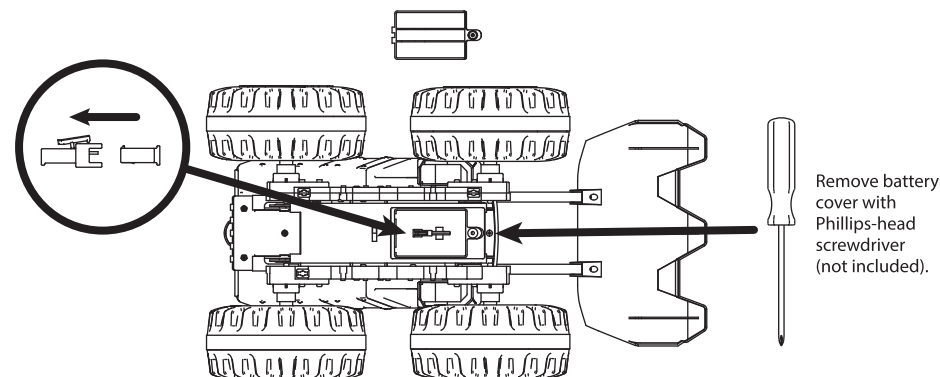

 
2. To detach the 7.4V Lithium rechargeable battery, apply pressure to the release latch located on the vehicle power cord
3. To charge, connect the 7.4V lithium rechargeable battery to the USB cable adapter provided.

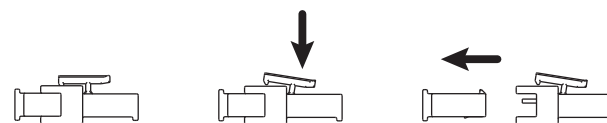

4. Connect adapter to a USB power source with a maximum of 7.4V output. (5V is standard for wall adapter/computer)
5. Upon completion of charging, unplug the USB cable adapter and re-connect it back to the vehicle power cord. Reinstall battery cover.


PAIRING/OPERATION

 1. To sync the remote to the truck, turn the vehicle on and press down on the power button located on the controller.
2. When correctly synced, the light located above the power button on controller will be solid red, and light near power switch on vehicle will be solid red.

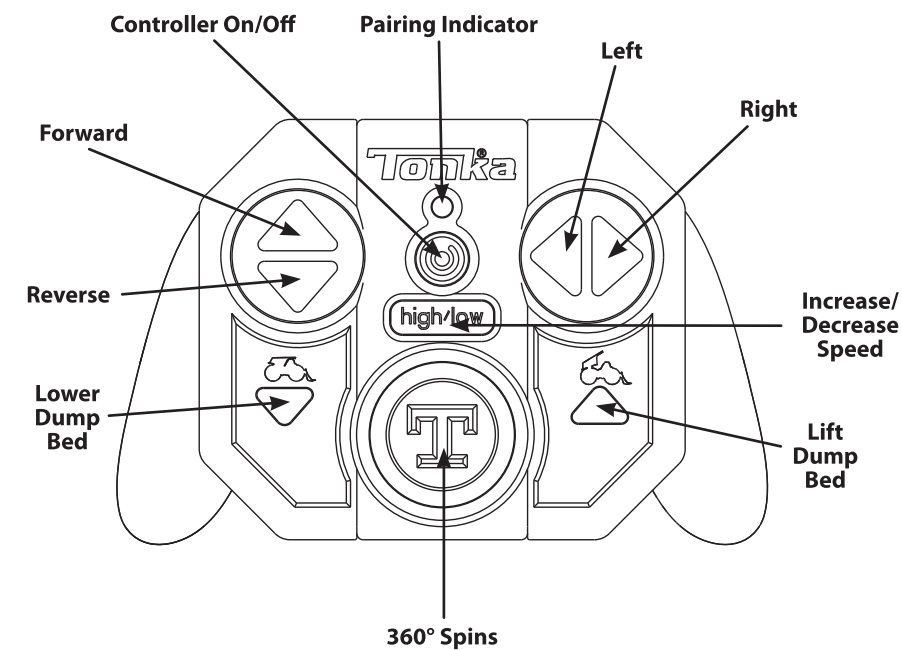


BATTERY INSTALLATION FOR CONTROLLER

 1. Using a Phillips/crosshead screwdriver (not included), loosen the screws in the battery compartment cover (screws stay attached to cover.) Remove the cover. Insert 2 x 1.5V "AAA" size batteries.
2. Alkaline batteries recommended. Replace cover and tighten screws.

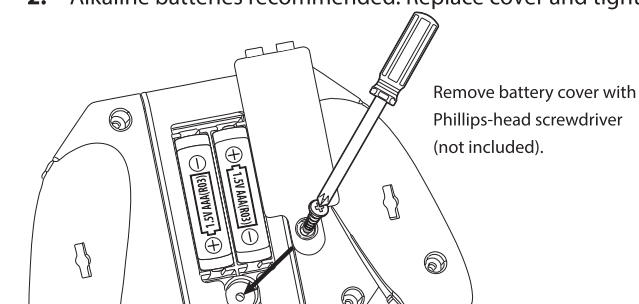

 2 x 1.5V AAA/R03
(Not Included)
Requires 2 x 1.5V AAA/LR03 batteries

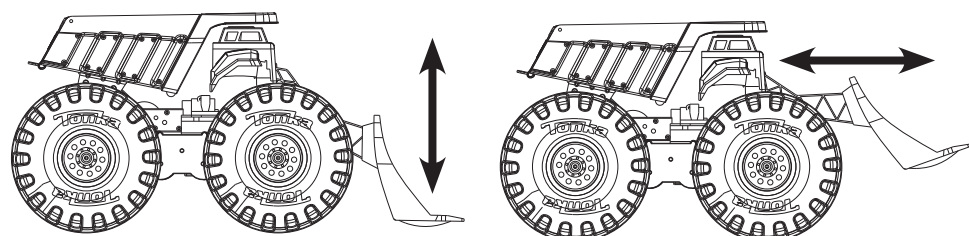

PRECAUTIONS

- Do not leave the vehicle/controller/battery exposed to direct sunlight for extended periods.
- Avoid operating in tall grass
- Do not drive in rainy weather or through large pools of water
- Avoid direct impact with obstacles
- Keep fingers, hair, and loose clothing away from moving parts.
- Switch vehicle OFF when not in use.
- Do not use chemicals or water to clean
- Wipe body with a soft rag or tact cloth.
- USB cable is intended for 7.4V battery (800 mAh Max). Other types of batteries may burst, causing injury. Cannot be used on non-rechargeable batteries

WARNING!

- **DO NOT RECHARGE BATTERY IF LEAKS OR CORROSION ARE VISIBLE**
- **DO NOT COVER BATTERY PACK WHILE CHARGING**
- **DO NOT ATTEMPT TO DISASSEMBLE THE VEHICLE OR CONTROLLER**
- **DO NOT DISPOSE OF BATTERIES IN A FIRE**
- **BATTERIES SHOULD NEVER BE LEFT UNATTENDED WHILE CHARGING**
- **KEEP BATTERIES AWAY FROM CHILDREN AND PETS AT ALL TIME**
- **USE ONLY INCLUDED BATTERY, OR A BATTERY THAT IS 7.4V 800MAH.**
- **THE USB CABLE COULD BE A STRANGULATION HAZARD. KEEP OUT OF REACH OF CHILDREN UNDER 3 YEARS OF AGE.**
- **CHILD SHOULD ONLY PLAY WITH PRODUCT WHEN BATTERY COVER IS SECURELY IN PLACE. THE PRODUCT MUST BE USED ONLY WITH THE RECOMMENDED USB CONNECTION. THE USB CABLE IS NOT A TOY.**
- **USB CABLE AND CONNECTORS MUST BE REGULARLY EXAMINED FOR DAMAGE TO THE CORD, PLUG AND OTHER PARTS AND, IN THE EVENT OF SUCH DAMAGE, THE CABLE MUST NOT BE USED UNTIL THE DAMAGE HAD BEEN REPAIRED.**
- **ONLY ADULTS SHOULD CONNECT THE PRODUCT TO THIS CABLE.**

BATTERY INFORMATION

- **Charging time for a fully depleted battery is 80min. minimum at a standard USB port (5V).**
- USB Cable end will glow red while charging and turn to green upon completion of charge.
- **For optimal performance, battery must be fully charged prior to use of vehicle.**
- The operating range can be affected by a low charge, or interference from external sources.
- Adult supervision recommended.
- **To maintain battery capacity, do not charge longer than 6 hrs.**
- Do not attempt to cut or dismantle the battery pack.
- Non-rechargeable batteries are not to be charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- The supply terminals are not to be short-circuited.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity (+ and -).
- Exhausted batteries are to be removed from the toy.
- Dispose of batteries safely.
- Do not dispose of batteries in fire. Batteries may explode or leak.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

In case of environmental electrostatic discharge, product may malfunction. In this case, reset the product by re-installing batteries.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Frequency Band: 2420MHz – 2462MHz
Maximum radio frequency power transmitted: <10 dBm

Hereby, BASIC FUN INC. declares that the radio equipment type Tonka Mighty Monster RC Steel Dump Truck is in compliance with Directive 2014/53/EU. The declaration of conformity may be consulted at <https://www.basicfun.com/legal.html>



Licensed By:



The Basic Fun logo, product and package design ©2022 BASIC FUN, INC. BOCA RATON, FLORIDA 33431, USA. www.basicfun.com. **TEL: 1-561-997-8901**. All rights reserved. Manufactured under license. Basic Fun products are safety tested and comply with ASTM F963. MADE IN CHINA. Colors and styles may vary from photos as we continue to modify and improve our products. **ADULTS NOTE:** Remove all tags and plastic fasteners before giving toy to child. Please retain this package and instruction sheet for future reference. **WARNING!** Not suitable for children under 36 months. Small Parts. Choking hazard.

TONKA, the logo and all related characters are trademarks of Hasbro and are used with permission. © 2022. Hasbro. All Rights Reserved. Licensed by Hasbro.

www.BasicFun.com



K'NEX UK LTD., 200 BROOK DRIVE, GREENPARK, READING, RG6 2UB, ENGLAND.
K'nex/Basic Fun C/O Regional Express GmbH, Darmstadter Landsrt. 116, 60598 Frankfurt, Germany.

06011/06165