



Quick Start Guide

D25 Series

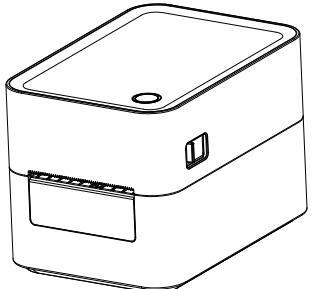


Caution:
This is a Class A product. In a domestic environment this product may cause radio interference in which the user may be required to take adequate measures.

Packing List

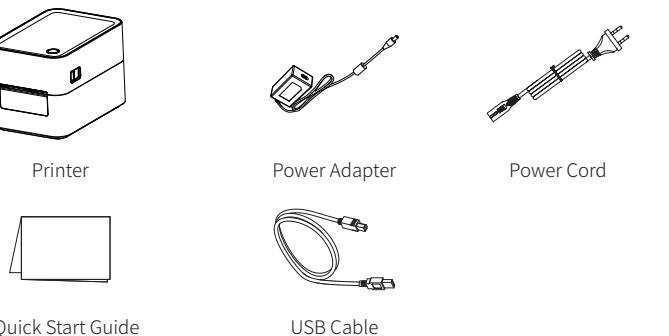

⚠ Note: The packing items are based on the order.


Appearance and Components

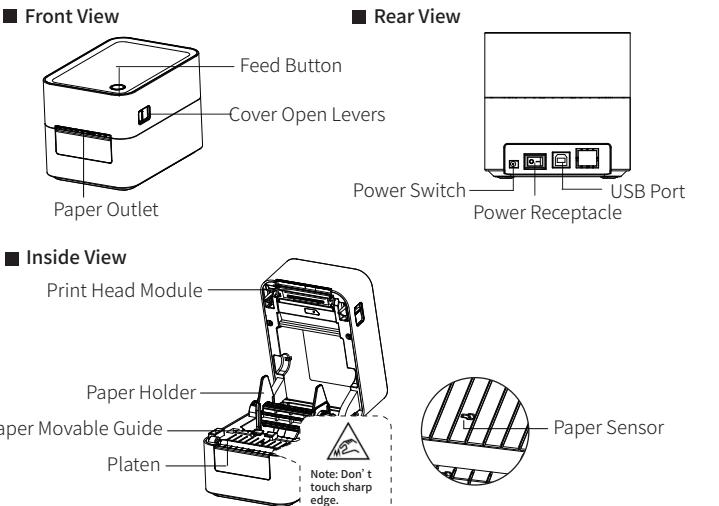


⚠ Note: The views above are for your reference. Ports vary by your choice.

Load the Paper Roll


1. Push the cover open levers on the both sides with both hands to open the top cover upward.

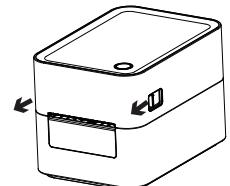


2. Take out the paper holder.

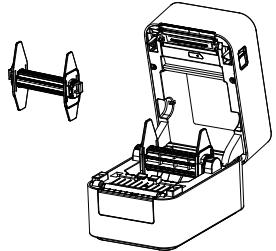


3. Load the paper roll to the paper holder according to the following appropriate size.

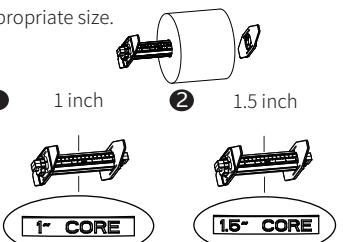


5. Pull out part of the paper roll, pass the paper through the paper movable guides, then adjust them to suit the paper width.

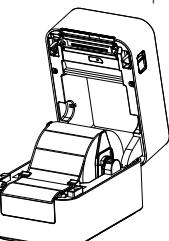

4. Load the paper holder back to the printer.

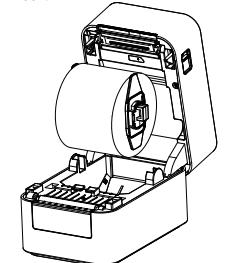

6. Press down the printer cover.

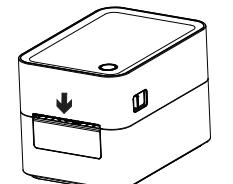

FCC WARNING:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.


-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.




Connect the USB

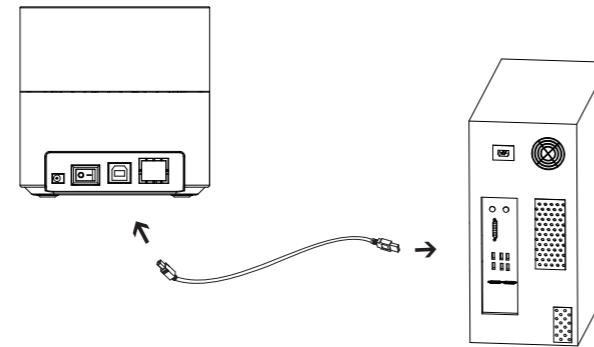

Connect the Power

1. Make sure the printer's power switch is in the "off" position.
2. Connect the power adapter to the printer and the power cord.
3. Connect the other end of the power cord to the outlet.

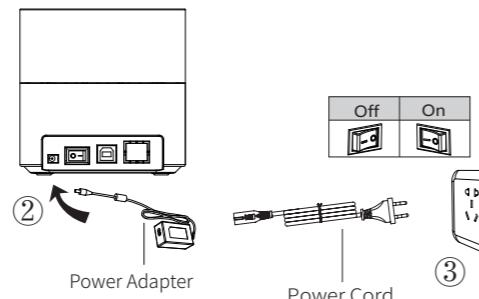

Feed Button

Label Mode:

- ① Press the feed button to locate a blank label.
- ② Press and hold the feed button until the blue indicator light flashes once, then release the button and the printer will print a self-test page.
- ③ Press and hold the feed button until the blue indicator light flashes twice, then release the button and the printer will start label learning.
- ④ In the open cover state, press and hold the feed button, the indicator light flashes five times, and switch to the receipt mode. The printer automatically restarts and prints: the current mode has been switched to receipt mode, printing continuous paper.

Receipt Mode:

- ① Press the feed button to feed the paper.
- ② In the open cover state, press and hold the feed button, the indicator light flashes five times, and switch to the label mode. The printer automatically restarts and prints: the current mode has been switched to label mode, printing gap paper.

Connect the Bluetooth

Bluetooth connection (only applicable to printers that support Bluetooth)

Use with the HiLabel Application

BT Name: D25-XXXX (X means the last four digits of the BT address)

Note: Enter 0000 or 1234 if a PIN code is required.



Scan the code to download the HiLabel application

Specifications

Print Mode	Label Mode	Receipt Mode
Print Method	Direct thermal	
Label Width	20mm-60mm	
Roll Paper Diameter	Max 80mm	Max 70mm
Label Type	Label Paper, Black label paper	Continuous paper
Print Speed	80mm/s	100mm/s
Print Resolution	203dpi	
Operation Environment	0°C-40°C	
Output	DC 9V 2A	