



H11

Content


EN	Quick Start Guide	1
JP	取扱説明書	6

Product Introduction

Appearance and Components

EN

Paper
Outlet LED Indicator/
Hook Position

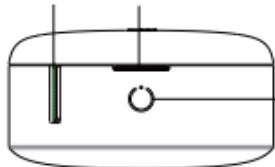

Power Touch
Button

Top Cover



USB Interface

Packing List



Printer



USB Cable



Quick Start Guide

Product Introduction

LED Indicator Status


- Red LED Error Status
 - ON: Error (Paper jam/Paper end/Cover opened)
 - Quick Flash: TPH is over temperature
 - Slow Flash: Low power
- White LED Basic Status
 - ON: Charging finished/Printer is ready
 - Slow Flash: Charging

Touch Button Operation


- 1 Hold down the power touch button for a few seconds: Turn on/off the printer
- 2 Double click the power touch button: Position and calibrate the location of thermal label paper and heating line

Paper Loading


- 1 Open the top cover by the hook position as the direction shown in the figure.

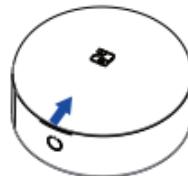

- 2 Load the paper as shown on the right.

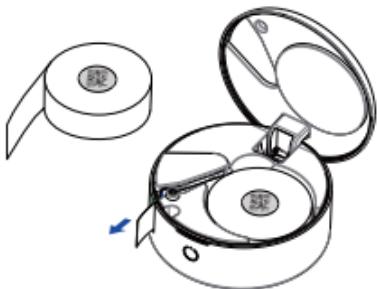

- 3 Close the cover and pull some extra paper.

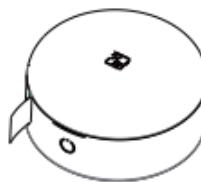

App Download

Scan the QR code to download App.



Connection and Printing

01

Turn on Bluetooth of mobile phone, then open App, select “H11” in the device list. Click “Search device” and find “H11-XXXX”, click it to connect.



02

Select “Scan to get template”, scan the QR code on the roll core to get the template.



03

Edit the label as need, and then click “Print” after editing.




Note: App operation shall be subject to the latest version.

Battery Charging

When the battery power is low, the red LED indicator will flash slowly. Please charge it by the exclusive USB cable in time. If you continue printing, it may power off automatically.

Charge via PC

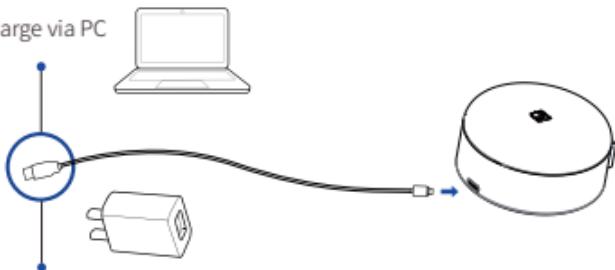

Charge via AC Adapter






Note: The printer can be charged via computer USB port or AC adapter. Please note that the AC adapter is not supplied.


製品の紹介

JP

各部の名称

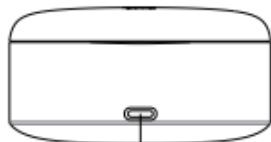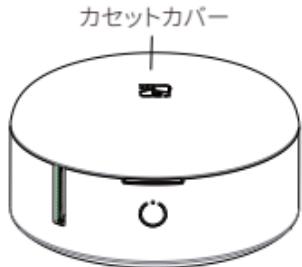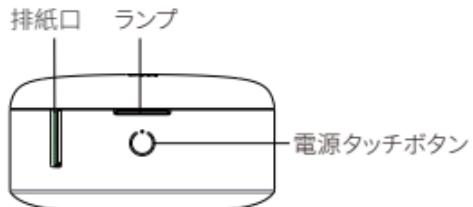

付属品の確認

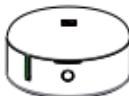

プリンター



USBケーブル



取扱説明書

製品の紹介

ランプ状態


- 赤ランプ 異常状態
 - 点灯:異常(紙詰まり/紙切れ/カバーが開いている)
 - 高速点滅:サーマルヘッドが過熱状態です
 - ゆっくり点滅:電池残量が少ない
- 白ランプ 基本状態
 - 点灯:充電完了/レディー状態
 - ゆっくり点滅:充電中

ボタンの操作について


- ① 電源タッチボタンを長押し:オン/オフ
- ② 電源タッチボタンを素早く2度押すと:感熱紙と加熱位置をキャリブレーションします

感熱紙の取り替え


- 1 指はランプの凹の所から上にすればカセットカバーを開けるようになる。

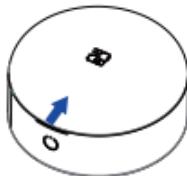

- 2 図のように感熱紙を正しく置いてください。

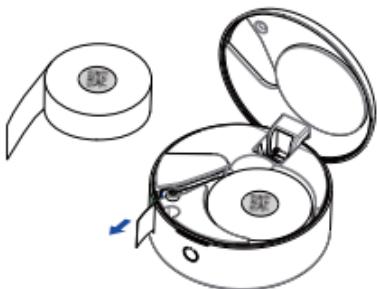

- 3 カセットカバーを閉める、感熱紙を少しづつ引き出してください。

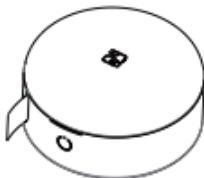

アプリのダウンロード

QRコードをスキャンしてアプリをダウンロードする。



接続して印刷

01

まず、スマートフォンの「設定」→「Bluetooth」で「Bluetooth」をオンにします。

また、アプリを開き、「デバイスを検索」をクリックして、接続可能な設備から本機(HPRT H11)を選択してください。



02

「スキャン」を選択して、感熱紙の芯にあるQRコードをスキャンして、テンプレートが得られる



03


自分の好みによってラベルを作成する、作成したあとで「印刷」をクリックして印刷物が出る。



ヒント: アプリの操作は最新版によります。

充電

バッテリー残量が少なくなると、指示ランプが点滅します（赤いランプがゆっくり点滅します）。サポートするUSBケーブルを使用して時間内に充電してください。印刷を続行すると、プリンターが自動的にシャットダウンする場合があります。

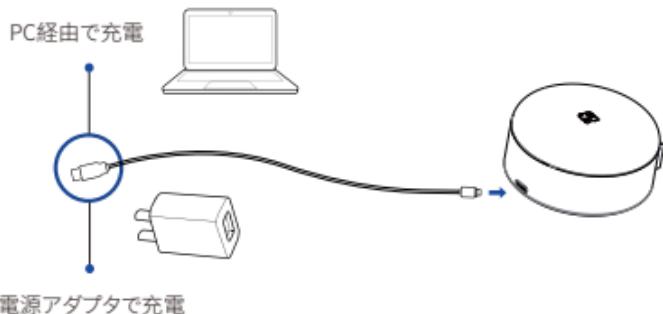

注：プリンターは、アダプターなしで出荷されます。電源アダプターまたはコンピューターのUSBから充電できます。

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.



Note: All the drawings of product and accessories in the manual are for reference only, please subject to the actual product.

Xiamen Hanin Electronic Technology Co., Ltd.

E-mail: support@myqutie.com

Web: www.myqutie.com