

# FRONT SIDE

## Wireless Speaker with Earbuds

### Instruction Manual




#### Speaker Specifications:

- Wireless: V5.0
- Wireless Pairing Name: GC6270
- Support: L2CAP/A2DP (AVCTP/AVDTP/AVRCP), can receive AUDIO signal and control the AUDIO device. Support HSP/HFP (Hands free profile).
- Built-in Mic for hands-free phone call
- Working Distance: 30 feet
- SNR: ≥95dB
- Battery: 3.7V 500mAh
- Playback Time (at 70% volume): 2.5 hours
- Charging Time: 2.5 hours
- Speaker Driver: 42mm
- Power: 4Ω/5W
- Frequency Response: 120Hz-20KHz
- Unit size: 98 L x 98 W x 38 H mm
- Charging: 5V/500mA

#### Product Features:

- Built-in low-frequency radiators.
- Compatible with Bluetooth enabled devices and connects wirelessly up to 30 feet away.
- Mic for hands-free phone call function.
- Built-in MP3 decoding, TF memory card, U-Disk and USB slots to store MP3 format music file.
- Build-in FM radio module.
- Support 3.5mm AUX IN audio input.
- Support TWS (True Wireless Stereo).
- Speaker charges and supports power for earbuds. The earbuds can be charged 4-5 times when the speaker is fully charged.

#### Speaker Operations:

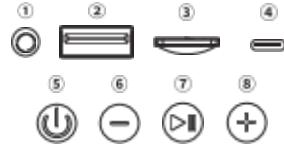

- 3.5mm AUX Cable Port
- Micro USB Charging Port (USB card slot for playing MP3 format audio)
- TF Memory Card Slot
- Type-C Charging Port
- On/Off Switch.
  - Long Press – Turn speaker on and off.
  - Short Press – Switch between USB, TF, FM Radio and Bluetooth modes.
- Control Button:
  - Short Press in music mode – Previous song.
  - Long Press in music mode – Decrease volume.
- Control Button:
  - To pair the speaker: Long press for 4 sec. until the light stop flashing then pair with devices.
  - In music mode: Short press to play or pause the music.
  - In pairing mode: Short press to answer incoming calls. Short press again to hang up.
  - In FM Radio mode: Short press to search channels. Short press again to stop searching.

Notes: To use 3.5mm AUX cable to receive better FM radio receptions.
- Control Button:
  - Short Press in music mode – Next song.
  - Long Press in music mode – Increase volume.

# BACK SIDE

#### Earbuds Specifications:

- Wireless Version: V5.0
- Wireless Pairing Name: GC6270TWS
- RF Transmit: class 2
- Transmission Range (HZ): 2.402GHZ-2.480GHZ
- Transmission Distance: 10M
- Working Voltage: 3.0V-4.2V
- MIC Sensitivity: -42dB
- Frequency (HZ): 50HZ-20KHZ
- Support Profile: HFP, A2DP, AVRCP
- Standby Time: 120 hours
- Playback Time (at 70% volume): 2 hours
- Talking Time: 2 hours
- Charging Time: 1 hour
- SNR: > 95dB
- Battery Capacity: 40mAh (each earbud)

#### Power On/Off:

Power on automatically when earbuds are removed from the charging case (speaker). Power off and start charging automatically when return the earbuds back to the case.

#### Bluetooth Pairing:


Earbuds will turn on automatically and connected with another one. A voice prompt "power on" will appear, and the device will enter into pairing mode. Earbuds will be paired with a "connected" prompt tone with the LED indicator flashes red and blue.

Note: The devices will turn off the pairing mode automatically after 3 mins. Return the earbuds to the case to activate again.

Turn on the Bluetooth on the device and search pairing name GC6270 to pair and connect. A prompt sound "Connected" will appear when pairing is complete.

Note: Both left and right earbud may be used as a mono earbud.

#### Earbuds Operations:

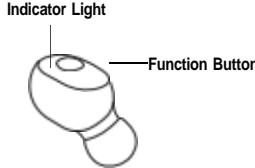

Long press the function button for 5 sec. to turn power on or off.

##### Function Button:

a. Inactivate Status: Double tap the button to pair both earbuds.

b. In music mode:

- Short press the button to play/pause.
- Double tap the left one for the previous track
- Double tap the right one for the next track
- Tap three times to activate Siri.

c. Hands-free call:

- Short press the button to answer / hand-up calls
- Long press the button for 2 sec. to reject the incoming call.

#### Earbuds Charging:

Return the earbuds to the case (speaker). The indicator light will turn red while the earbuds are charging and the light will be off when it's fully charged.

#### Caution & Safety:

- Please read all safety and operating instructions before use.
- To reduce the risk of injury, close supervision is necessary when the product is used near children.
- Do not put fingers or hands into the product.
- Do not expose the product to rain or snow.
- Use of a power supply or charger not recommended or sold by the product manufacturer may result in a risk of fire or injury to persons.
- Do not use the product in excess of its output rating. Overloading outputs above rating may result in a risk of fire or injury to persons.
- Do not use the product that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
- Do not disassemble the product. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.
- Do not expose the product to fire or excessive temperatures. Exposure to fire or temperature above 100 °C may cause an explosion.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- If storing for long periods of time, recharge the case and earbuds every 3 months for maximum longevity.



if the product is not as big as the palm, there is no need to add a warning on the label, only the FCC ID number.

In the manual, additional warnings are needed, as follows:

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

