

**BJ701B-CD**

**CD Player**

**Instruction manual**

Before using the device, please read this instruction manual and follow instruction.  
Keep the manual for future reference

## **Important safety instruction and attentions**

Warning:

Please read carefully this instructions and all warnings or instruction on CD tower speaker.

Personal safety is fully considered for products design and production, improper use might lead to danger of electronic shock or fire. Please pay attention to following reminder to guarantee your safety when you install, use or maintain it, This unit does not have any spare parts for maintain purpose.

Don't open the cover, high voltage inside. Please contact with professional maintain staff for fixing purpose.

1.Read the instruction manual

Please read carefully the instruction after you open the box and please operate it according to the instruction manual.

2.Power

Please use proper power supply according to this unit power indicator.

3.Aeration

Please do not put the unit on sofa, carpet or doss to avoid the unit over-heated.

4.Avoid hot

This unit should be far away from heat sourcing, such as radiator, stove or any other products can send out heat(Including amplifier)

5.Avoid water and damp

This unit should be far away from water source, such as wet area and swimming pool.

6.Clean

Please pull out the plug before cleaning the machine. Don't use any liquefied petroleum gas. Please use wet cloth.

7.Protection for power cord

When placing the power cord, please avoid damaged by stepping or placing on pointed articles.

8.Avoid over-loading

The plug can't be overload otherwise it may bring fire or electric shock.

9.Avoid entering other articles or water

Don't stuff any articles or water into the machine, otherwise it will lead to fire or electric shock.

10.Accessories

Please use the recommended accessories by the dealer otherwise danger may occur.

11Stand

Don't place the machine on unstable stand, otherwise it may cause harm to human or damage the machine due to the overturn.

12.Disc tray

When open or close the tray door, don't touch it directly in case of danger.

13.Overload

Don't step or put any heavy articles on the machines.

15.Laser

Don't take the cover away, otherwise directly contacting laser may hurt the eyes.

16.Disc

Please don't use any crack, distorted, or repaired disc, otherwise it might bring hurt to machine.

17.service

If the machine fails, please unplug the machine and contact the professional for maintenance. Please do not take away the cover of machine by yourself, the high voltage and other hazards in the machine may cause harm to your personal body:

(1) The power cord or the power plug is damaged

- (2) liquid or foreign matter into the machine
- (3) the machine rain or damp
- (4) If you can not operate the unit normally according to the operating instructions
- (5) the machine is off or damaged
- (6) Significant changes in machine performance

#### 18.Change the accessory parts

When need replace parts, make sure to use parts which are recommended by manufacturer or which are have the same performance as the original part. Otherwise it may cause fire, electric shock or other hazards.

#### 19.Security check

After the repair is completed, please provide a safety check to ensure that the machine is back to normal operation.

#### 20.Precautions for transport and use

- (1) It is best to use the original box and packaging materials to prevent damage to the machine.
- (2) Do not use volatile liquid substances such as mosquitoes near the machine; do not use rubber or plastic to place on the machine for a long time, otherwise it will leave marks on it.
- (3) For a long period of time, the front and rear panels of the unit will heat up, which is normal.
- (4) When not in use for a long time, please remove the disc and unplug the power plug.
- (5) If you do not use it for a long time, it may cause the unit to not operate normally.
- (6) The machine should keep a certain distance with TV or radio, otherwise the machine may be affected.

#### 21.Clean


When clean the machine, please use a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

#### 22.Notes about the discs

- (1)To keep the disc clean, handle the disc by its edge. Do not touch the surface. Do not stick paper or tape on the disc.
- (2)Do not expose the disc to direct sunlight or heat sources such as hot air ducts.
- (3)When clean the disc, please use a soft cloth to wipe the disc from the center out. Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs, otherwise it may damage disc.


## Function and name

### Front Panel

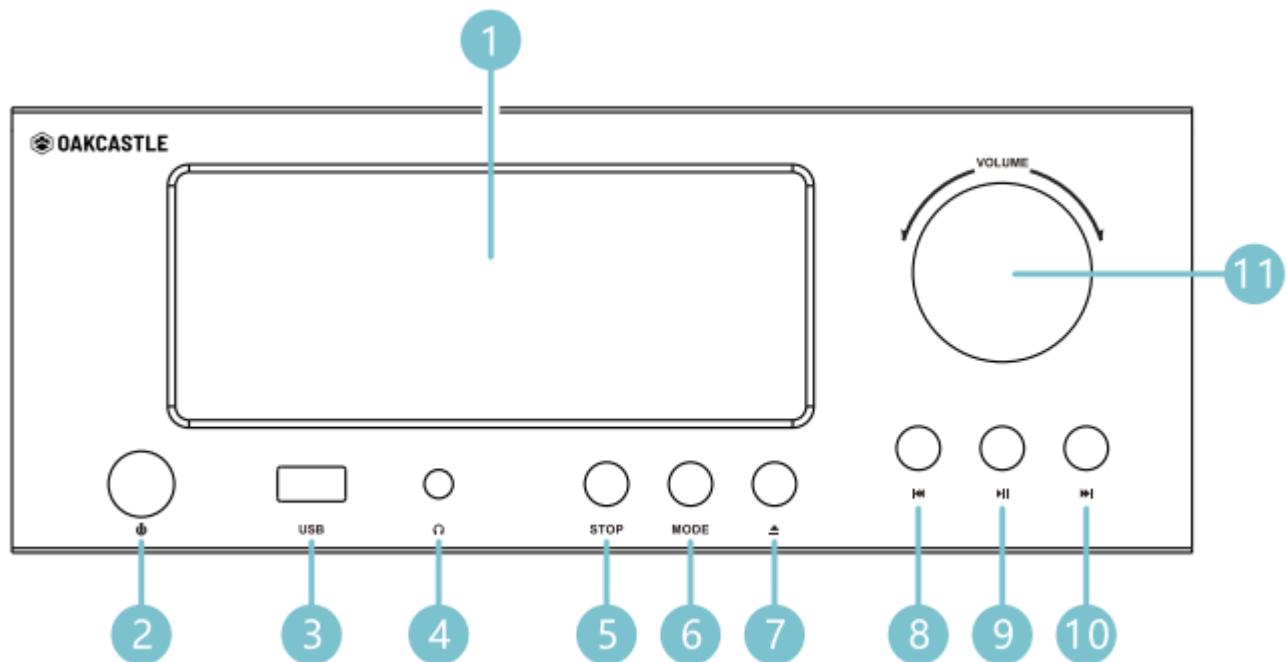


1. Display
2. Power
3. USB Port
4. Headphone Jack
5. STOP Button
6. Mode Button
7. Eject Button
8. Previous Section/Station
9. Play/Pause
10. Next Section/Station
11. Volume Knob

### Back Panel

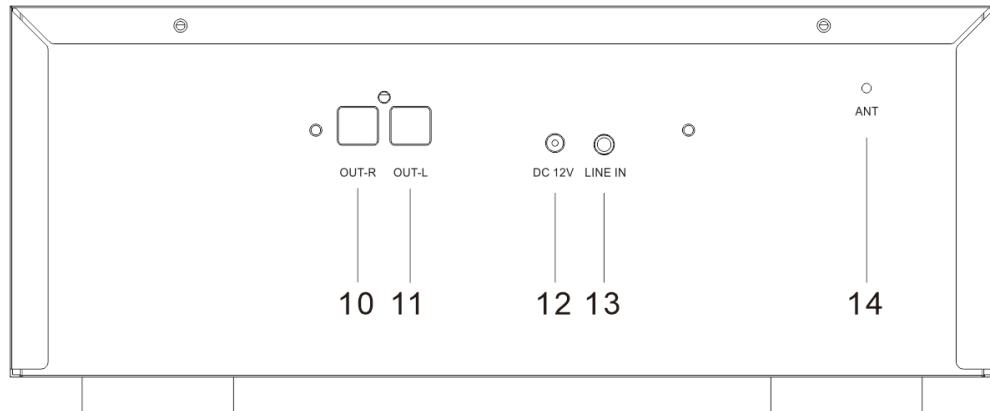

1. OUT-R/OUT-L: Left/Right Speaker Jack
2. DC 12V: Power input jack
3. LINE IN: Audio input jack (connect another audio output device or mobile phone)
4. ANT: FM Antenna (Fixed)

## Remote control

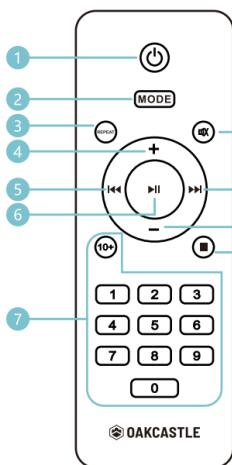

1. Power Key
2. Mode Key
3. Repeat Key
4. Volume Up
5. Short press to last section/station. Long press to back forward in CD mode.
6. Play/Pause Key(FM:Search Station)
7. Number Key
8. Mute Key
9. Short press to next section/station. Long press to fast forward in CD mode.
10. Volume Down
11. STOP Key

## Basic operation

### 1.Turn on CD player

Connect to power adapter and press the power button on the player. The LED screen of player will appear "LOAD". If there is no disc on the tray, it shows "NO DISC"

### 2.Play/Pause

When playing music, press **▶||** this button to pause music. Press this button again to resume playing mode.

### 3.Stop

When press the "STOP" key for the first time, the player will stop playing. Press **▶||** this button will continue to play from current music.

When press the "STOP" key twice, the player will enter stop state. Press **▶||** this button will start from first song and play in sequence.

### 4.Repeat

When playing music, press "REPEAT" for the first time will repeat current playing. Press "REPEAT" twice will repeat the whole disc. Press "REPEAT" for three times will cancel repeat function.

### 5.Number Key(0-9,10+)

For CD disc,

(1)To appoint 1-9 tracks, press the corresponding number keys(1-9)

(2)To appoint 10 track, press the number key (0)

(3)To appoint 10+ tracks, press the number key(10+). For example: the 15<sup>th</sup> song, press number key (10+) and (5).

(4)To appoint 20+ tracks, press the number key(10+) for twice. For example: the 25<sup>th</sup> song, press number key(10+) for twice time and press number key (5).

(5)If the track does not exist, the key is invalid.

For MP3 disc, press the number keys to select the tracks.

For example, the 38<sup>th</sup> song, press the number key(3) and number key(8).

### 8.Volume adjustment

Press the (VOL+) / + or (VOL-) / - button on the unit or on the remote control to adjust volume.

### 6.PREV/RW

In USB/CD/Bluetooth mode:short press to previous section. In FM mode: short press to previous station. In CD mode: Long press to quick return button to quickly rewind playback. Press Play/Pause key again to resume normal playback.

### 7.NEXT/FF

In USB/CD/Bluetooth mode:Short press to next section. In FM mode:Short press to next station. In CD mode: Long press to quick forward button to quickly advance playback. Press Play/Pause key again to resume normal playback.

## Mode selection

Bluetooth mode:

The first time you use your Bluetooth device with this player, you will need to connect or "pair" it with the player first.

Switch to the Bluetooth model, then use Bluetooth device to search the "YL-BT" pairing. There will be a prompt sound after the successful pairing. If the pairing device is disconnected, the unit will also issue a prompt sound.

FM mode:

When you switch the unit to the radio mode, you can listen to the FM radio program in this mode.

- 1.This radio antenna is on the back of the machine. When you need to listen to radio, please open the FM antenna.
- 2.In FM mode, press the play/pause key(▶||) on the unit or remote control to automatically search station. It will save the station once searching completed.
- 3.Press the "◀◀" or "▶▶" on the unit or remote control to select station.

LINE IN mode:

Switching to LINE IN mode, use 3.5mm audio cable to connect player with other audio output devices(such as:mobile phone, computer, etc)

USB MODE

- Insert USB flash driver then press the FUNCTION key or MODE key on the remote control to choose USB Mode

## Trouble Shooting

If you are suffering from following problem, please refer to following supplied method. If the problem still can't be solved, please contact the maintaining center.

Problem	Solution
No sound	<ol style="list-style-type: none"><li>1.To check the player connection between the mobile phone or other audio output device</li><li>2.The volume is turned down.Adjust the volume</li></ol>
Don't play disc	<ol style="list-style-type: none"><li>1.To check whether the disc is put in the proper direction.</li><li>2.To check whether there is disc in the tray.</li><li>3.The disc is dirty. Please clean the disc.</li></ol>
The remote control does not work	<ol style="list-style-type: none"><li>1.To remove obstacles between remote control and player.</li><li>2.If the battery is exhausted, replace it with a new one.</li><li>3.The insulation sheet has been inserted in the battery compartment when shipped from the factory. Pull it out before use.</li></ol>
Button does not work	It may be caused by the power wave or other abnormality, please turn off the power and turn it on again after 10seconds.

## Specification

<b>Reference</b>	BJ701B-CD
<b>Product type</b>	CD PLAYER
<b>Playable disc types</b>	CD/CD-R/CD-RW/MP3/WMA
<b>Loudspeakers</b>	20 Watts
<b>Bluetooth connectivity</b>	V5.0
<b>Bluetooth range</b>	10 meters
<b>Ports</b>	USB2.0 PORT SD/MMC SLOT CARD 3.5mm INPUT
<b>FM band</b>	87.5-108Hz
<b>AC power/DC power switch</b>	Input AC 100V~240V 50/60Hz Output DC 12V---1.5A
<b>Output voltage</b>	DC 12V
<b>Accessories included</b>	Remote control, 3.5mm audio cable and AC adaptor,

Note: Specification are subject to change without notice.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: 2AUW8-HIFI300