

W133B

Product Description



1. Processor: Intel® Core™ i5-8250U & i78550U optional;
2. Operating System: Windows 10 Home(64bit);
3. RAM: DDR3 8GB & 16GB optional;
4. Screen: 13.3" FHD IPS Screen with full capacitive Multi-touch. 1920*1080 resolutions allow you to watch HD movies, Play Games and more.
5. Camera: Built-in web camera that allow you to capture video, chat online, and more.
6. Speakers: Dual speakers with built-in high-quality sound allow you to listen to music, watch videos, and play games.
7. Audio jack: Combo jack for Headset & MIC.
8. USB Port: you can connect any devices (like Mouse, Keyboardetc.)
9. TYPE C port: Connect external transmission interface.
10. SD Port: Use SD card to store data.
11. WIFI: WIFI 802.11 b / g / n / ac makes you faster online.
12. Bluetooth: Version 4.2 allows you to connect devices faster.
13. Battery Li-Polymer:7.6V 4800 mAh high-capacity battery allows you to use longer.

Points for Attention

1. Do not use the player in exceptionally cold or hot, dusty, damp or dry environments.
2. Do not allow the player to fall down while using it.
3. Please charge your battery when
 - A. Battery power icon shows an empty icon;
 - B. The system automatically shuts down and the power is soon off when you switch on the unit once again;
 - C. There is no response if you operate on any key
4. Please do not disconnect power abruptly when the player is being formatted or in the process of uploading or downloading. Otherwise it may lead to the error in the program.
5. When this unit is used as a moving disk, the user shall store or export files in the proper file management operation method. Any improper operation method may lead to the loss of files, for which this Company will be held no liable.
6. Please do not dismantle this unit by yourself. If there is any inquiry, please contact the dealer.
7. There will be no separate notice in the case of any change in the functions and performance of this product.

Basic Operation

Power on

In the shutdown state, long press "ø" button boots

Power off

In the power on state, long press the "ø" key 3 seconds then pop-up device options, select "Power off" for shut down.

Sleep

the machine under normal operating conditions. Short press the power button, Into hibernation, Now, Screen will close. Short press the power button again, Be able to resume normal mode. When the time being use this MID can enable this feature when, To reduce power consumption.

Power reset

If there is shutdown to the player in the process of operation, you can turn off and restart the player by pressing "reset" key.

Screen time out

If you do not contact the player within the set time, and do no operate by the button, the contact screen will be automatically turns off.

In any state, short press "ø" button and for activation; Then skid the lock upwards to the green of spotted which will accomplish to access to the upper interface.

If it is necessary to deactivate the contact screen time out function, you can set the [Screen time out] option under [display] function into "Never".

Using the Micro SD card

After this unit is connected with the computer, you will find two moving disks. The first one is the built-in memory disk for this unit and the other is the disk for the Micro SD card. If no card is inserted, the second disk can not be opened. This unit **supports the extension of the Micro SD card from 4GB to 32GB.**

Inserting and Pulling out the Micro SD card

Inserting:

Put the Micro SD card face up (side with words), and slightly force the card into the socket of the card, i.e. connecting the unit. Under this state, you can play the content in the Micro SD card.

Pulling:

Slightly push the Micro SD, and it will bounce by a section, and then you can take it out.

Caution:

Please perform inserting and pulling operation when power is off! Otherwise, it will lead to the loss or damage to the files within the unit! If no card is inserted, the computer will be unable to perform read and write operation for the disk notes of the later removable disk (Micro SD card).

Battery:

High capacity Polymer battery is used for this unit.

The duration available of the battery power depends on volume, types of playing files and operation of batteries. The player can be set up by the user as "user define power off time" or "display setup" to save batteries.

Charging:

This unit can be recharged by adapter. you can also use DC Charger:

Take out the DC charger, plug it into the wall outlet with AC 220V(output current 2100mA, output voltage 19V)), then plug in the DC jack into the device DC-in jack.

Warnings for charging:

- 1. A new battery may be empty and not charged before you set the device.**
- 2. If the device is not used for long time, it is better to charge it to full capacity every 2 or 3 months during storage.**

Power adapter is a key component of the portable player, which play a crucial role in keeping the portable player's normal work and protecting your security when using the player. a long-term customer surveys and after-sales service Practice shows that the malfunction of the portable player In many cases were caused by using inappropriate accessories, in particular the power adapter.

Use the substandard power adapter will shorten the life of the portable player by considerably, the voltage instability will seriously affected the normal work of the portable player and bring permanent damage on the player's performance and reliability. Use the substandard power adapter will also reduced the vocal quality of the players, shutdown the player when you using it. In addition, Use the substandard power adapter will cause combustion and explosion which will disserve the safety of the consumers.

Setting up your laptop

1:Connect the laptop to AC mains with adapter

2. After charging the battery, press and hold the power button for up to5 seconds until the pattern is displayed.

IMPORTANT: If the battery image is not displayed on the screen, press the power button briefly to display the image, and then press and hold the power button until the logo is displayed.

3.Follow the on-screen instructions to select a language and a wireless network.

Lock and unlock Turn off the laptop

Lock—Press the power button. Press and hold the power button,

Unlock—Press the power button to touch **Power off**.

turn on the laptop, then place your If your laptop becomes unresponsive, finger on the lock icon  and slide press and hold the power button for the icon to the unlock  position several seconds to turn off the laptop.

Back—Opens the previous screen.

Home—Opens or returns to the Home screen.

Google **Search**—Allows you to type one or more keywords to search.

 **Voice search**—Allows you to speak one or more keywords to search with the installed search wep.

*The search feature varies by model and country.

FCC Warning Statement Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.