

# NUBO Rosetta

## User Guide



· Components	.....	1
· Name of each part	.....	1
· How to use	.....	2

## Components


---



- Nouveau Rosetta Body
- User guide

## Name of each part

---

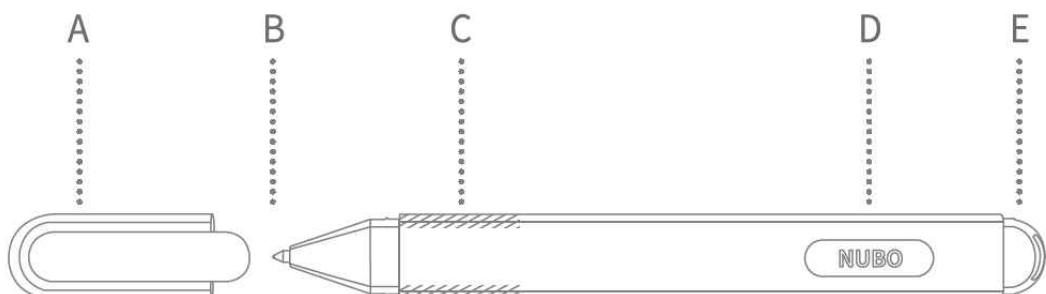

- A. Pen lid
- B. Ballpoint pen refill
- C. Touchpad
- D. Display
- E. Micro 5pin Charging port

## 1. Power management


- Holding the pen in low power mode turns it on.  
    ⟨The text “nubo” (default) appears on the pen's display and motion begins with vibration.⟩
- After 3 minutes of inactivity, the pen will go into low-power mode to minimize power consumption.  
    ⟨The text “Sleep mode” appears on the pen's display and the operation ends.⟩
- If the battery is low, the text “Low battery” will be displayed instead of the words.  
    ⟨If the battery is almost empty, the operation ends immediately after the text “Low battery” and “Sleep mode” appear.⟩
- Charging is easy using Micro-B type (5 PIN), and it takes about 50 minutes to fully charge.  
    If the charger is connected when the power is off, it will automatically turn on.  
    ⟨The text “Charging” appears on the pen's display when charging, and the text “Full” appears when fully charged.⟩

## 2. How it works

- The foreign language appears on the display every minute without having to rub or shake the pen.  
    ⟨The foreign language output cycle can be changed in the app. 0 to 5 minutes, initial value 1 minute⟩

### 2-1. Word and Meaning Output

- Shake the pen or rub the side part (within 300 ms) in the direction of the arrow as shown below  
    Foreign languages are output.
- If you shake the pen or rub the side in the direction of the arrow once more (within 300 ms) while the foreign language is output, the meaning is output.  
    ⟨Words that confirm the meaning are classified as US memorized words and are exposed more frequently. Created and can be checked. (Up to 200)⟩

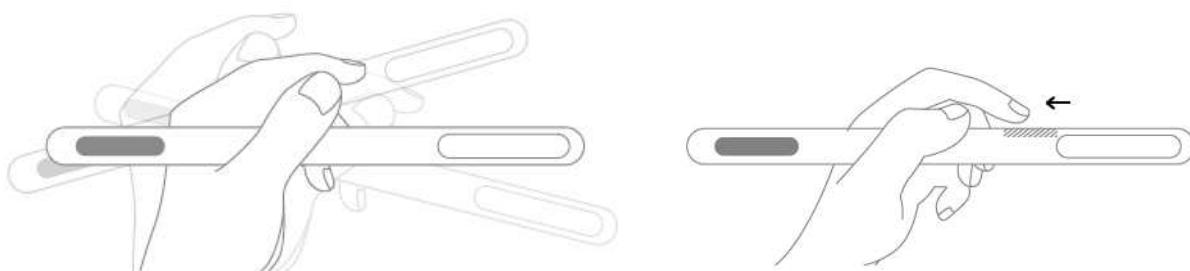

## How to use

---


### 2-2. Memorization words

- When the foreign language and meaning are output, rub them in the direction of the arrow as shown below to classify them as memorized words.

«The text “Erase a word” is printed and classified as a memorized word and no longer exposed.»

- If you have memorized all the words, the text “Memorized all” is displayed.

«We recommend updating to higher level words.»

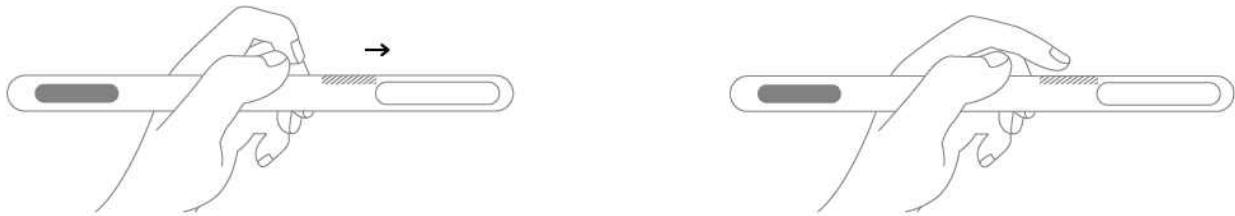

### 3. Timer function

- Rub the pen side twice in the direction of the arrow as shown below to activate the timer.

The setting unit is (minutes), and the timer can be set by touching the front / rear of the pen side.

After setting the timer time, swipe the pen once inward to start the timer.

«Start” text appears and vibrates once»

- The timer will end when you rub the pen inwards twice during the timer operation or when the set time is up.

«End” text appears, vibrate 3 short beeps»



### 4. Learn time measurement

- If you hold the pen without a separate device, the usage time is measured.

The usage time can be checked at a glance with a graph in the app.

## FCC Information

This device complies with part 15 of the FCC Results. Operation is subject to the following two conditions :

- (1) This Device may not cause harmful interface, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for CLASS B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

- 1.1. Reorient or relocate the receiving antenna.
- 1.2. Increase the separation between the equipment and receiver.
- 1.3. Connect the equipment into an outlet on a circuit different from that to which receiver is connected.
- 1.4. Consult the dealer or experienced radio/TV technician for help.

## WARNING

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

## “CAUTION : Exposure to Radio Frequency Radiation.

Antenna shall be mounted in such a manner to minimize the potential for human contact during normal operation. The antenna should not be contacted during operation to avoid the possibility of exceeding the FCC radio frequency exposure limit.