


TWS Mini Wireless Speaker User Manual

Model#: JT892
TWS Version

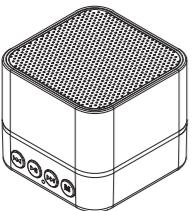

Dear customer:
Thank you for purchasing Mini Wireless Speaker.
Please read this user guide carefully before operation
and save these instructions for future reference.

Packaging included:
1. Mini Wireless Speaker.....1 pc
2. Charging Cable (FM antenna).....1 pc
3. User manual1 pc

Features:

- Active Suspension Lighting Effect.
- Aluminum Case.
- Captivating Sound, Glowing Design.
- TWS Technology.




Features:



SPECIFICATIONS:

- Model #: JT892
- Bluetooth®QIDID
- Declaration ID:
- FCC ID: 2AUZO-JT892
- Output Power: 3W
- Battery: 300mAh
- Product Size: 71x42mm
- Music Play time: Up to 2.5 hours
- Speaker Output: Frequency range: 150Hz - 20KHz

Function Keys:

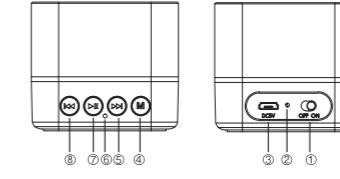

1. Power ON/OFF
2. LED indicator
3. Charging port
4. Mode Switch / TWS Connection
5. Vol+ / Next Song
6. Mic
7. Play / Pause / Phone
8. Vol- / Previous Song

ON/OFF

Slide ON/OFF switch to turn ON or turn OFF the speaker. The blue light will blink when speaker is turned ON.

BLUETOOTH PAIRING

1. Slide the ON/OFF switch to the right.
2. You will hear sound message "pair on", the bluetooth device is ready to pair, speaker is now in pairing mode.
3. Place the speaker and Bluetooth device (phone or music device) so that they are no further than 1 meter apart.
4. Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instruction manual to enable Bluetooth on your device.
5. Select the speaker "Mini Speaker" from the list of available Bluetooth devices.
6. Once paired successfully, you will hear the confirmation sound message "the bluetooth device is connected successfully". If pairing is unsuccessful, turn off the speaker first and then re-pair following the above steps.
7. Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. The speaker will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.

The TWS technology enables you to use 2 speakers pairing via Bluetooth to create a wireless dual-channel system to deliver true stereo sound effect.

TWS Connection Operation (only for TWS version mode)

TWS connection allows simply 2 speakers to be connected at the same time.

The new TWS connection is applicable without Bluetooth connection with either of speakers. Disconnect it or disable Bluetooth function on your device before operating following steps.

1. Place 2 speakers near each other, the distance should not be further than 1 meter.
2. Turn ON 2 speakers and enter directly into "Bluetooth mode", select one as MASTER speaker, press and hold the button "M" till you hear indication tone, then press and hold the button "M" of another speaker till to hear indication tone. The TWS connection is successful when both speakers has a indication tone at the same time.

3. Enable Bluetooth on your device and select and connect the speaker "Mini Speaker" from the list of available Bluetooth devices.
4. The streaming music will be played simultaneously on both speaker, turn OFF Master Speaker, another speaker stops playing music.
5. If you want to change Master Speaker or make a new TWS connection with another speaker, please follow the steps outlined above.

Disconnect TWS Connection and Resume

Press and hold the "M" button of either one of speakers till to hear indication tone, the TWS connection is disconnected. Only Master Speaker keeps Bluetooth connection with your device and play music.

Press and hold "M" button of MASTER SPEAKER till to hear indication tone, and wait till to an indication tone on both speaker to resume TWS connection.

PLAY MUSIC

1. Short press "Play/Pause/Phone" button to pause music or to answer a call. Short press again to resume music play.
2. In Bluetooth Mode, short press "Vol-/Previous song" button to skip to the previous song. Hold this button down for longer to decrease the volume.
3. In Bluetooth Mode, short press "Vol-/Next song" button to skip to next song. Hold this button down for longer to increase the volume.

Hands Free Phone Call Operation

1. Short press "Play/Pause/Phone" button to answer an incoming call. Long press to reject the call.
2. Short press "Play/Pause/Phone" button to hang up the active call.
3. Double press "Play/Pause/Phone" button to re-dial the last call.

MODE SWITCH

Short press "M" button to switch through different modes by following below orders: Bluetooth - FM - Bluetooth

FM RADIO

1. Turn ON the speaker and press "M" button to hear "Radio Mode".
2. Plug the USB charging cable (included) to the DC 5V charging port of speaker, this cable serves as FM Antenna as well.
3. Press and hold down longer "M" button and device will automatically search and store all the FM Radio stations.
4. Short press "<" and ">" button to change the FM Radio station.
5. Long press "<" and ">" button to decrease or increase the volume.

CHARGING

The speaker includes a built-in rechargeable battery. It is recommended to charge the battery fully prior to first use. Connect the USB cable to a computer or other USB charging port and the micro USB plug into charging port of the speaker. A red light turns ON during charging and turns OFF after full charged.

IMPORTANT NOTES

1. This product is not a toy.
2. Do not drop or damage the speaker.
3. Do not use in humid or extreme temperatures.
4. Do not place the speaker near an open flame.
5. Do not block the sound of the speaker while it is in use.
6. Do not use the unit if it has been dropped or damaged in any way.
7. If damaged, do not attempt to repair or disassemble the speaker.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Free
music



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2AUZO-JT892

- Do not expose battery to heat sources, extended direct sunlight or other high temperature environment.
- Avoid drops and excessive impacts to the battery.
- Do not disassemble, attempt to repair or replace any part of the housing or battery.
- Do not attempt to charge the battery using any other method, apparatus, or connections other than the device's charging cable.
- Never dispose of batteries in the garbage. This is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center.

FCC Compliance: warning: changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

颜色: 灰色印刷

材质:100g书写纸, 双面印刷

要求:字迹清晰,颜色饱满,裁切位置准确,

无杂色和漏白现象.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by HK JIATAI ELECTRON LIMITED may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.