
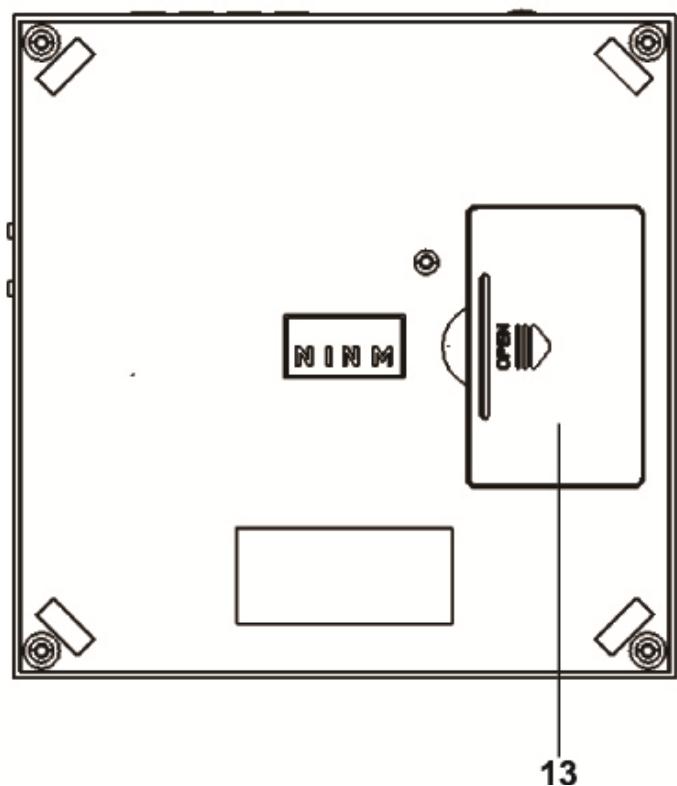
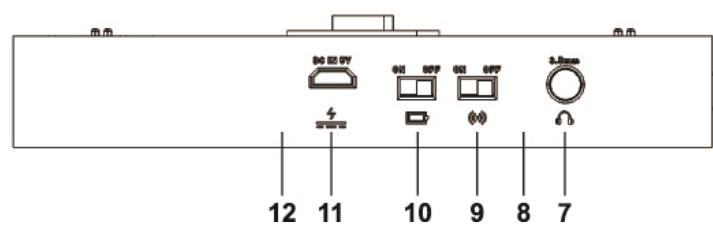


## Long Time No See CD Player Manual

### CONTROLS

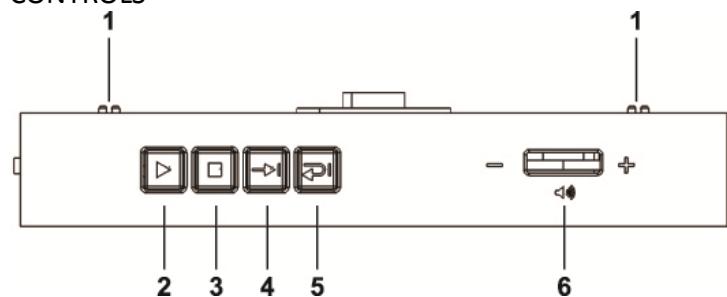

1. 2-Pins Contact Points
2. PLAY/PAUSE button
3. STOP/OFF button
4. Skip/Search(Forwards) Buttons
5. Skip/Search(Backwards) Buttons
6. Volume Control
7. 3.5mm Earphone Jack

8. Power LED & Bluetooth LED
9. Bluetooth Switch
10. Battery Charging Switch
11. Micro USB Charging Jack
12. Charging LED
13. Battery Compartment Cover

Power:

1. This item is powered by either two AA batteries (not included) or Micro USB 5V adaptor (not included).
2. Open the battery compartment on the back of the player.
3. Insert two AA batteries according to the polarity. Close the battery door.
4. Never mix old and new batteries. Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.
5. If you are not planning to use your MP3/CD Player for an extended period of time, always remove the batteries. Old or leaking batteries can cause damage to the unit and may void the warranty.
6. When using your own Micro USB adaptor (not supplied) the item will automatically stop using battery power.

Operating Instructions:

Loading a CD:

- Open the CD Door. Load the CD into the player (label side up).

Playing a CD:

- Connect your earphones to the Earphones Jack or cover speaker cover (align 2-pin contact points).
- Press the Play/Pause button to play the loaded CD. (White power LED will light up)
- Press the Play/Pause button to pause the playback anytime you want. Press the Play/Pause button again to resume playback.

Skip/Search when playing a CD:

- Press the  button one or more times to skip forward to the desired track.
- Press and hold the  button to fast forward the current track.
- Press the  button one or more times to skip backward to the desired track.
- Press and hold the  button to scroll backward in the current track.

Stopping a CD:

- Press the Stop button at any time to stop the CD during playback.

Changing a CD:

- Press the Stop button 2 times to switch off the CD player. (White power LED will light off)
- Replace the CD press the Play/Pause button to play the loaded CD.

**IMPORTANT!**

NEVER TOUCH THE CD DISC WHEN CD PLAYING!!

Bluetooth function:

- Power on your Bluetooth Speakers or Bluetooth Headphones.
- Slide the BT ON/OFF switch to “ON” position, the BT LED indicator will be flashing.(Blue LED)
- The connecting process can be taking up to 10 seconds
- When the connecting process is completed, the BT LED Indicator (Blue LED) will light on.
- You can now listen to the music on the CD by using your Bluetooth Speakers or Bluetooth Headphones.

If bluetooth keep disconnected please change the batteries or recharge the rechargeable batteries.

#### Charging function:

- Use Micro USB 5V adaptor (not included) connect to the Micro USB Charging Jack.
- Slide the Battery Charging ON/OFF switch to “ON” .
- Charging LED Indicator (WhiteLED) will light on while battery charging.
- Charging LED Indicator (WhiteLED) will light off while battery fully charged.

#### IMPORTANT!

Never Charging the standard alkaline batteries, charging function only for rechargeable batteries!!

#### WARNING!

- Please do not use earphones while driving, cycling or operating any motorised vehicle.
- Do not play your earphones at high volume while walking, especially when crossing roads as this can be dangerous.
- Avoid using earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.
- Always keep volume at a moderate level so you are able to hear outside sounds and take those around you into consideration.
- Keep clean using a soft, dry cloth.
- Never immerse in water.

#### Care & Maintenance

- Clean with a soft, damp cloth slightly moistened with water or a mild detergent.
- Do not use any chemical cleaners such as alcohol, benzine or thinners.
- Never leave the CD Player in direct sunlight or in hot, humid or dusty places.
- Keep the MP3/CD Player away from heating appliances and sources of electrical noise such as fluorescent lamps and motors.

#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 5mm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.