

USER MANUAL

Blue-Tooth/USB/SD Card/Radio
Bluetooth Speaker
BB2726

*Thank you for purchasing our products.
*For obtaining the best performance and safety, giving full play to all the functions of this machine, please read the introduction carefully before use and then complete the product setup correctly.
*Please keep the introduction properly for your future reference.

TROUBLE SHOOTING

Problem	Possible Cause	Solution
No Sound (Both Speakers)	Power is not turn on or in standby mode	Switch on the power
	No power in the electrical socket/outlet	Have the electrical socket/output checked
	The main volume is turned down	Turn up the volume
No Bluetooth	Not set in the state of bluetooth	Set it to Bluetooth
	The Frequency without docking	Bluetooth scanning and connection
USB or SD card can not work	USB or SD card is broken or not compatible	Change the USB/SD card
	Song format is not compatible	Change the music
	Equipment documents is chaos	Formatting storage devices, copy useful songs
Voice distortion	The volume is too high	Lower the volume
Humming/Buzzing sound	Bass and treble was not adjusted well	Re-adjust the bass and treble control
Karaoke	No voice	The volume of the microphone is set to low
	Howling Noise	The microphone is too close to the speakers
	No Echo	The echo key is set in low or turned off

SAFTY MEASURE

- 1.Put the speaker in a ventilated place, and keep the vent a distance from the wall, not blocked.
- 2.Do not put the speaker near fire or a hot object.
- 3.Avoid liquid falling or flowing onto the speaker
- 4.Dont compress or scrape the power cable. Pull out the power cable after using or recharging.
- 5.Pull out the plug immediately if peculiar smell or smoke is discovered, then stop using and repair.
- 6.Do not open speaker without professional proposal, as there is high voltage installation inside.
- 7.Do not use a volatile liquid to clean the speaker, such as alcohol, coating, diluents, or petrol. Use a dry and clean cloth.

Front panel operation instruction


1. VOLUME: To adjust the main volume.
- 2.CARD: SD card reader.
- 3.USB: USB reader.
- 4 .Remote Receiving window
(in the front board, some models do not have remote control)

Rear panel operation instruction

- 1.Power switch: Used to open or close the speaker power.
- 2.Power Input Line is used to supply the speaker inner power.

FRONT PANEL INTRODUCTION

- ① Volume
- ② CHARGE LED
- ③ The charging interface
- ④ Line In
- ⑤ Previous
- ⑥ Play/pause
- ⑦ The next song
- ⑧ Input
- ⑨ Usb
- ⑩ Microphone input
- ⑪ Display screen

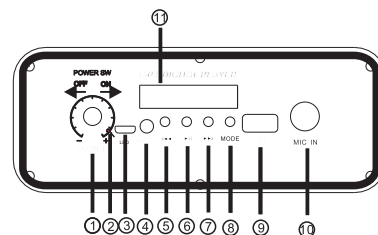

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.