


Mini switch pro controller
USER MANUAL

Congratulations on your purchase! This manual includes information on the Mini Wireless Controller. We encourage you to take a few minutes to read this manual, which describes the product and includes step-by-step instructions to help you to set up and get started. It is important to read and understand all the safety instructions before using your product.

If you have any questions about this product or its operation, please contact the retailer or contact us at support@biogenikdesigns.com.

Product Image:

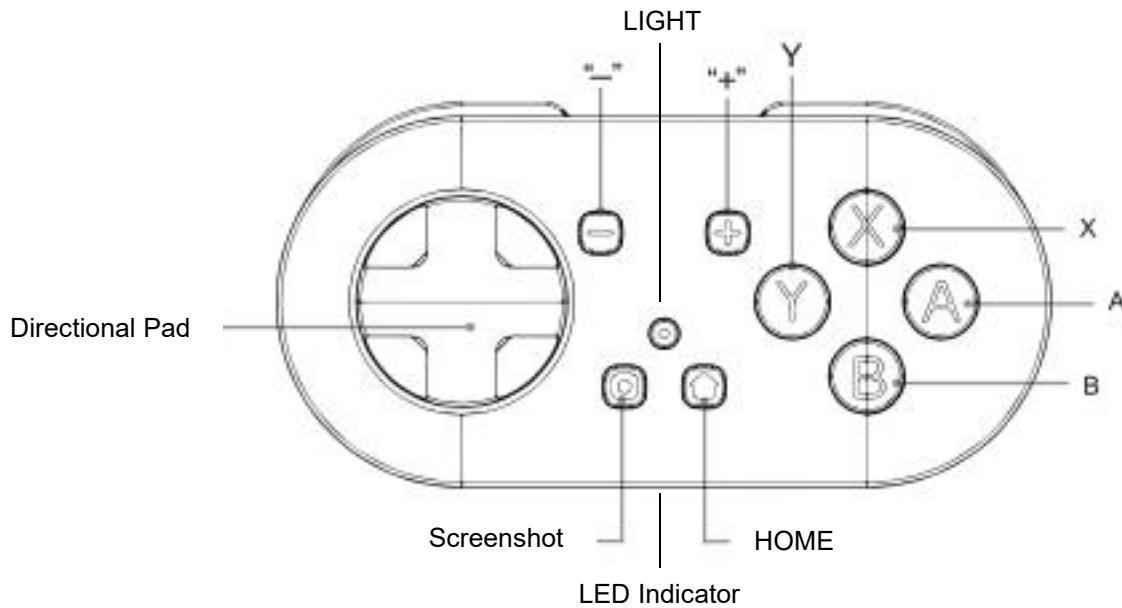

Package Contents:

- 1 x Mini Wireless Controller
- 1 x User Manual
- 1 x Warranty Card

Precaution & Maintenance:

Before use, please read the following important safety information. Following these simple guidelines will ensure trouble-free operation and optimal performance of the product and compatible electronic devices. Improper use may cause the product to stop working and may even cause serious injury to the user.

- This product is intended for private, non-commercial use only.
- Use the product for its intended purpose only.
- Failure to follow these directions may void the warranty.
- For indoor use only.
- Avoid exposure to external heat sources; direct, prolonged sunlight; dust; corrosive chemicals; and moisture.
- Storage temperature should be between 41°F – 86°F (5°C – 30°C).
- Always grip the plug firmly when connecting/disconnecting the charge cable.
- Do not drop or subject the product to undue shock.
- Keep this product out of the reach of small children.
- Dispose of packaging material according to applicable local regulations.
- Do not attempt to service or disassemble the product. Attempting to disassemble or service the unit could result in an electrical hazard, including injury from exposure to shock. If you experience problems with the unit, discontinue use and contact support for assistance. Attempting to open or service the unit voids all warranties, express or implied.

Product Specifications:

- **Bluetooth Version:** 2.1
- **Operating Distance:** <8m
- **Battery:** 3.7V / 200mAh Li-Polymer
- **Working Voltage:** 3.7V-4.2V
- **Battery Life:** approximately 3.5 hours (after full charge)
- **Charging Time:** 1-2 hours
- **Charging Method:** USB-C (charge cable not included)
- **Gyro Motion Control:** not supported

How to Pair Controller:

- **NINTENDO SWITCH:** Go to the Switch Home Page to click on 'Controllers', then click on 'Change Grip/Order'. Press and hold 'Y' button + 'HOME' button simultaneously on the mini wireless controller. Once connection is successful, the LED indicator light located on the bottom of the controller will illuminate blue.
- **ANDROID:** Press and hold 'X' button + 'HOME' button simultaneously on the mini wireless controller. Go to your Android device's Bluetooth settings and pair with the mini wireless controller. Please note, the device name will appear as 'Gamepad'. Once connection is successful, the LED indicator light located on the bottom of the controller will illuminate pink.
Compatible with Android 7.0 and above.
- **APPLE iOS:** Press and hold 'B' button + 'HOME' button simultaneously on the mini wireless controller. Go to your Apple device's Bluetooth settings and pair with the mini wireless controller. Please note, the device name will appear as 'Xbox Wireless Controller'. Once connection is successful, the LED indicator light located on the bottom of the controller will illuminate yellow.

Compatible with iOS 13 and above.

- **APPLE macOS:** Press and hold 'B' button + 'HOME' button simultaneously on the mini wireless controller. Go to your Apple device's Bluetooth settings and pair with the mini wireless controller. Please note, the device name will appear as 'Xbox Wireless Controller'. Once connection is successful, the LED indicator light located on the bottom of the controller will illuminate yellow.

Compatible with macOS Ventura 13 and above.

- **WINDOWS PC XInput:** Press and hold 'B' button + 'HOME' button simultaneously on the mini wireless controller. Go to your Windows device's Bluetooth settings and pair with the mini wireless controller. Please note, the device name will appear as 'Xbox Wireless Controller'. Once connection is successful, the LED indicator light located on the bottom of the controller will illuminate yellow.

Compatible with Windows 7 and above.

- **WINDOWS PC DInput:** Press and hold 'A' button + 'HOME' button simultaneously on the mini wireless controller. Go to your Windows device's settings and pair with the mini wireless controller. Please note, the device name will appear as 'Gamepad'. Once connection is successful, the LED indicator light located on the bottom of the controller will illuminate green.

Compatible with Windows 7 and above.

Please note, this product can only be used as a wireless controller, and it does not support being used as a wired controller.

Automatic Sleep Mode:

- If pairing is not completed in under 2 ½ minutes, the controller will turn off.
- If the controller is paired and has no operation for over 5 minutes, the controller will turn off.
- If the controller is in Bluetooth mode, press the 'HOME' button for 3 seconds to manually disconnect it from the host and put the controller in sleep mode.

Battery Status:

- **Low Battery:** The LED indicator light located on the bottom of the controller will quickly flash red.
- **Charging:** The LED indicator light between located on the bottom of the controller will quickly flash.
- **Charging Complete:** The LED indicator light located on the bottom of the controller will remain on.

How to Change Lighting Modes:

- **SINGLE COLOUR:** Press and hold 'LIGHT' button + single click 'L' button, press the 'LIGHT' button to change the colour (Red, Yellow, Blue, Green, Purple, Orange, Pink & Rainbow)
- **SINGLE COLOUR BREATHING:** Press and hold 'LIGHT' button + single click 'A' button, press the 'LIGHT' button to change the colour (Red, Yellow, Blue, Green, Purple, Orange, Pink)
- **MULTI COLOUR BREATHING:** Press and hold 'LIGHT' button + double click 'A' button, the light colour will continuously change (Red, Yellow, Blue, Green, Purple, Orange, Pink)
- **SINGLE COLOUR CLOCKWISE FLOW:** Press and hold 'LIGHT' button + single click 'B' button, press the 'LIGHT' button to change the colour (Red, Yellow, Blue, Green, Purple, Orange, Pink)
- **MULTI COLOUR CLOCKWISE FLOW:** Press and hold 'LIGHT' button + double click 'B' button, the light

colour will continuously change (Red, Yellow, Blue, Green, Purple, Orange, Pink)

- **SINGLE COLOUR MIDDLE TO SIDE FLOW:** Press and hold 'LIGHT' button + single click 'X' button, press the 'LIGHT' button to change the colour (Red, Yellow, Blue, Green, Purple, Orange, Pink)
- **TWO COLOUR CLOCKWISE FLOW:** Press and hold 'LIGHT' button + single click 'Y' button, the light colour will continuously change (Red & Blue, Yellow & Purple, Green & Pink, Purple & Green, Orange & Purple, Red & Green, Blue & Yellow, Green & Pink, Green & Blue)
- **ON/OFF:** Double click 'LIGHT' button

How to Switch Button Functions:

- Press and hold 'LIGHT" button + single click "-" button to switch the 'Directional Pad' button function to "Analog Joystick" button function. Repeat these steps to change the button function back.
- Press and hold 'LIGHT' button + single click "+" button to switch the Z/L button function to "ZL/ZR" button function. Repeat these steps to change the button function back.

How to Configure Controller Using the KEYLINKER APP:

The KEYLINKER APP allows you to reconfigure the buttons on the controller.

1. Download KEYLINKER APP on a mobile device.
2. Open KEYLINKER APP on mobile device and turn on the wireless controller.
3. On the KEYLINKER APP select the name of the wireless controller you want to pair from the list of detected devices.
4. Once successfully paired, you should be able to select the 'gear' icon (shown beside the name of the wireless controller you selected) to enter the customization interface.
5. After completing any changes, click Apply. The updated functions will not take effect until saved.



FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

- English: "

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device."

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

- French:"

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil nedoit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

Déclaration d'avertissement RF :

L'appareil a été évalué pour répondre aux exigences générales en matière d'exposition aux radiofréquences. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.