

Smart Multi-function Wireless Music Flower Pot

Z302



Warning: read the instructions carefully before use

- 01 -

Thanks for selecting this Bluetooth speaker flowerpot; in order to let you are easy to experience this product, we equip it with instructions of detailed contents, from which you can get knowledge for introduction of related products, method of application, etc aspects; before using the machine, please firstly read the instruction carefully and if there is printing error or translation error, we beg for users forgiving.

Product module of this Smart Multi-function Wireless Music Flower Pot is: 302, which is a kind of product that possesses two functions: speaker function and planter function; these two functions can not be split.

I. Announcements

In order to let the users use the product correctly and in order to ensure well product property, please read it carefully and obey it:

- Be sure not to hit the main engine heavily.
- The plant needs to be planted into the planting basket before putting it into the machine; be sure not to plant it directly on the machine.
- Be sure not to contact benzene, diluent, etc chemicals.
- Please do not be close to high-intensity magnetic field and power field.
- Be sure not to tear down, repair and remould in proper motion.
- Pay attention to using conditions; the product can not be placed in places of high humidity for too long time.
- Be sure not to listen to it with too big volume in order to avoid causing bad effect.
- Please classify and duly handle waste package, battery and old electric products.

II. Functional Characteristics

[Bluetooth distance] maximum receiving distance is 15m.

[Bluetooth call] Pause the broadcasting of music when there comes the call and at this time call is not allowed.

[MP3 broadcast] Directly broadcast the MP3 document stored in the U disk.

[FM radio] None

[Audio input] None

- 02 -

[Break-point memory] Automatically memorize the chapter for the last time quitting as well as the volume size.

[Internally-installed battery] It is internally installed with chargeable battery, which is environmental protection, energy-saving and practical.

(Planting basket).W*H=8*9.5*7.5

(Planting water tank) suggested water level does not exceed highest point of viewing window, which is about 375ml

III. Operation of broadcasting music

1. It automatically detect and recognize external equipment when the machine starts; after the machine starts, it enters Bluetooth/USB mode.
2. USB has priority broadcasting function; plugging in the U disk in the midway of Bluetooth broadcasting will automatically shift to U disk broadcasting.
3. There are multiple documents to store music in the U disk, which will broadcast music in loop according to the arranging sequence in the U disk.

IV. Definition of key and jack socket function for product (regard the material object as the criterion)

1. [▶ii]: Press the key for long time to turn on/off the machine; press the key for short time to pause/broadcast.
2. [-]: Volume adjustment Small/Previous song.
3. Press for short time: Previous song; Press for long time: adjust volume to reduce.
4. [+]: Volume adjustment Big/Next song.
5. Press for short time: Next song; Press for long time: adjust volume to increase.
6. [USB hole]: U disk jack socket, plug in the U disk can broadcast the music in it
7. (Micro USB hole): Charging jack.

V. Introduction of Indicating Light

Charging indicating light: It shows red when charging and it shows green when it charges to be full.

Blue indicating light: It blinks quickly when waiting for connection, the frequency is about

- 03 -

0.2s; it lights for long after the connection is successful; it blinks slowly during Bluetooth broadcasting and U disk broadcasting; it lights for long when it stops broadcasting.

VI. Connecting Method of Bluetooth:

1. It automatically enters Bluetooth mode when the machine is turned on or the U disk is plugged off; at this time LED indicating light blinks quickly.
2. Open the Bluetooth function of mobile devices (mobile phone, computer, etc); search Bluetooth device "knz302".
3. Click with manual operation, the device automatically pair and connect; if the connection is successful, it will give out a sound of "trickle".
4. The successfully paired device will automatically connect in the next time turning on.

VII. Method of Application for the Flowerpot Function:

1. Take off the planting basket, penetrate the cotton rope into the cotton rope hole of blue base; be sure not to directly plant it into the machine to avoid soil dust from falling into speaker part and avoid from smearing or damaging the speaker.
2. Firstly add about 1cm thickness soil at the bottom of the planting basket then lift up the cotton rope a little, which can increase the contacting surface between cotton rope and soil to absorb the moisture better.
3. Supplement the filling soil to fix the plant after planting the plant in the planting basket.
4. Finally, arranging moss or pebble on the soil surface can enhance viewing value.

VIII. Method of Application for Charging

Plug one end of power line into the Micro USB hole socket of the machine and plug the other end into USB interface of the computer or into the connecting standard charge jack of 5V 1000mA, the indicating light is red when it is under charging and after it charges fully, the indicating light is green.

The machine is internally installed with overcharge protection circuit, which can be used for long time connecting computer or charger; it takes about 3 hours to fully charge the battery; every time's duration of flight for the battery will be different with the volume size of using time.

IX. Voice Prompt Statement:

1. The Bluetooth is successfully connected: trickle for one time.

- 04 -

2. The electric quantity is too low: electric quantity is too low, please charge.
 3. The volume is maximum: trickle trickle trickle.
 4. Shutdown: trickle for one time.

X. The battery is of low electricity

When the electric quantity appears low electricity, the system will firstly hint charging in voice form; at this time, please charge in time; if the charging is not in time, it will automatically turned off; if you do not use the machine for long time, you need to charge it for at least one time per month, which can protect the battery and prolong the battery service life.

XI. Trouble Shooting

Q: It automatically shuts down when it turns on?
 A: Battery electric quantity is not enough, please charge in time; we suggest to use it after charging for 2 hours.
 Q: It automatically shuts down or resets after the broadcasting blue light blinks quickly always?
 A: Battery electric quantity is not enough, please charge in time; we suggest to use it after charging for 2 hours.
 Q: No possible to charge?
 A: Please use the distributed charging line of the machine and confirm the voltage of the connected in USB interface is normal.
 Q: The loudspeaker has no voice?
 A: Confirm if it is under broadcasting status and adjust to the proper volume.
 Q: The Bluetooth will not connect automatically?
 A: 1. Only the paired device will connect automatically.
 2. If the Bluetooth device is open after the speaker enters Bluetooth for 10 seconds, the speaker will not connect automatically.
 3. After the Bluetooth is connected successfully, if you turn off the Bluetooth device in the midway and re-turn on it, it will not connect automatically.
 4. Detailed method of application for the Bluetooth, please refer to "Article 6" of the instruction.
 Q: The Bluetooth has no voice?
 A: 1. Please confirm if the Bluetooth has been connected successfully.

1.If the Bluetooth device volume has been opened.
 Q: The key does not have function or the function is wrong?
 A: Turn on the machine after turn off it, then use the toothpick, etc tiny articles to plug in the restoration hole of the key, it can be restored.

XII. Technical Specification

Rated IMPEDANCE	4Ω±15% (DCR 3.6Ω±10%)	At 800Hz 1.0V
PESONANCE FREQUENCY	150±20%Hz	At 1.0V
Rated Power	3W	At 3.46V
MAX POWER	5W	At 4.47V
Output S.P.L	84±3dB at 1W/ 1M	At500 1000 2000. 4000Hz average
Frequency response curve	F0~15KHz	Deviation-10db from average S.P.L
Rub&Buzz	Should not be audible buzz and rattle	Sine WAVE at 3.46 V/F0~2KHz
Distortion	≤5%THD	At 1KHZ 1m/1W
Polarity	When a positive D.C current is applied to the voice coil terminal marked +,the diaphragm shall move forward.	
Magnet Size	Φ15.5*4 Φ15.2*2	
Net Weight	545.4g	
Dimension	L*W*H=230mm*110mm*115.5mm	

Package Accessories

Smart Flower Pot	1set
Absorbent cotton rope	1stripe
USB cable	1stripe
Instruction (Attached with warranty card and certificate of quality)	1portion

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.