

**Test positions for body:**

According to the antenna position, the Body SAR is tested at the following 5 test positions all with the distance =0mm between the EUT and the phantom bottom :

Phantom in body position	Ground in body position
	
<b>EUT Setup Configuration 1</b>	<b>EUT Setup Configuration 2</b>
<b>left Side in body position</b>	<b>right Side in body position</b>
	
<b>EUT Setup Configuration 3</b>	<b>EUT Setup Configuration 4</b>
<b>Top Side in body position</b>	
	
<b>EUT Setup Configuration 5</b>	