

(Not suitable for children under 8 years old)



Instruction manual

Remote control watch



Caution:

The remote control watch shall only suitable to our cars. Pictures in the manual are for reference only, actual product shall prevail.



Battery Warning

- Battery type: The product is powered by 150mAh 3.7V rechargeable battery pack.
- Take out and put in the batteries in the right way.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the controller.
- The supply terminals are not to be short-circuited.
- Recharge only under adult supervision.
- Do not use rechargeable batteries.
- The power terminals shall never encounter short circuit.

Small parts warning: Choking hazard- small parts.

 
Not for children under 3 years.

Keep packaging for reference as it contains important information



Charge with the USB cable.

Plug one end of the USB cable into the computer's USB socket and the other end into the charging socket of the remote control watch, and the charging indicator light of the remote control watch will be on. After about 240 minutes, when the remote control watch is fully charged, the charging indicator light will be off, indicating that the charging is completed. 5 minutes later, the product can be used normally.

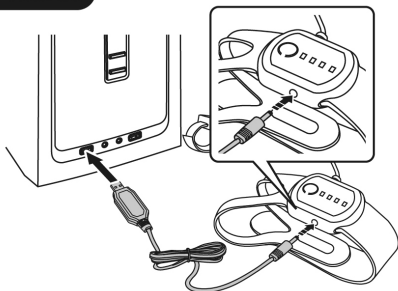


Caution:

When not playing, please turn off the power of the remote control.



Description of functions of remote controller

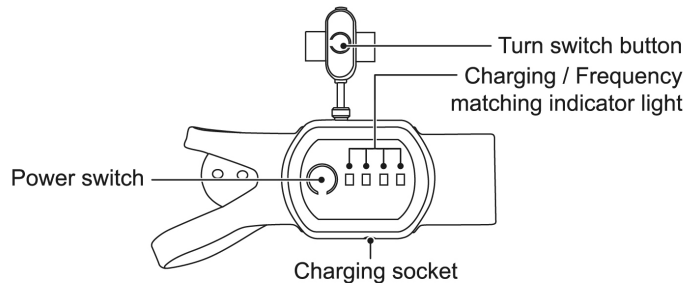

Demonstration and description of functions

Power on: Push the on/off switch of the remote control car to "ON", and long press the on/off switch of the remote control to "⏻", so that the frequency matching indicator lights flash and the remote control is powered on. When the frequency matching indicator lights flash in an alternate manner, the frequency is successfully matched. When the frequency matching indicator lights flash together, the frequency matching fails. Please power off the remote control car and remote control watch and then power them on again to re-match the frequency.


Remote control distance: No less than 15m.

Use time: When the remote control watch is fully charged, it can be used for about 30 minutes.

1. Forward

As shown, tilt the watch forward to drive the remote control car forward.


Forward

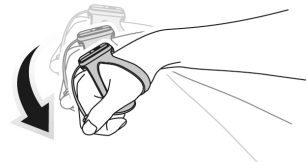

2. Backward

As shown, tilt the watch backward to drive the remote control car backward.

 
Backward

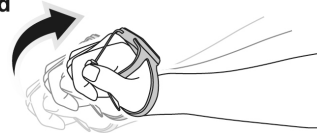

3. Left drift

As shown, tilt the watch to the left to make the remote control car drift to the left.

 
Left drift

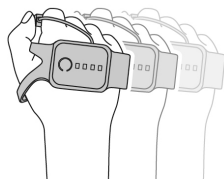

4. Right drift

As shown, tilt the watch to the right to make the remote control car drift to the right.

 Right drift

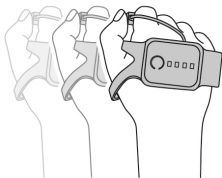


Press once the "Turn Switch" button to switch from the "Left/Right Drift" mode to "Left /Right Spin" mode.

5. Left Spin

As shown, tilt the watch to the left to turn the remote control car to the left.

 
Left Spin

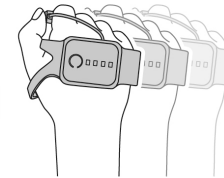

6. Right Spin

As shown, tilt the watch to the right to turn the remote control car to the right.

 
Right Spin

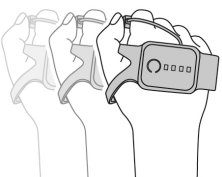

7. loudspeaker/Air-released (Only for Z109 series)

Move the remote control watch downward and then the remote control car will hoot and spray at the rear of the car.

 loudspeaker/ Air-released

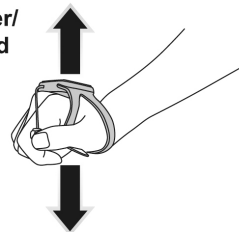

5 Solutions to problems

Problem	Cause	Processing Method
The remote control fails to function.	1.The watch is not powered on.	1.Re-power on the watch.
	2.Low battery.	2.Re-charge the rechargeable batteries.
	3.Out of the controllable distance.	3.Keep the remote control within 15 meter and point at the remote control car.
	4.No pairing frequency between the remote controller and remote control car	4.Power off and then re-power on the remote control, and re-match the frequency.

⚠ WARNING

There are small parts inside possibly causing a choking hazard, so the product not suitable for children under 3 years old. When the product is being used, an adult must be on the scene for guardianship and guidance. These instructions have important information don't throw away and keep properly for future inquiry.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.