





Test Graphs

Restrict Band NVNT a 5745MHz Ant1 Peak

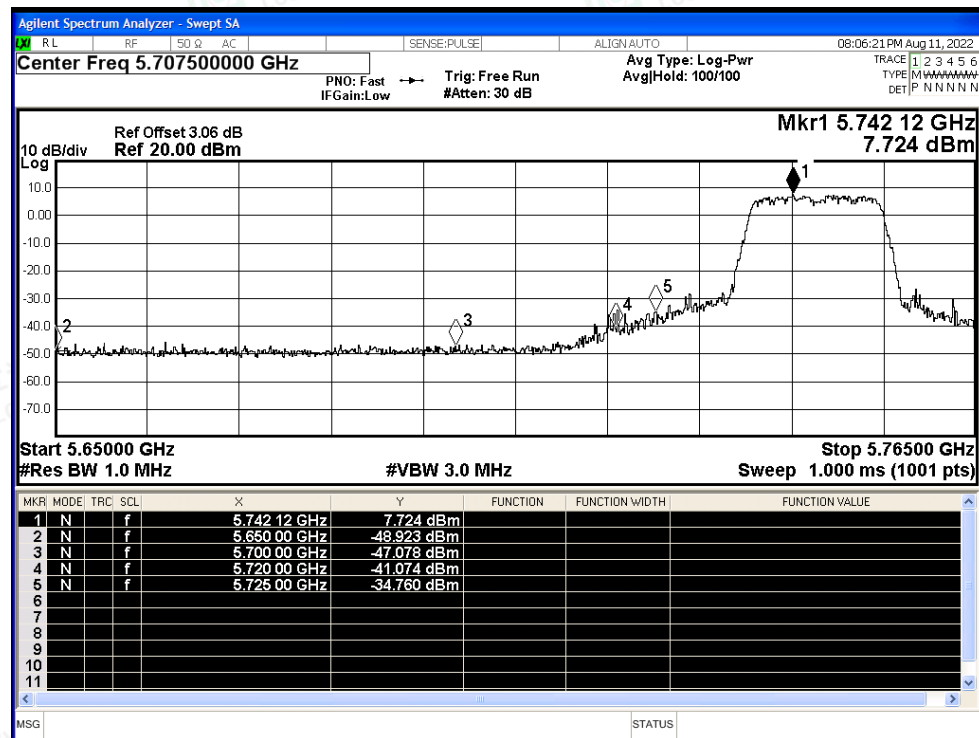


Restrict Band NVNT a 5745MHz Ant1 Average

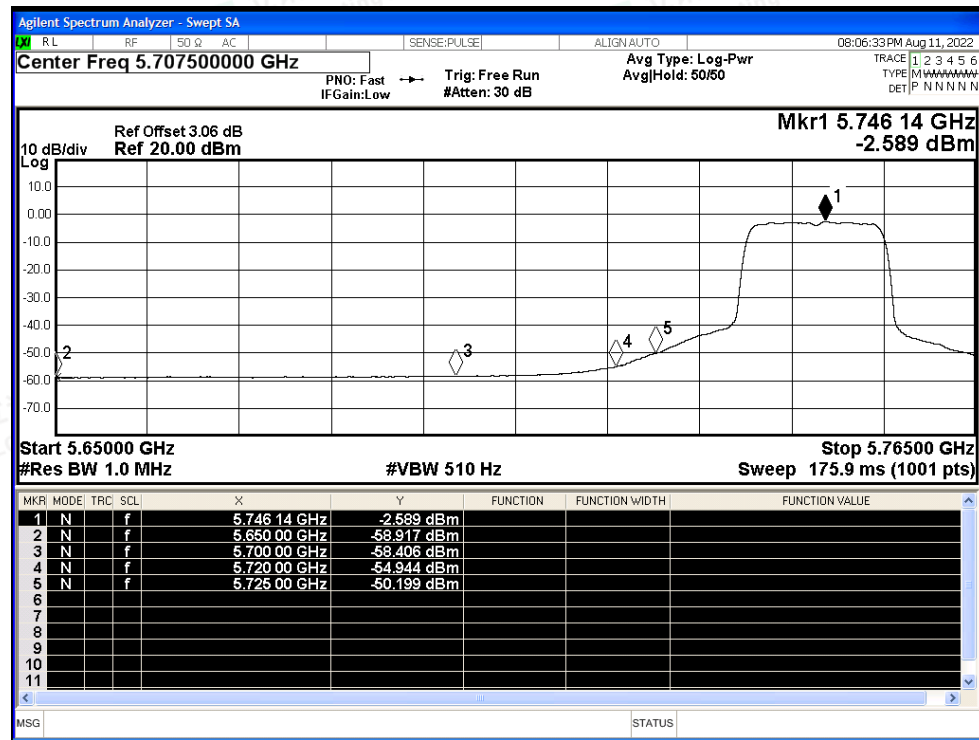




Restrict Band NVNT a 5825MHz Ant1 Peak

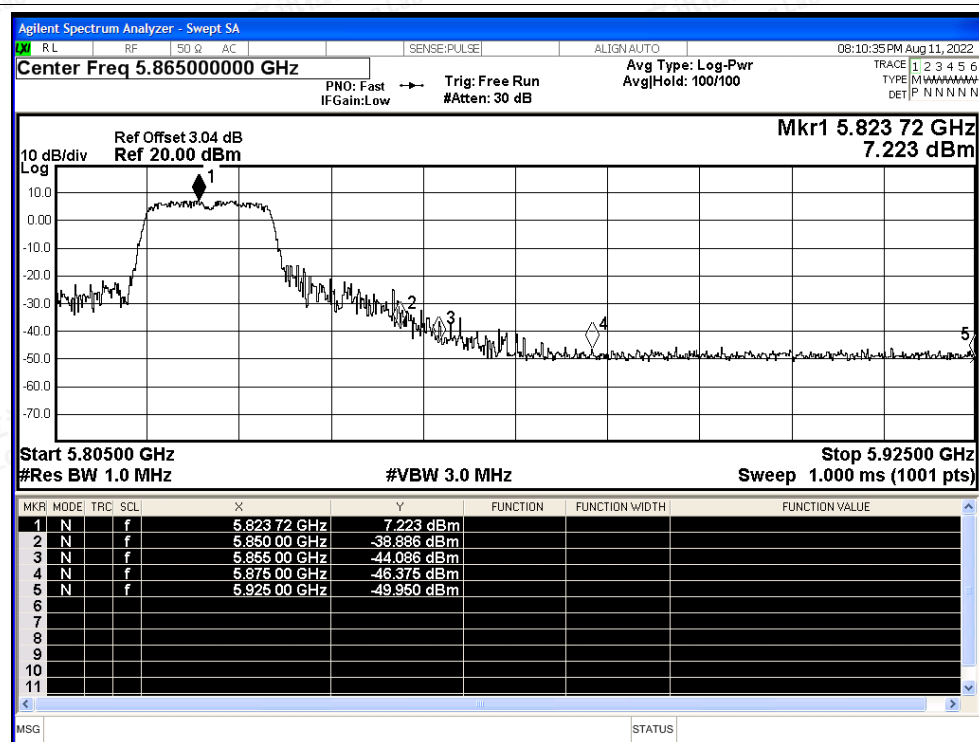


Restrict Band NVNT a 5825MHz Ant1 Average

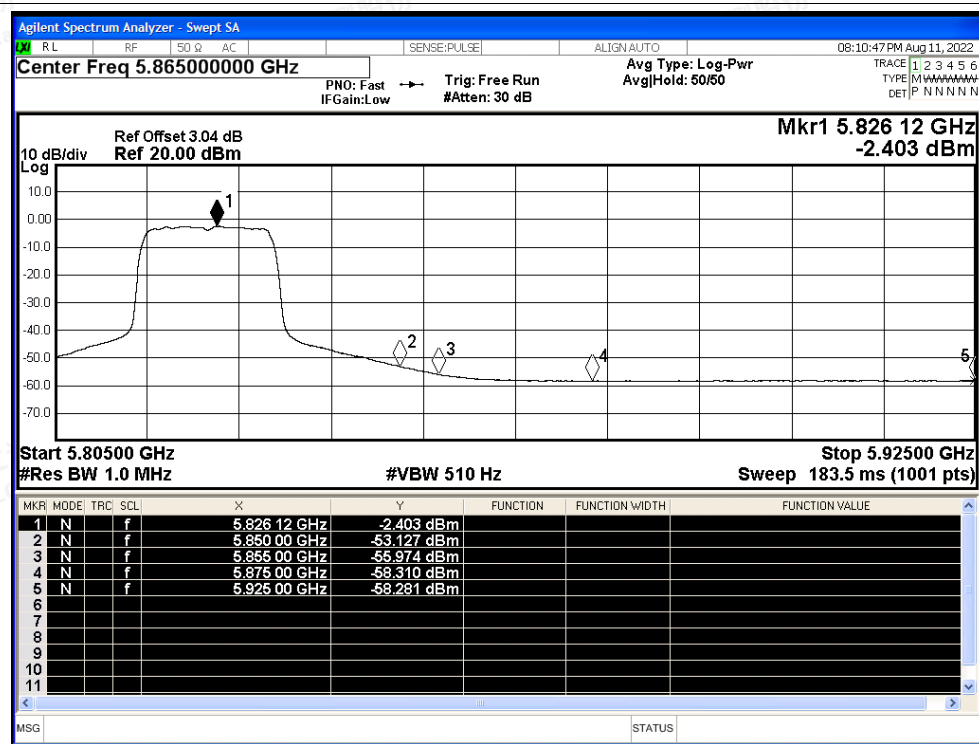




Restrict Band NVNT n20 5745MHz Ant1 Peak

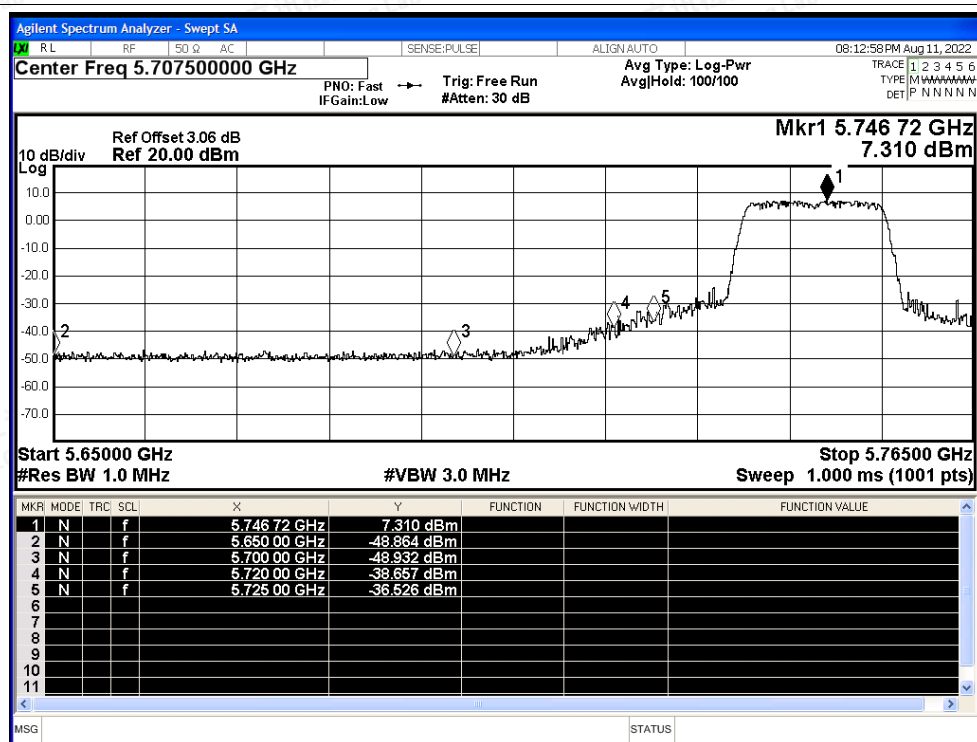


Restrict Band NVNT n20 5745MHz Ant1 Average

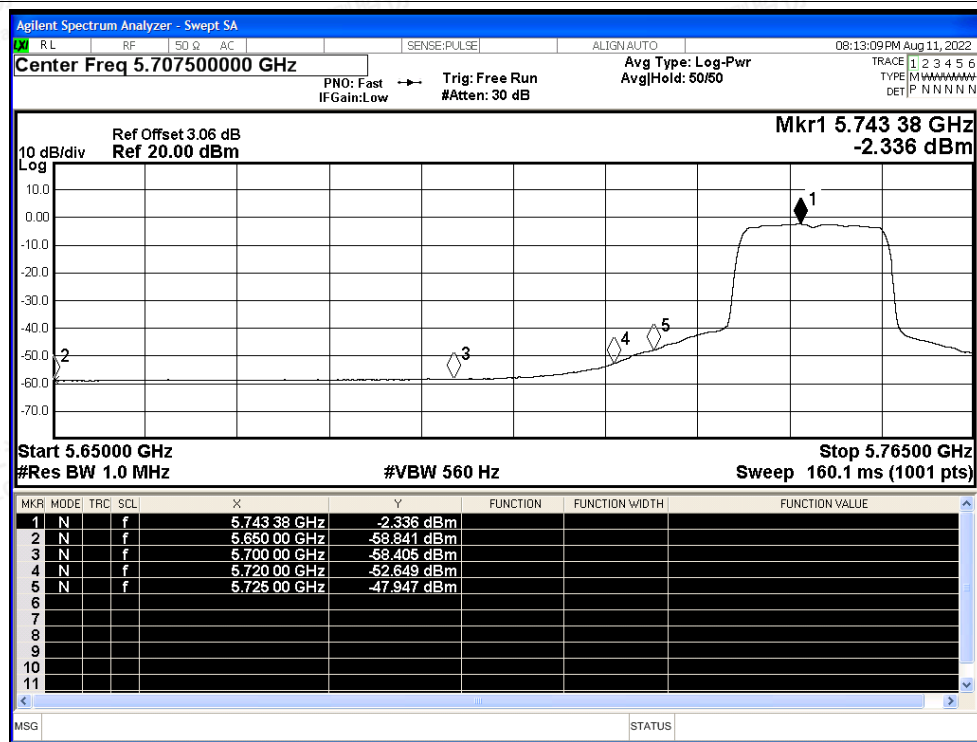




Restrict Band NVNT n20 5825MHz Ant1 Peak

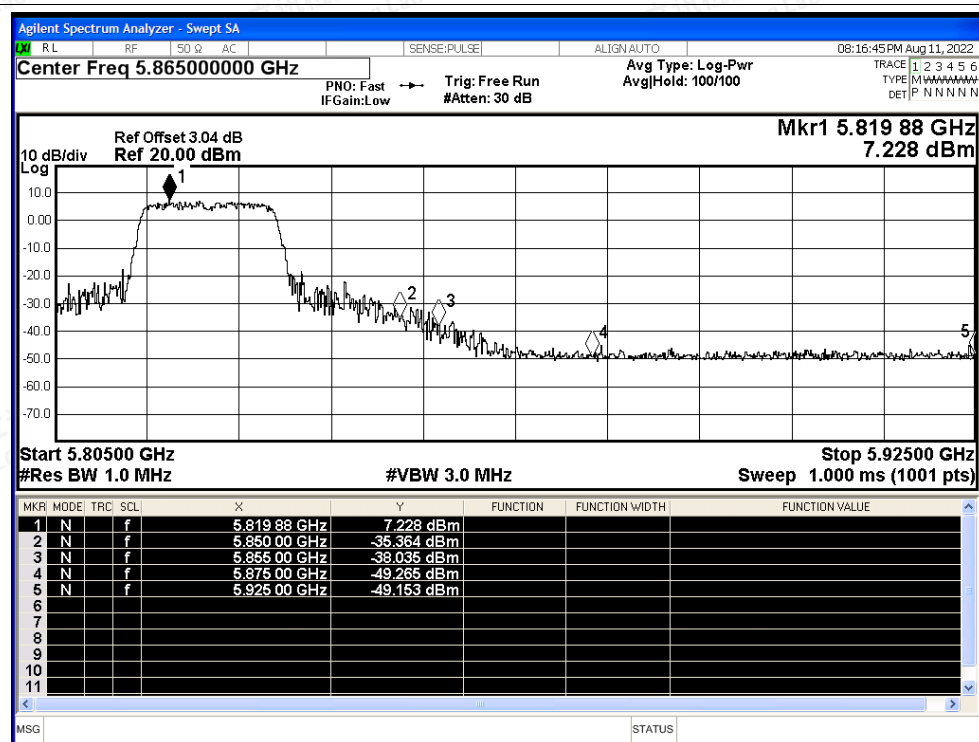


Restrict Band NVNT n20 5825MHz Ant1 Average

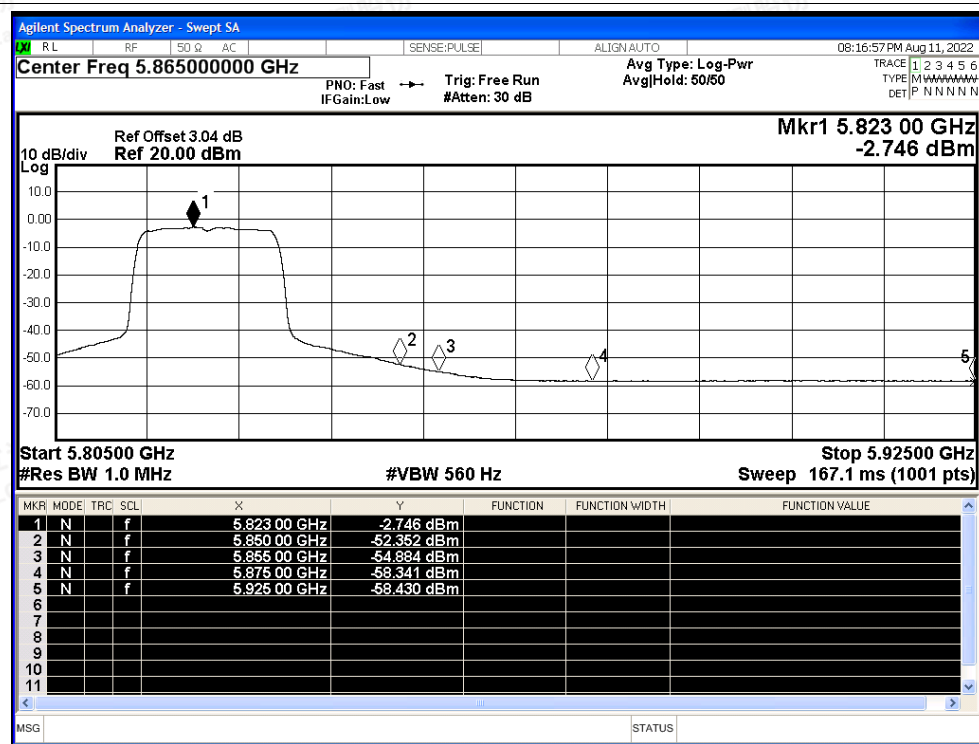




Restrict Band NVNT n40 5755MHz Ant1 Peak

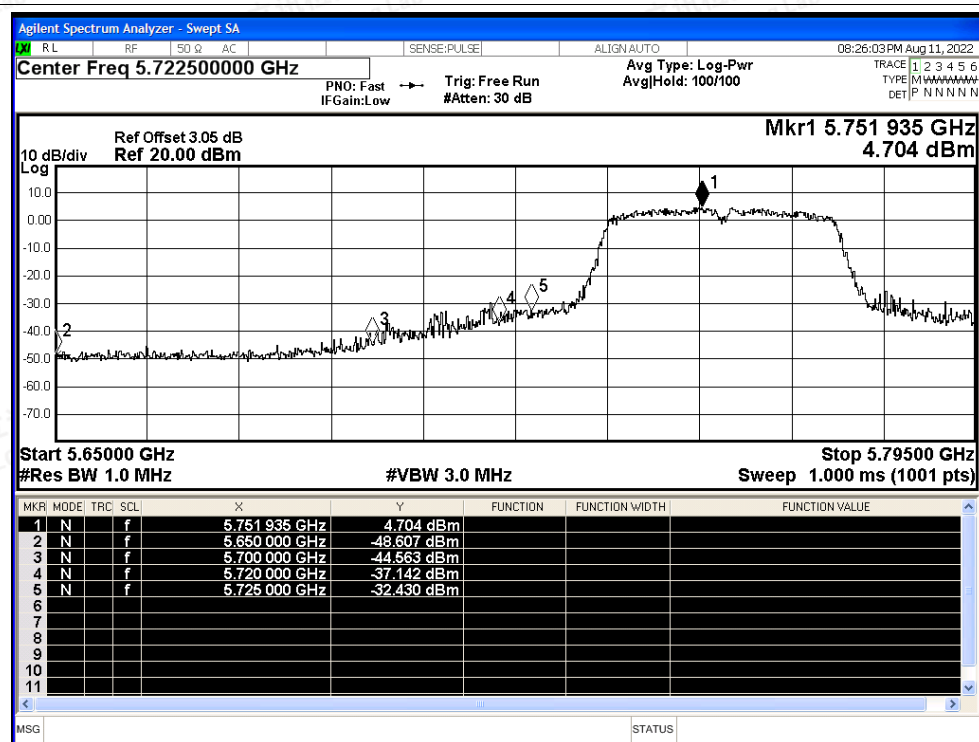


Restrict Band NVNT n40 5755MHz Ant1 Average

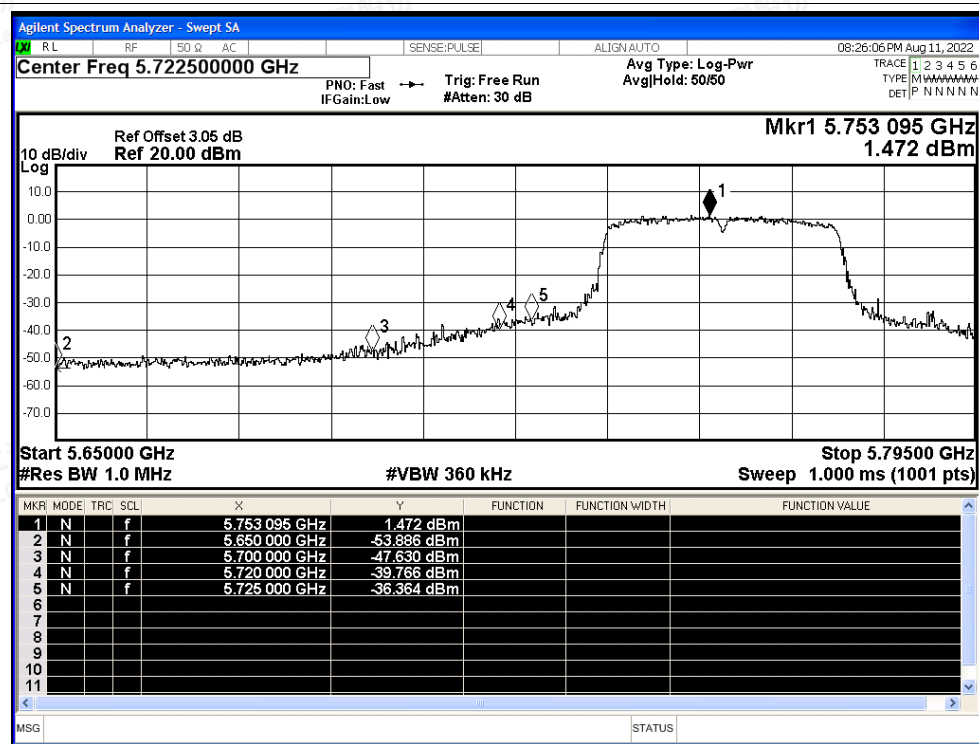




Restrict Band NVNT n40 5795MHz Ant1 Peak

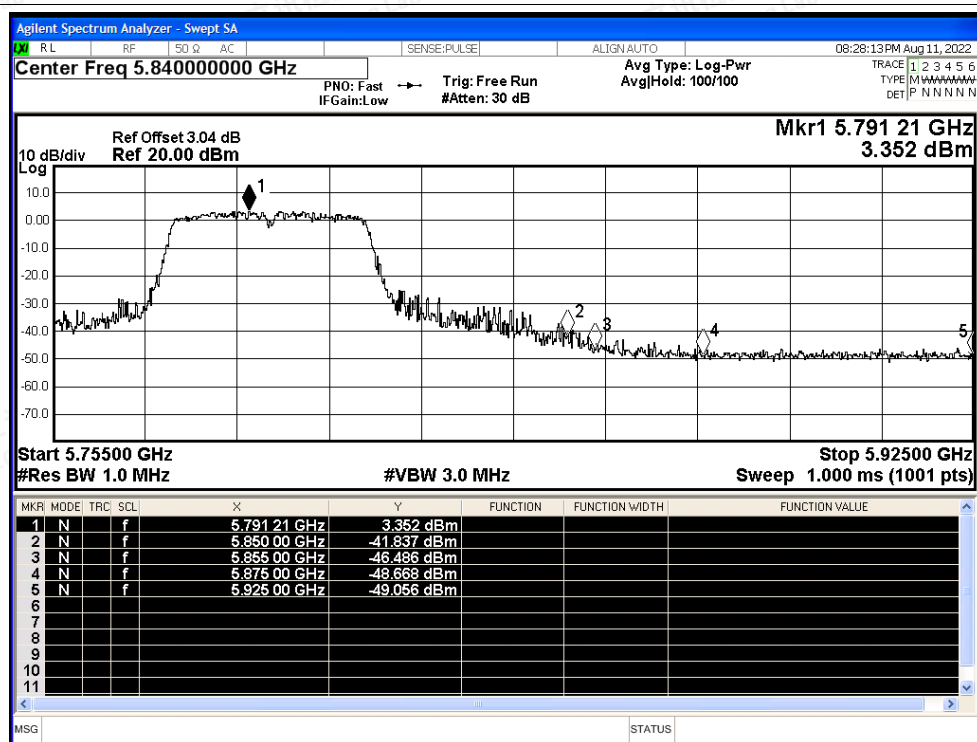


Restrict Band NVNT n40 5795MHz Ant1 Average

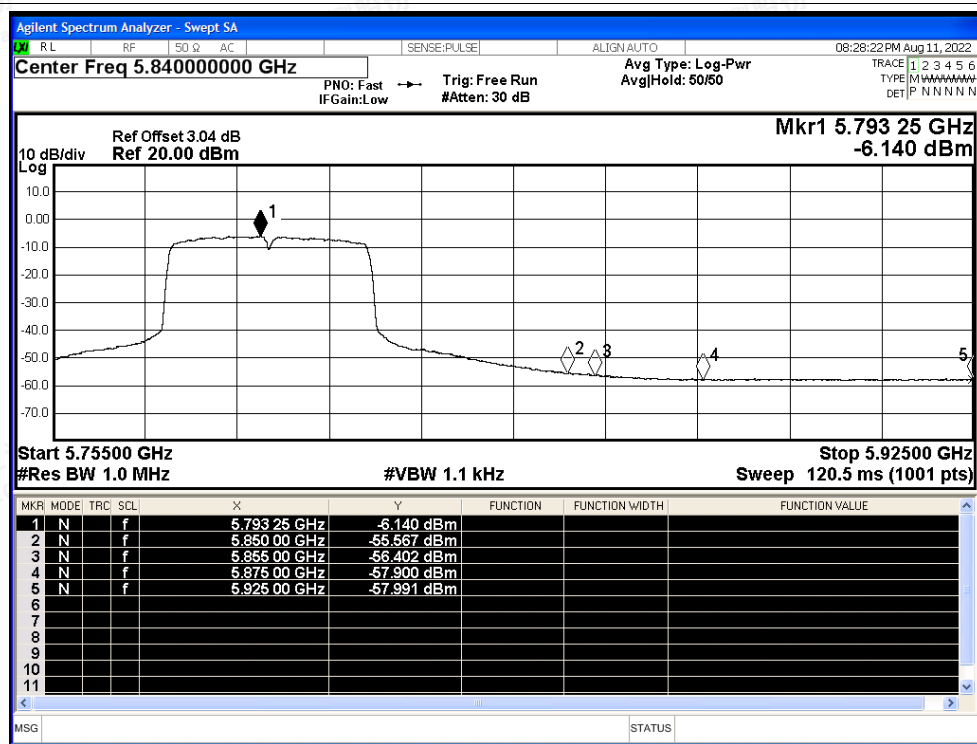




Restrict Band NVNT ac20 5745MHz Ant1 Peak

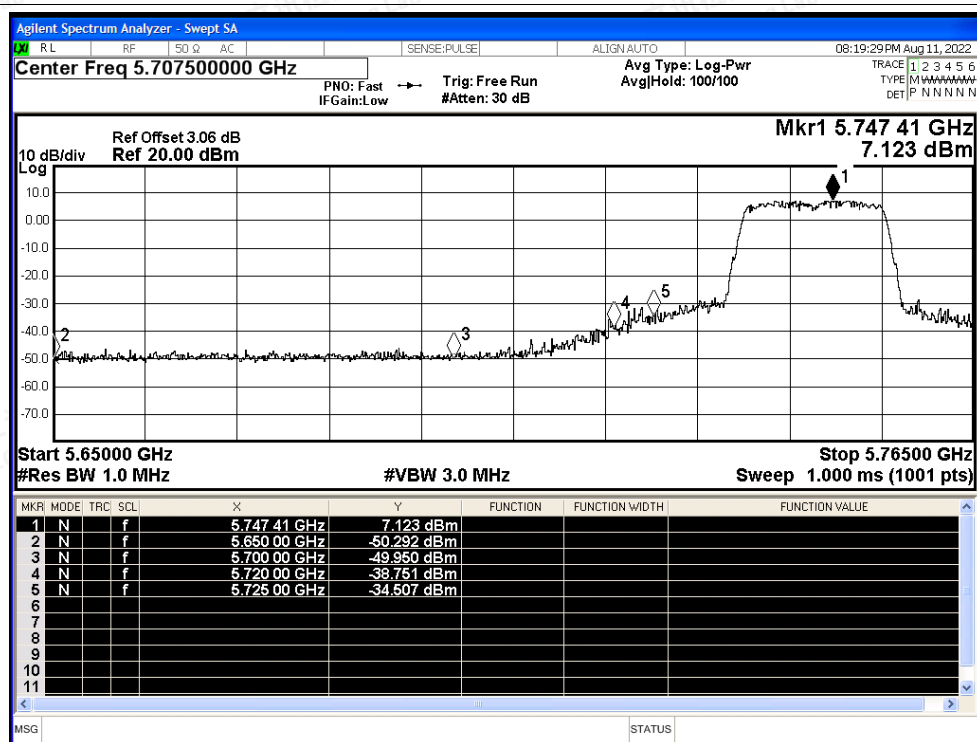


Restrict Band NVNT ac20 5745MHz Ant1 Average

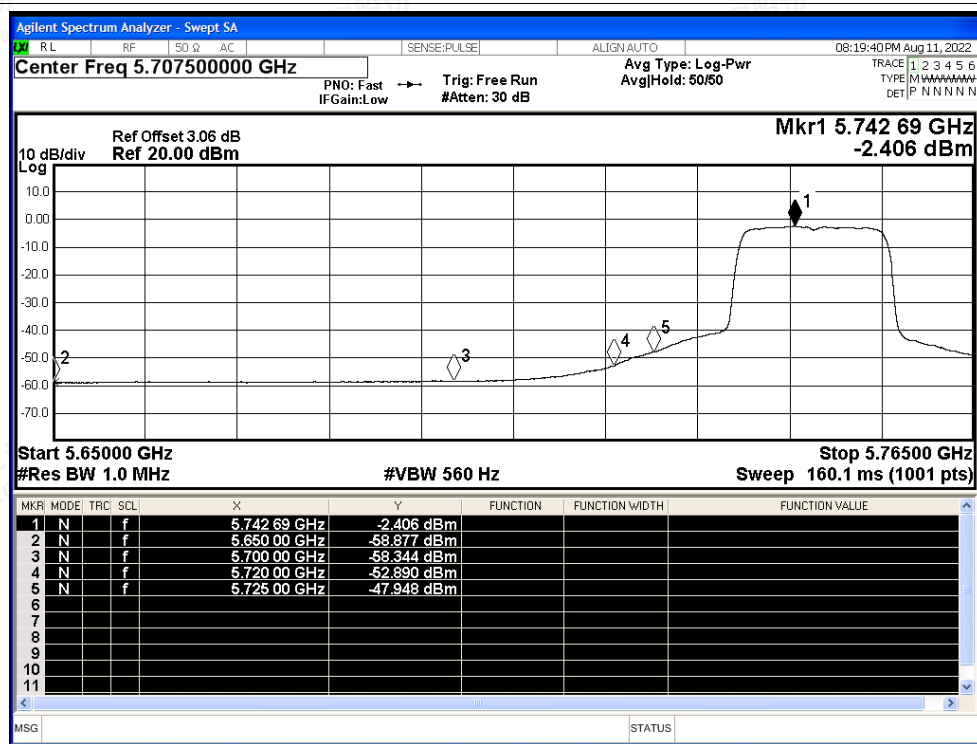




Restrict Band NVNT ac20 5825MHz Ant1 Peak

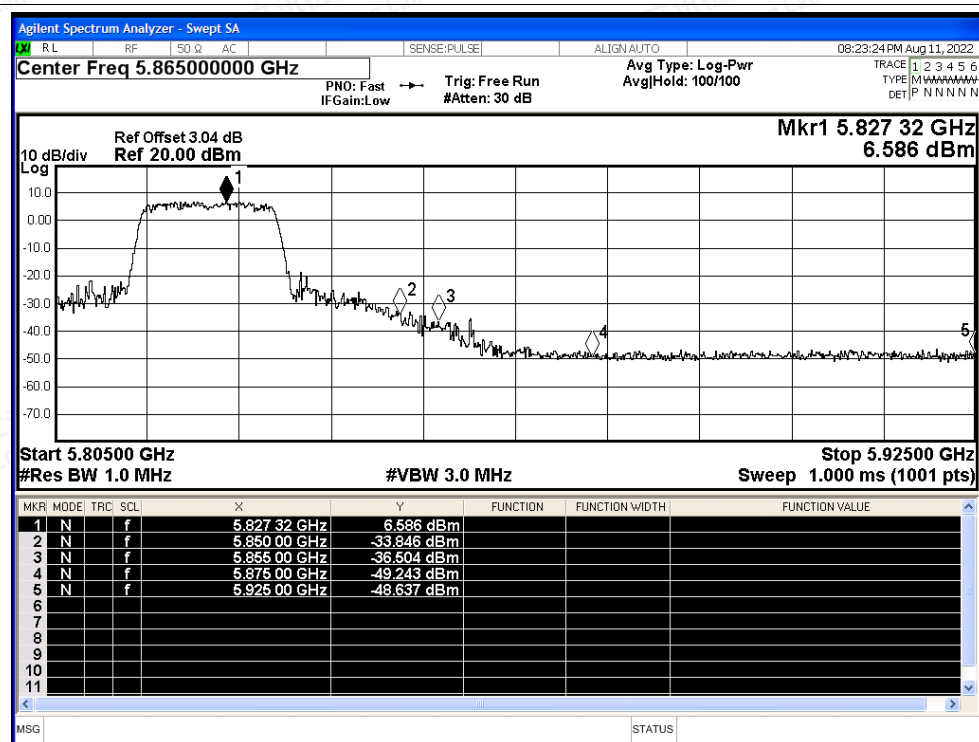


Restrict Band NVNT ac20 5825MHz Ant1 Average

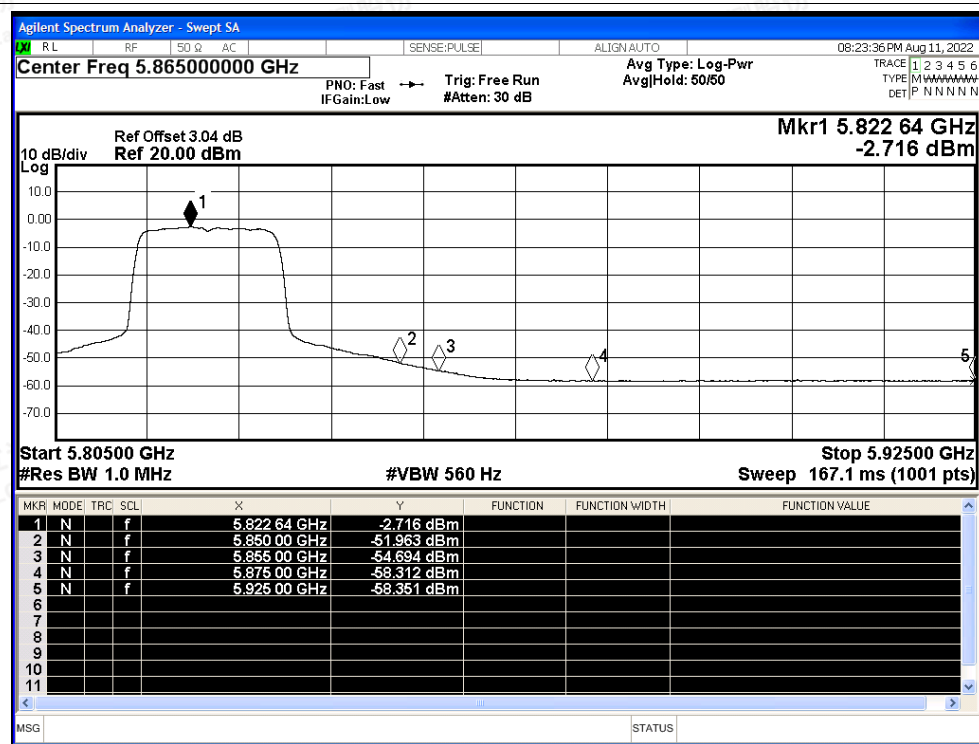




Restrict Band NVNT ac40 5755MHz Ant1 Peak

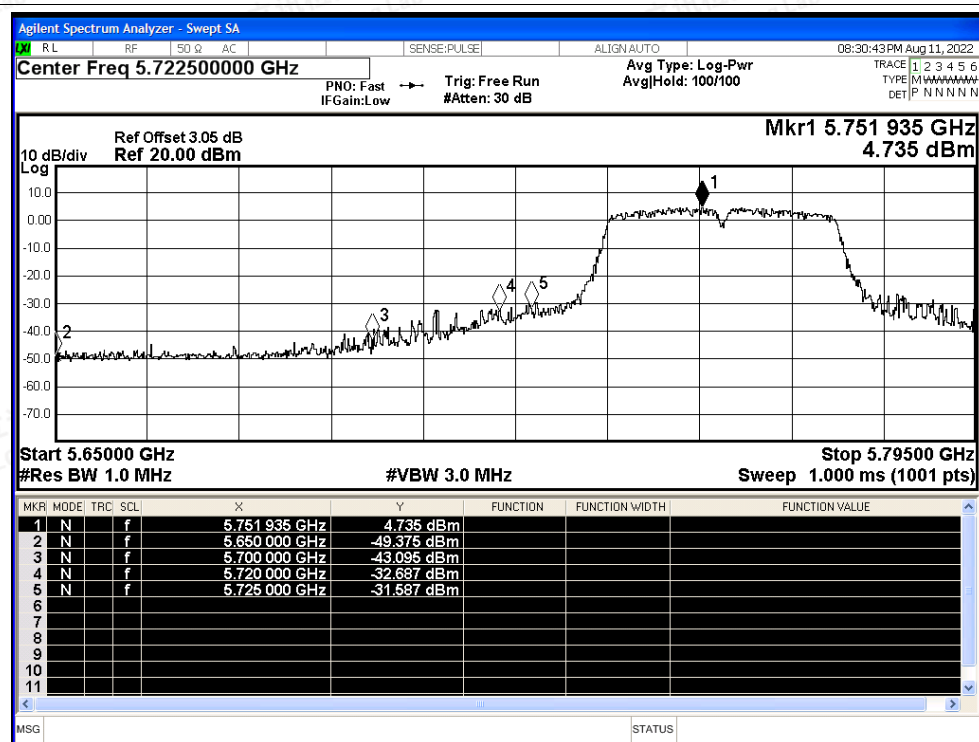


Restrict Band NVNT ac40 5755MHz Ant1 Average

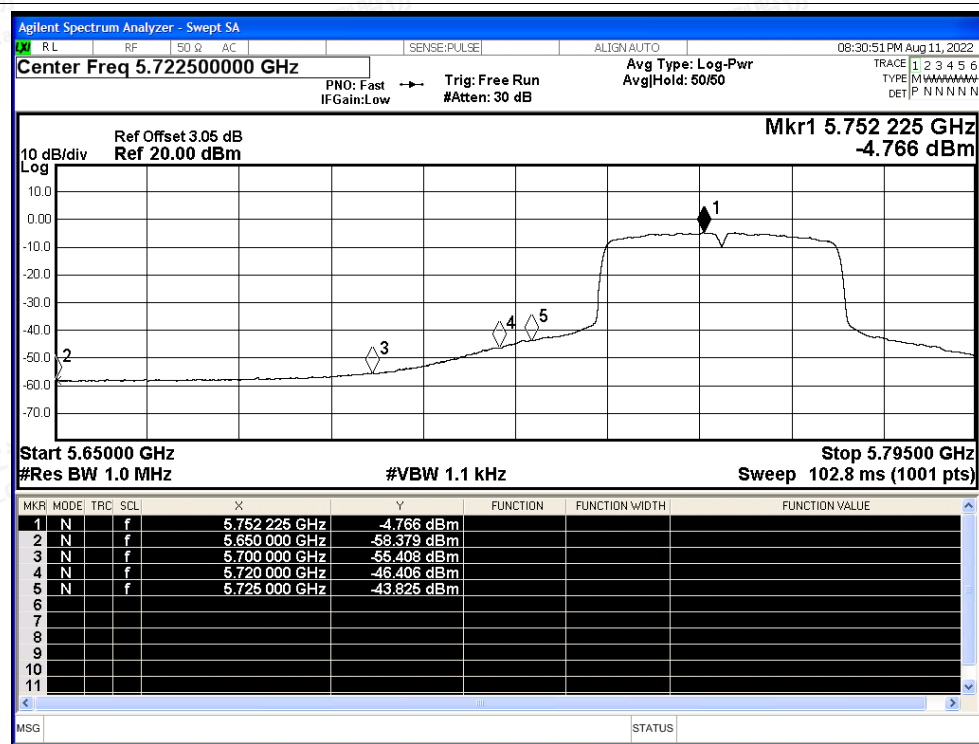




Restrict Band NVNT ac40 5795MHz Ant1 Peak

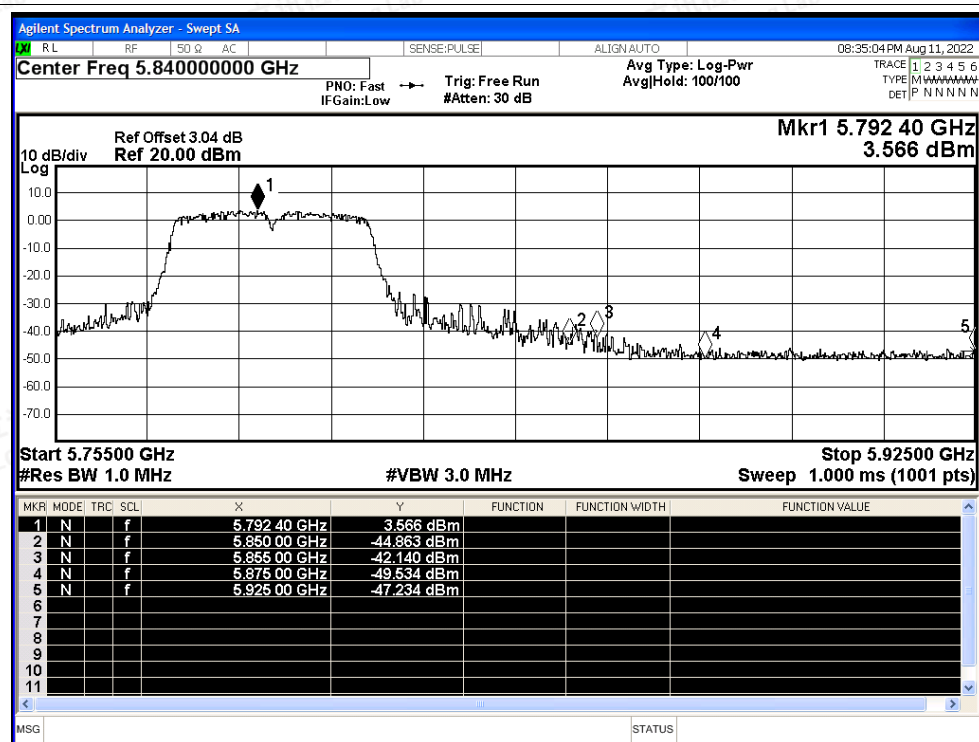


Restrict Band NVNT ac40 5795MHz Ant1 Average

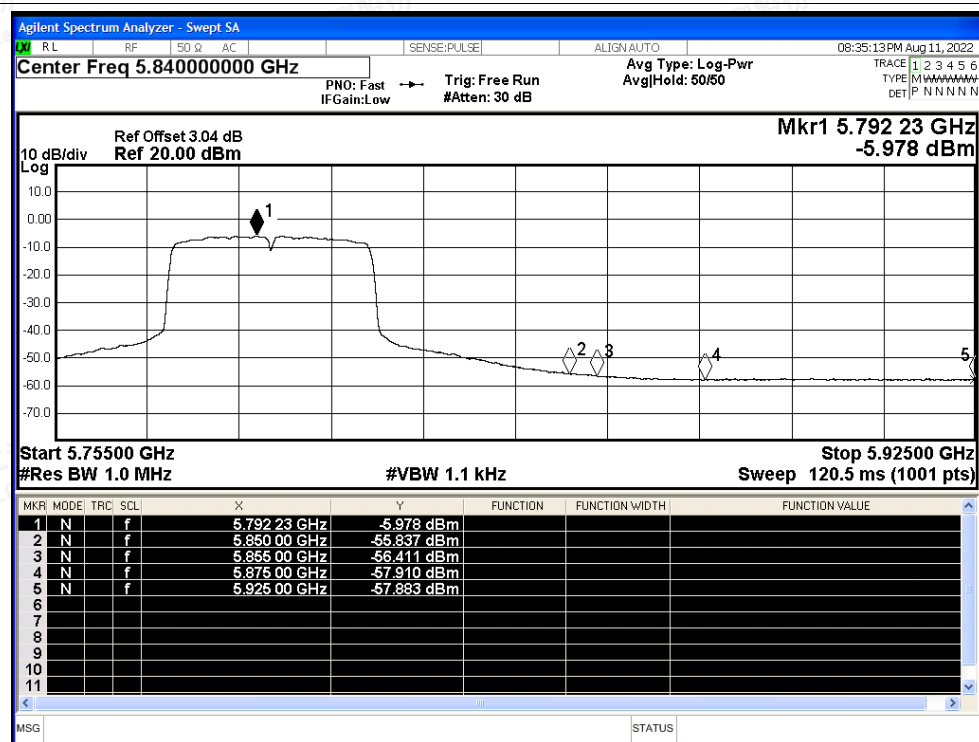




Restrict Band NVNT ac80 5775MHz Ant1 Peak

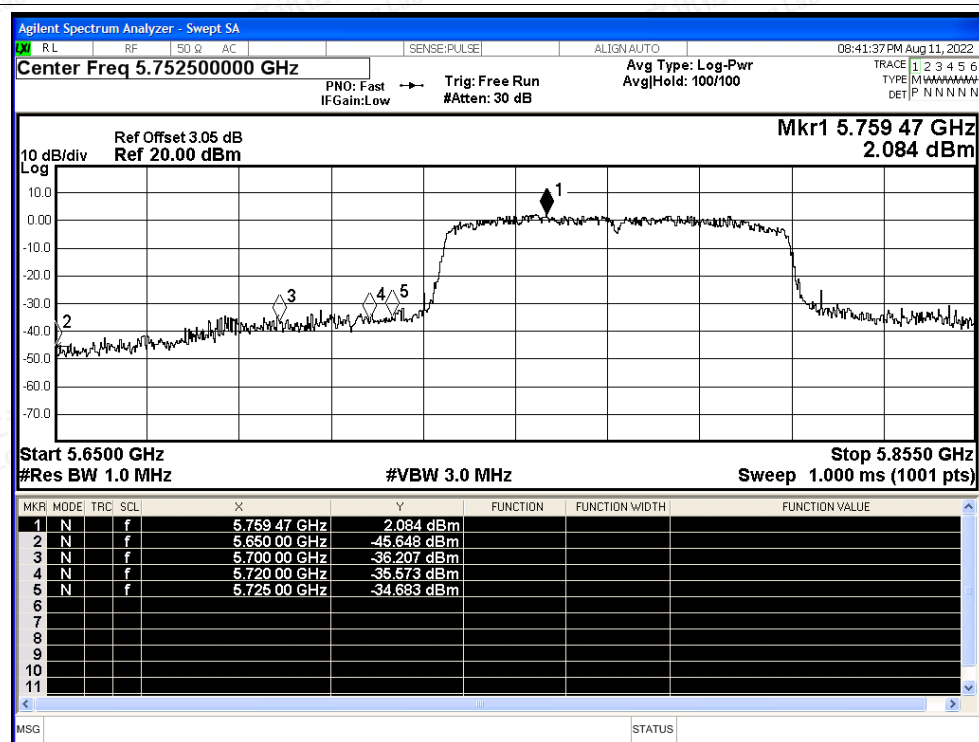


Restrict Band NVNT ac80 5775MHz Ant1 Average

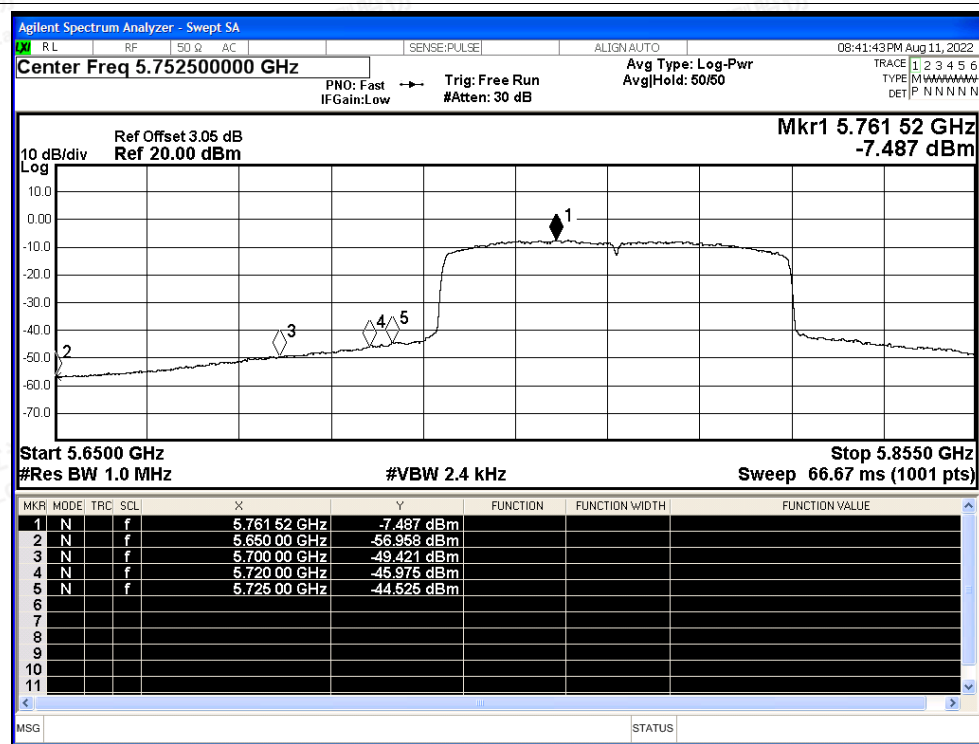




Restrict Band NVNT ac80 5775MHz Ant1 Peak

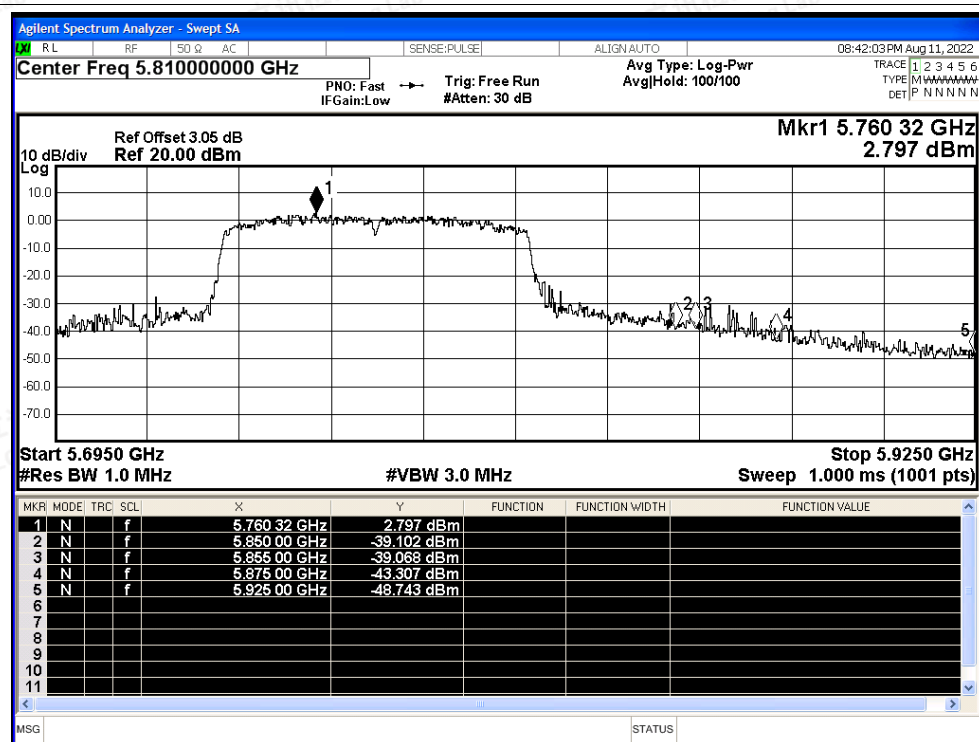

Restrict Band NVNT ac80 5775MHz Ant1 Average

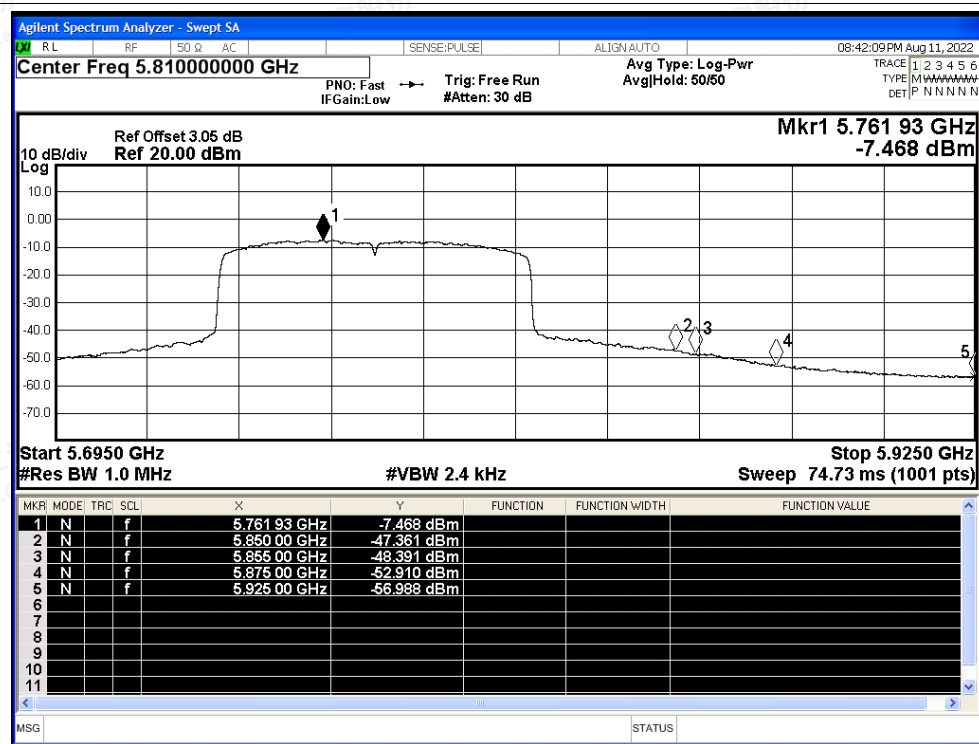



E.5 Frequency Stability

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	5745	Ant0	5744.98	-20000	-3.48	25	Pass
NVNT	a	5785	Ant0	5784.98	-20000	-3.46	25	Pass
NVNT	a	5825	Ant0	5824.98	-20000	-3.43	25	Pass
NVNT	n20	5745	Ant0	5744.98	-20000	-3.48	25	Pass
NVNT	n20	5785	Ant0	5785	0	0	25	Pass
NVNT	n20	5825	Ant0	5824.96	-40000	-6.87	25	Pass
NVNT	n40	5755	Ant0	5754.96	-40000	-6.95	25	Pass
NVNT	n40	5795	Ant0	5795	0	0	25	Pass
NVNT	ac20	5745	Ant0	5744.98	-20000	-3.48	25	Pass
NVNT	ac20	5785	Ant0	5784.98	-20000	-3.46	25	Pass
NVNT	ac20	5825	Ant0	5824.96	-40000	-6.87	25	Pass
NVNT	ac40	5755	Ant0	5755	0	0	25	Pass
NVNT	ac40	5795	Ant0	5795	0	0	25	Pass
NVNT	ac80	5775	Ant0	5774.92	-80000	-13.85	25	Pass




Shenzhen LCS Compliance Testing Laboratory Ltd.
Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China
Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com
Scan code to check authenticity




Test Graphs

Freq. Stability NVNT a 5745MHz Ant0

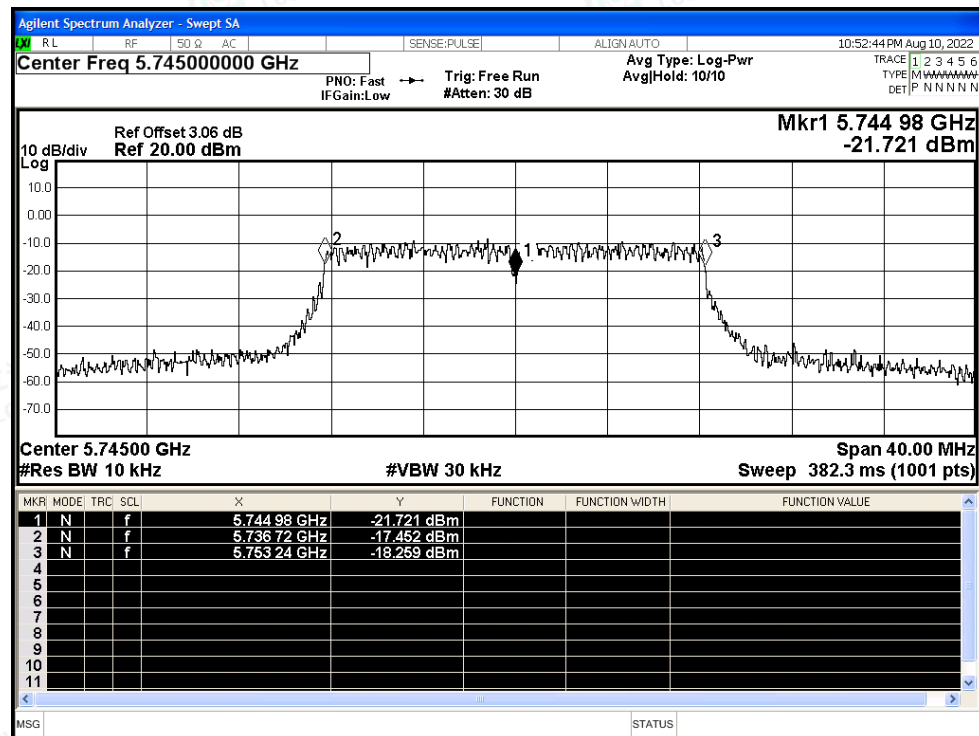


Freq. Stability NVNT a 5785MHz Ant0

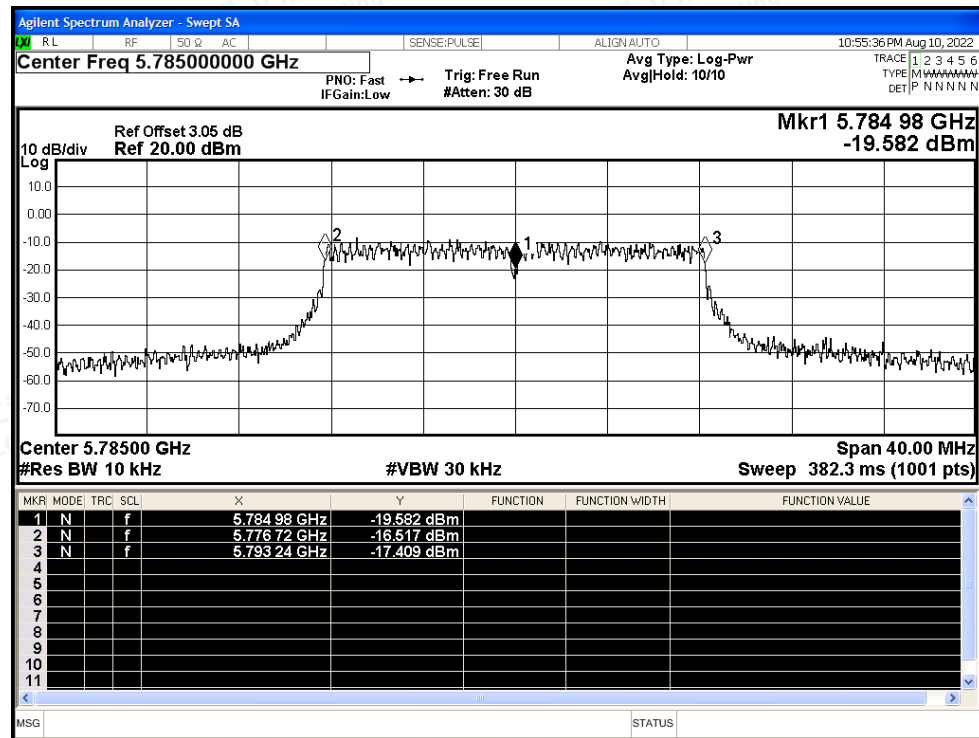




Freq. Stability NVNT a 5825MHz Ant0

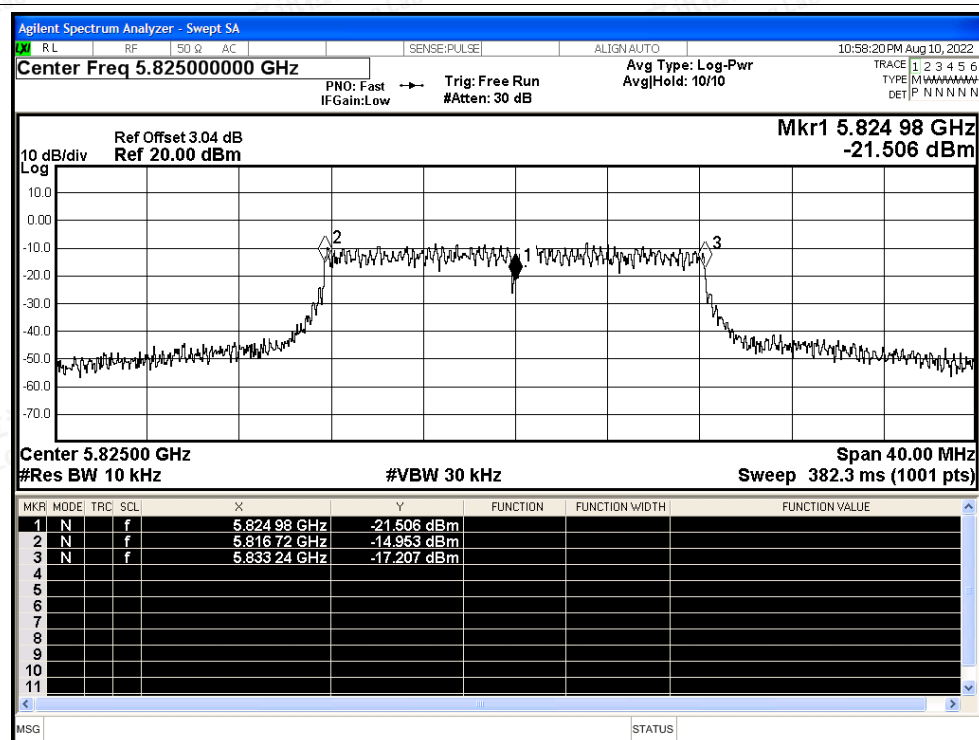


Freq. Stability NVNT n20 5745MHz Ant0

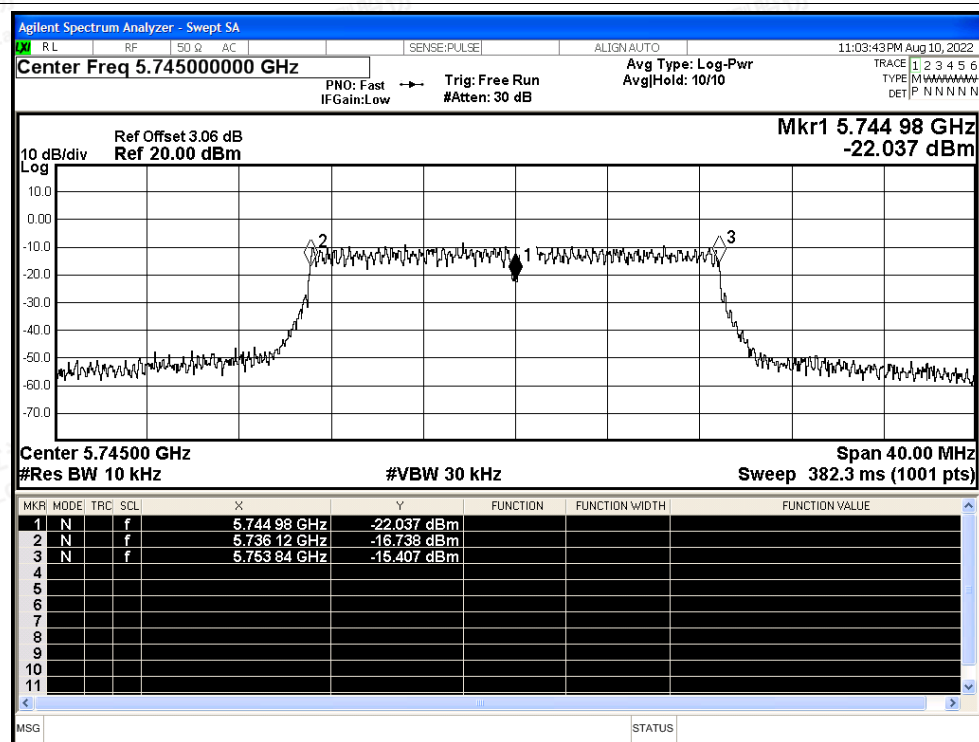




Freq. Stability NVNT n20 5785MHz Ant0

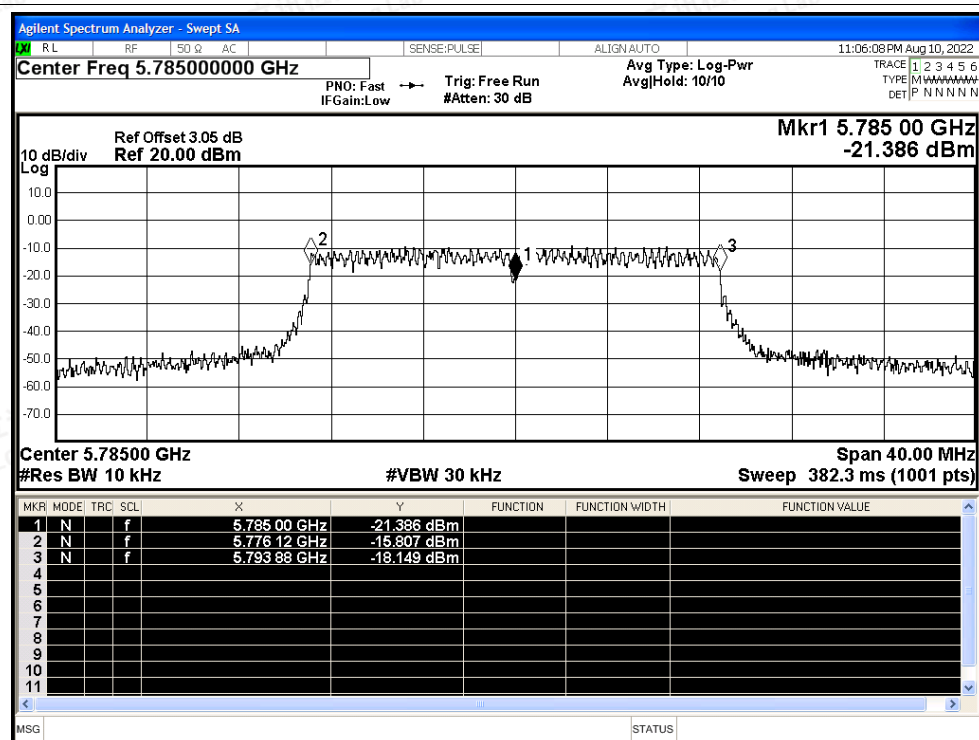


Freq. Stability NVNT n20 5825MHz Ant0

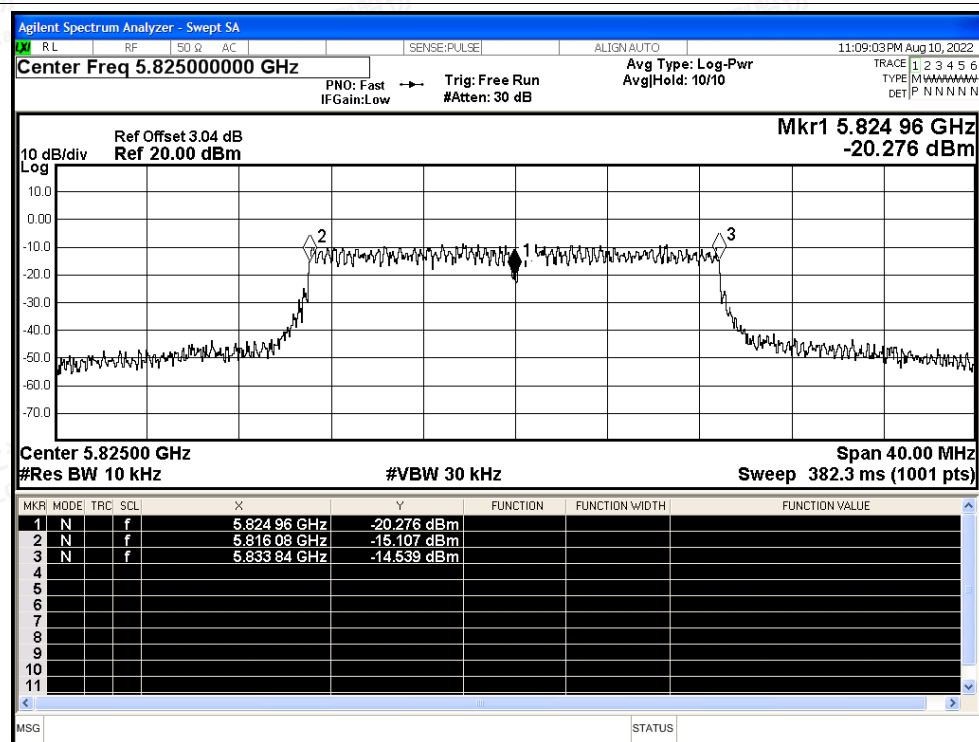




Freq. Stability NVNT n40 5755MHz Ant0

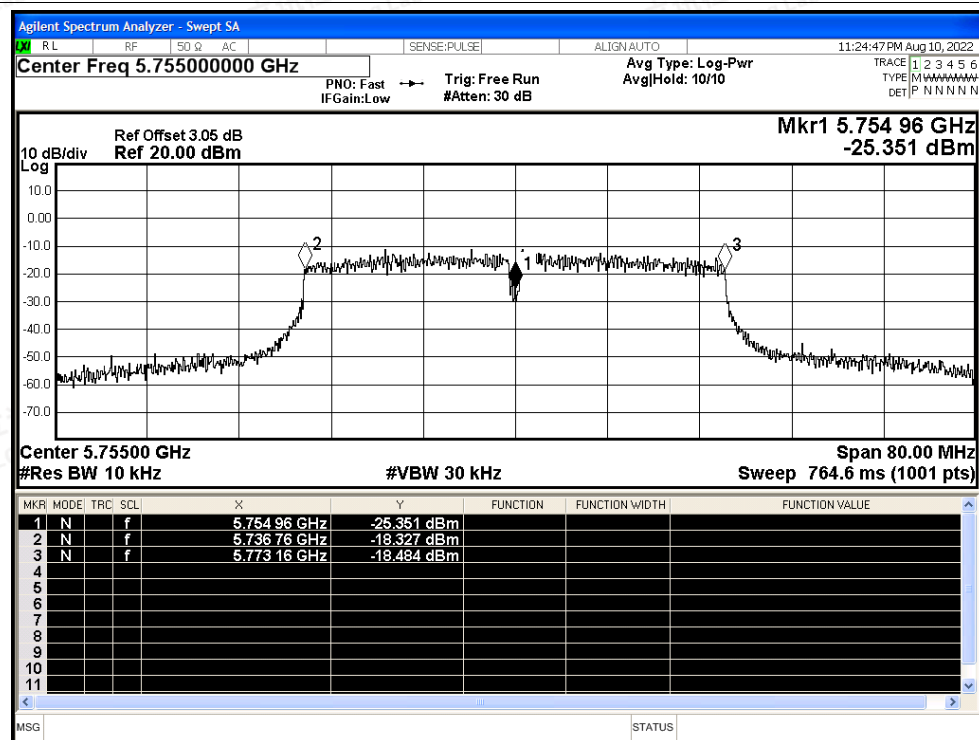


Freq. Stability NVNT n40 5795MHz Ant0

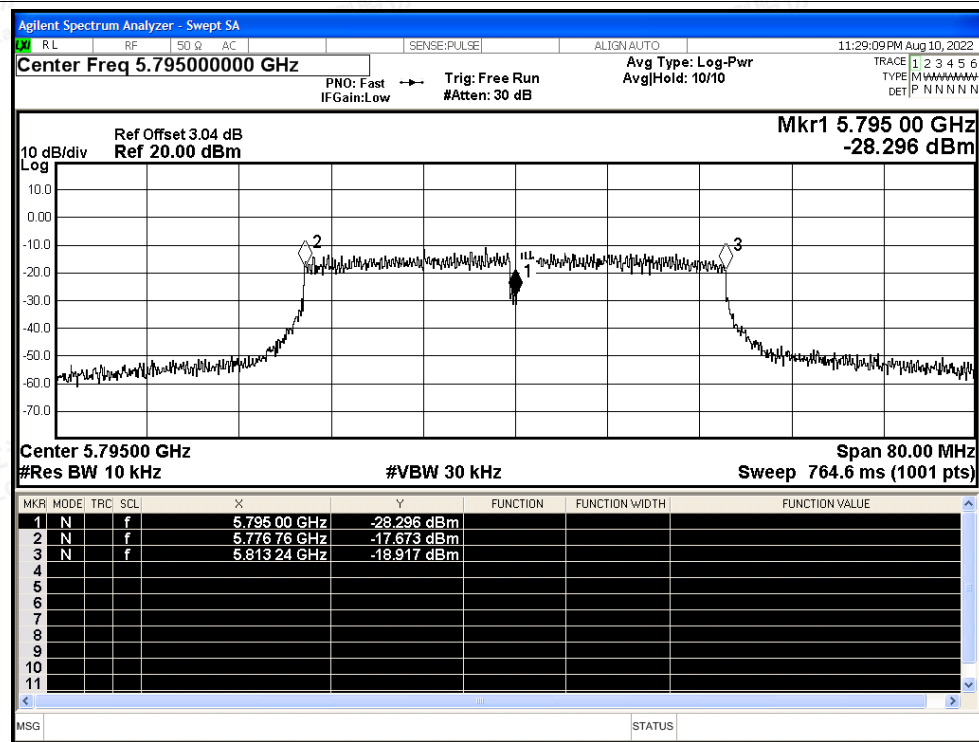




Freq. Stability NVNT ac20 5745MHz Ant0

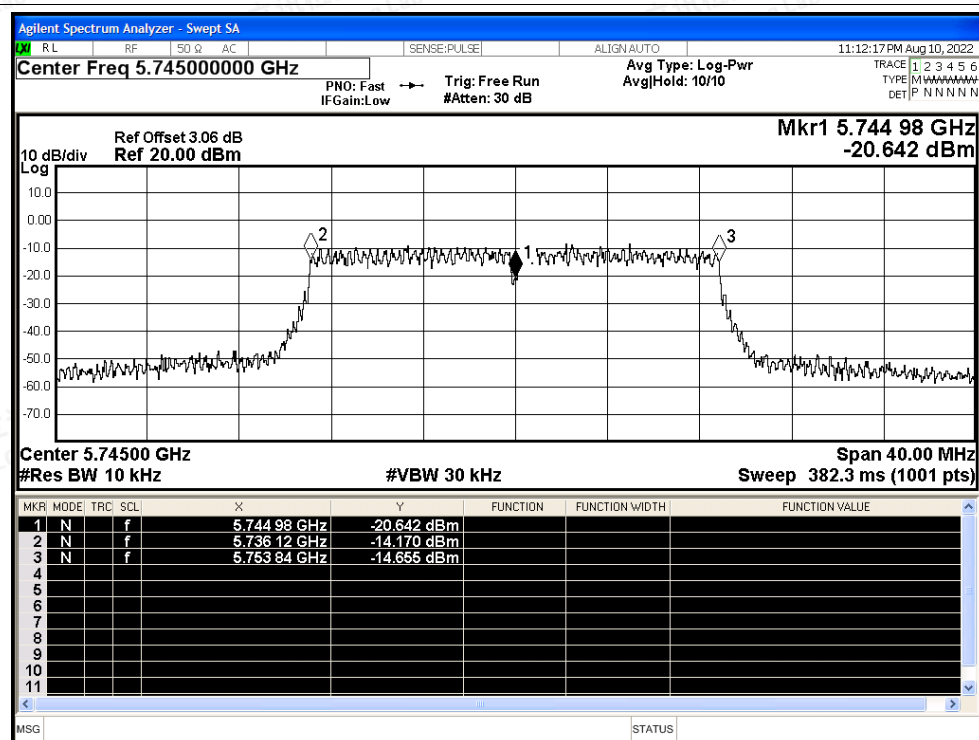


Freq. Stability NVNT ac20 5785MHz Ant0

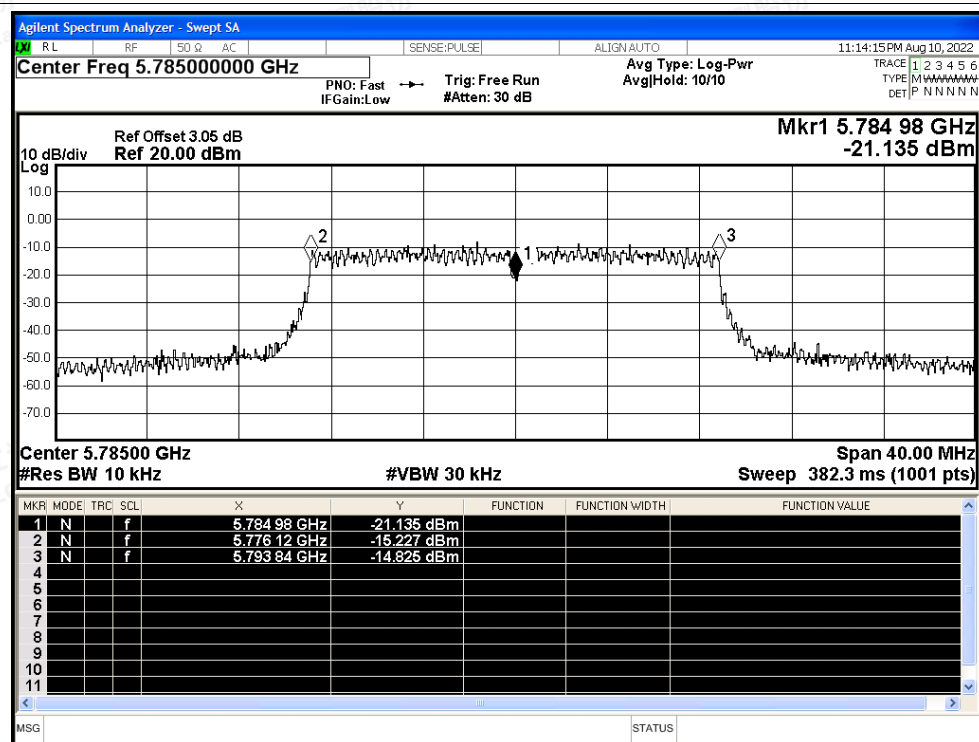




Freq. Stability NVNT ac20 5825MHz Ant0

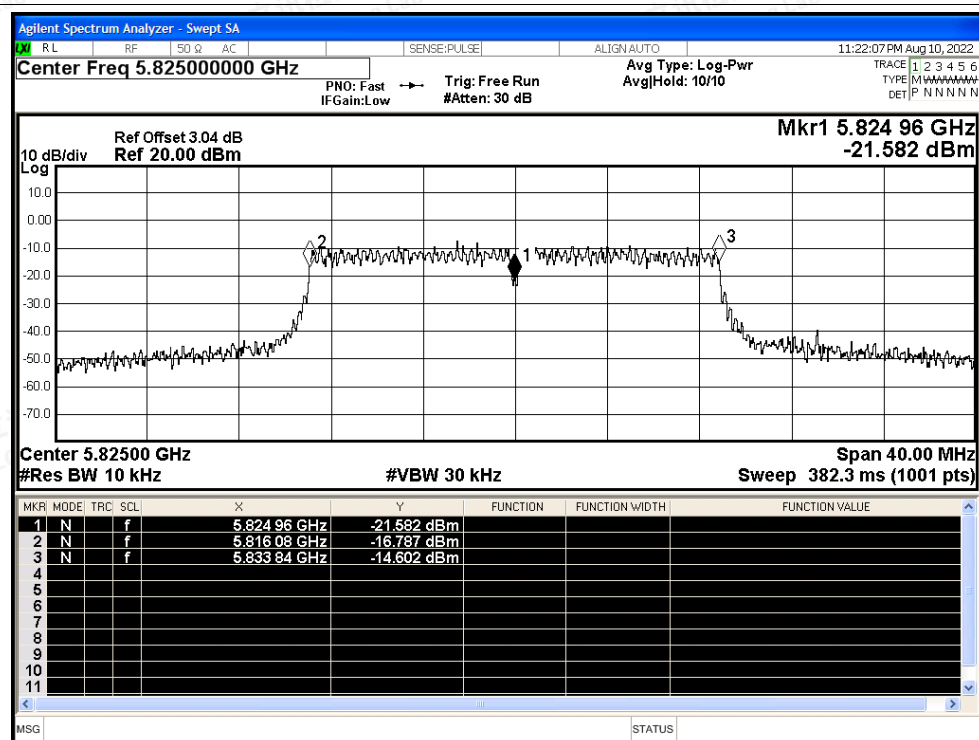


Freq. Stability NVNT ac40 5755MHz Ant0

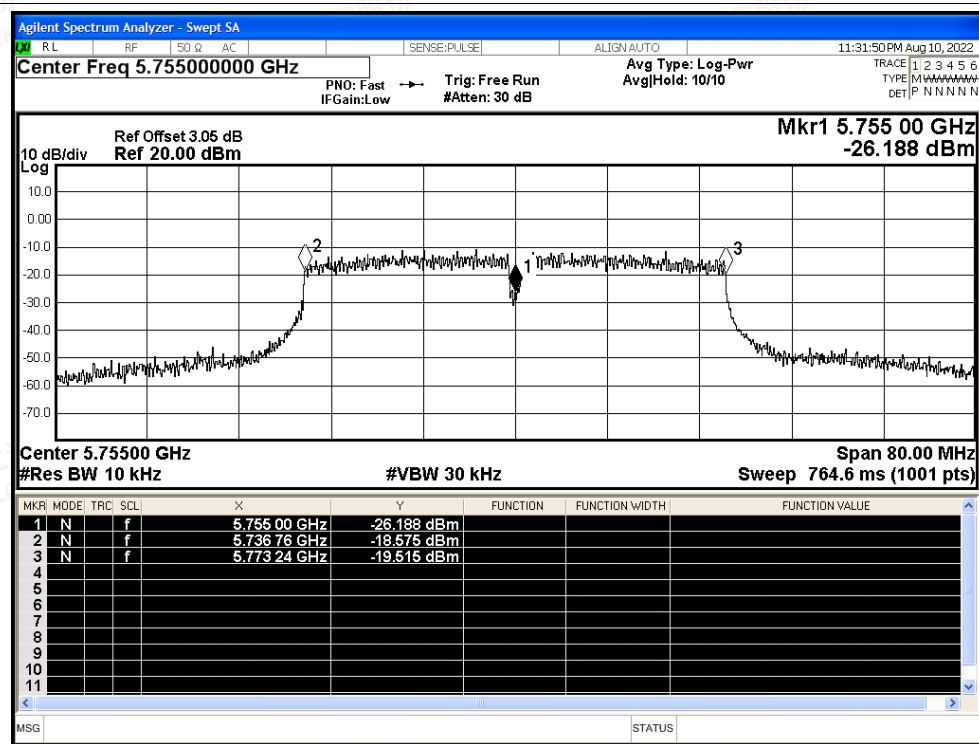




Freq. Stability NVNT ac40 5795MHz Ant0

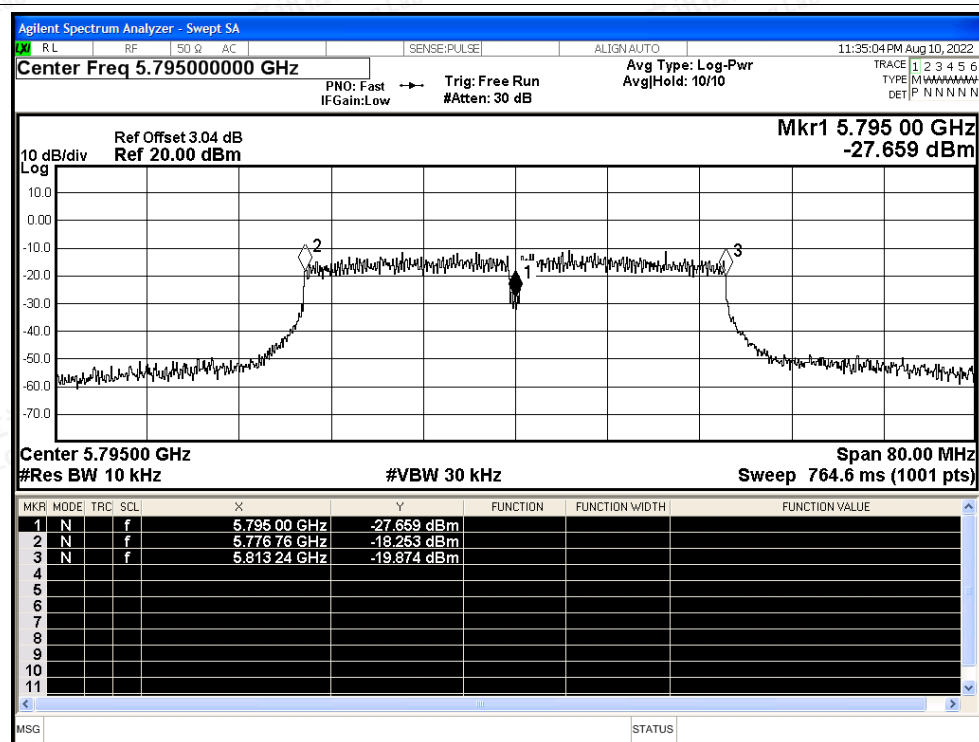

Freq. Stability NVNT ac80 5775MHz Ant0

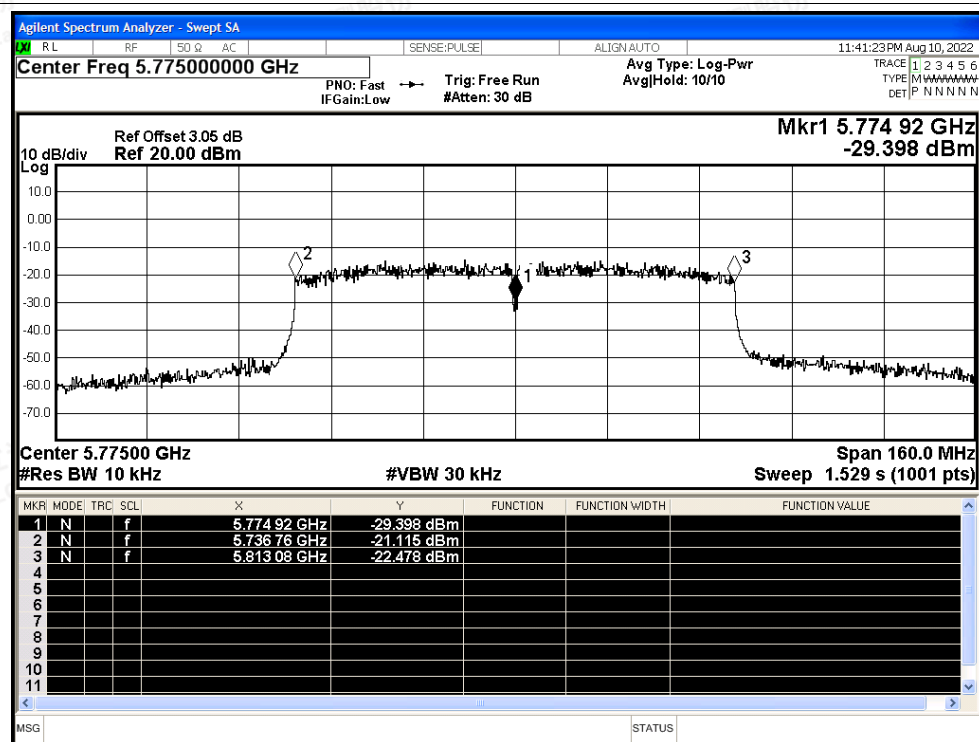




Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	5745	Ant1	5744.98	-20000	-3.48	25	Pass
NVNT	a	5785	Ant1	5784.96	-40000	-6.91	25	Pass
NVNT	a	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	n20	5745	Ant1	5744.96	-40000	-6.96	25	Pass
NVNT	n20	5785	Ant1	5785	0	0	25	Pass
NVNT	n20	5825	Ant1	5825	0	0	25	Pass
NVNT	n40	5755	Ant1	5754.96	-40000	-6.95	25	Pass
NVNT	n40	5795	Ant1	5794.96	-40000	-6.9	25	Pass
NVNT	ac20	5745	Ant1	5744.98	-20000	-3.48	25	Pass
NVNT	ac20	5785	Ant1	5784.98	-20000	-3.46	25	Pass
NVNT	ac20	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	ac40	5755	Ant1	5755	0	0	25	Pass
NVNT	ac40	5795	Ant1	5795	0	0	25	Pass
NVNT	ac80	5775	Ant1	5774.92	-80000	-13.85	25	Pass






Test Graphs

Freq. Stability NVNT a 5745MHz Ant1

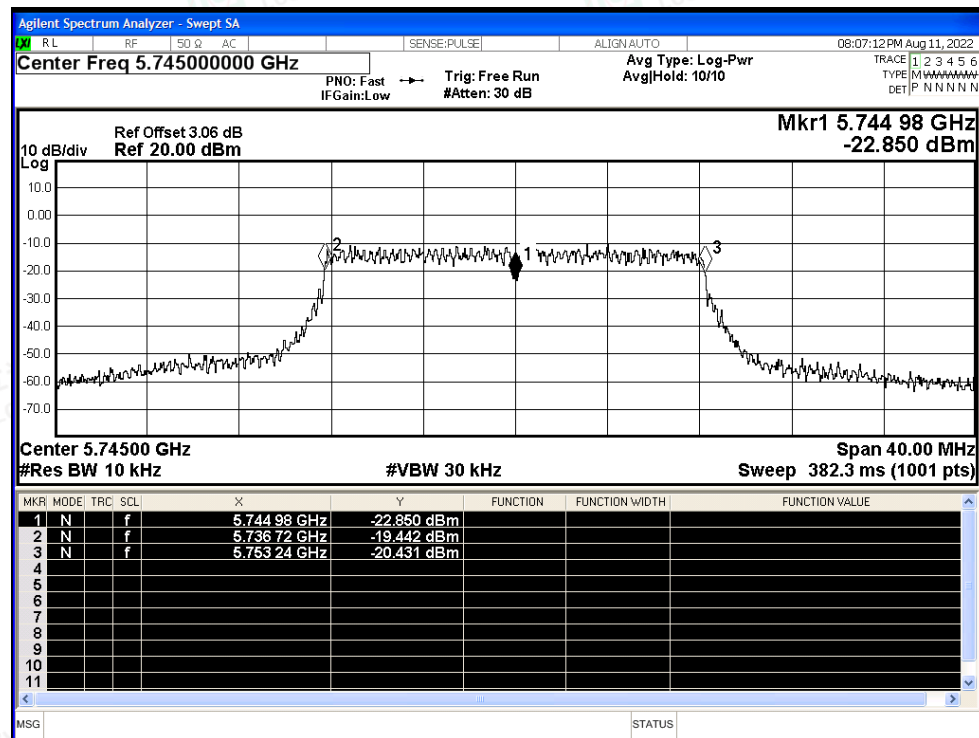


Freq. Stability NVNT a 5785MHz Ant1

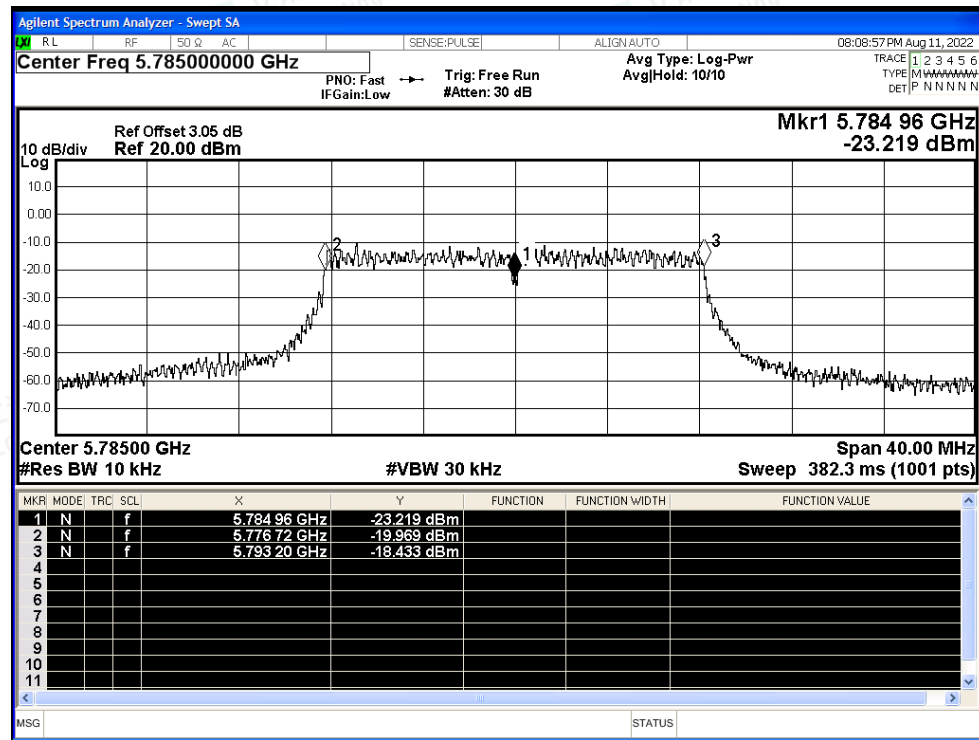




Freq. Stability NVNT a 5825MHz Ant1

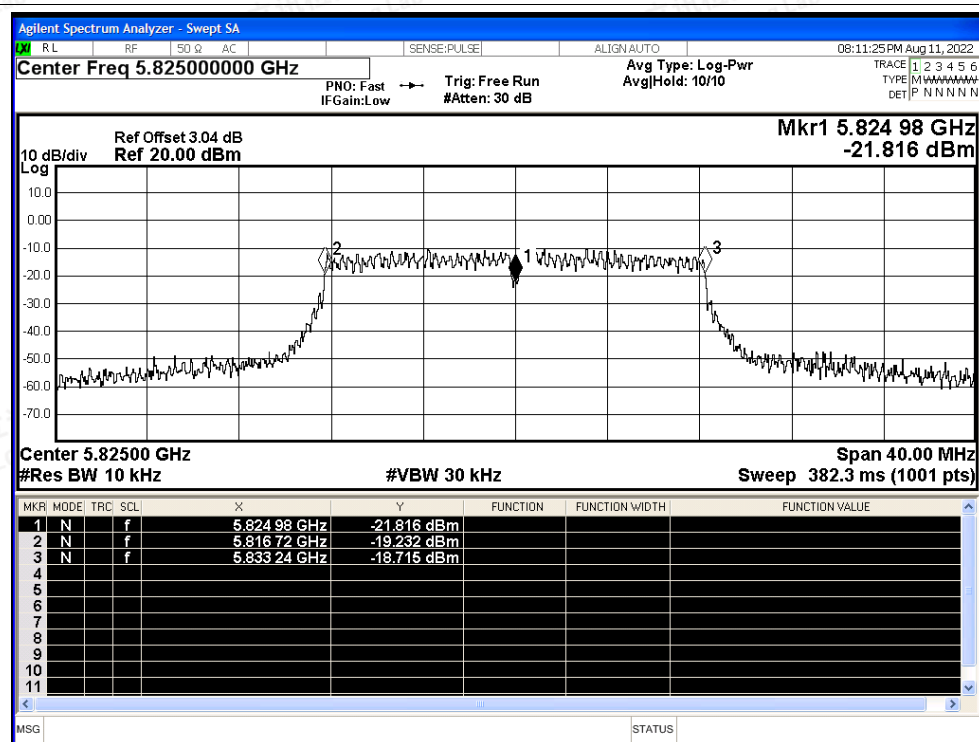


Freq. Stability NVNT n20 5745MHz Ant1

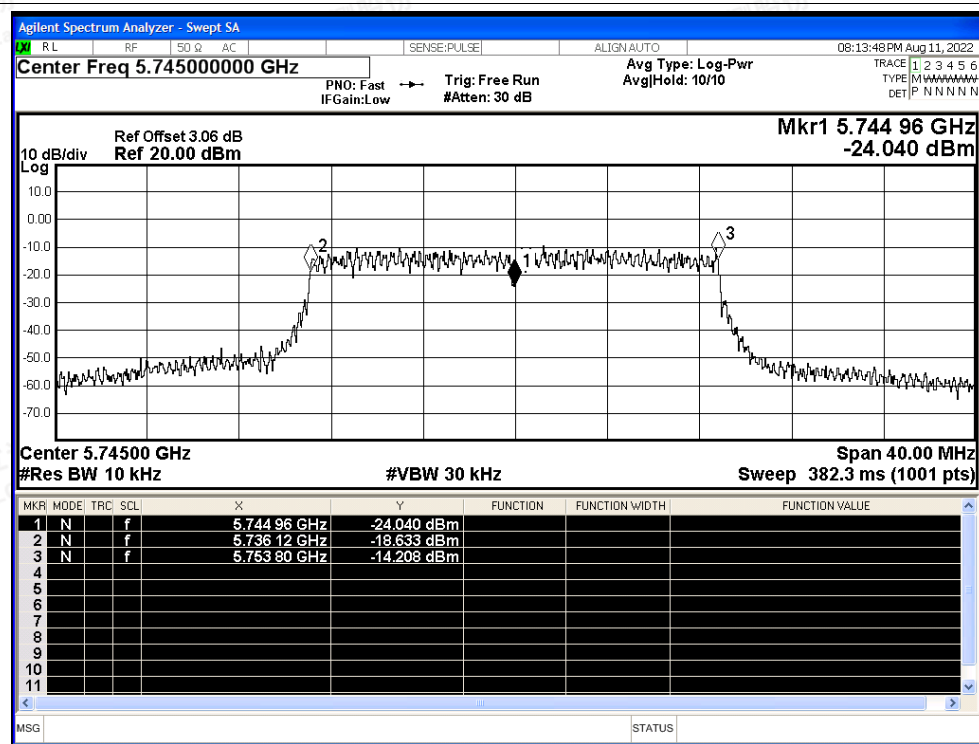




Freq. Stability NVNT n20 5785MHz Ant1

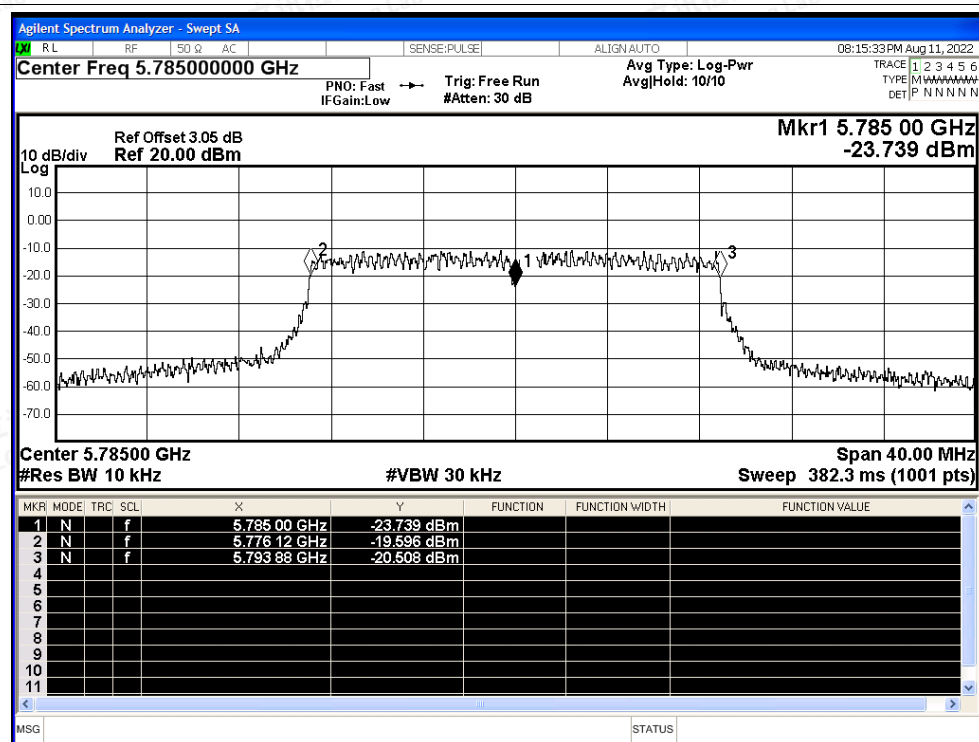


Freq. Stability NVNT n20 5825MHz Ant1

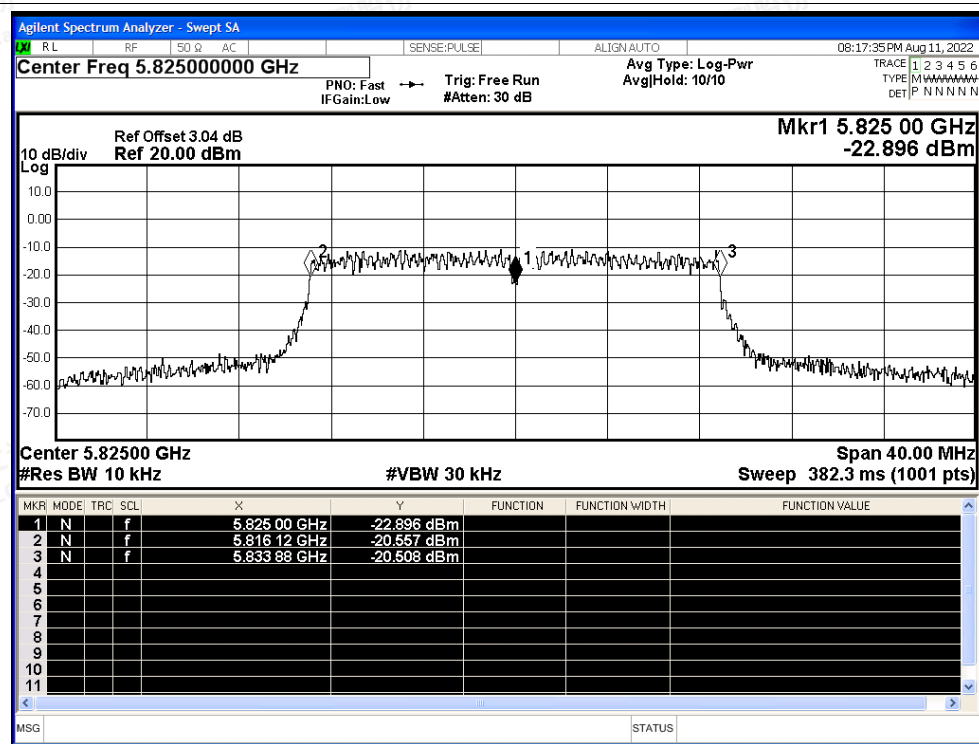




Freq. Stability NVNT n40 5755MHz Ant1

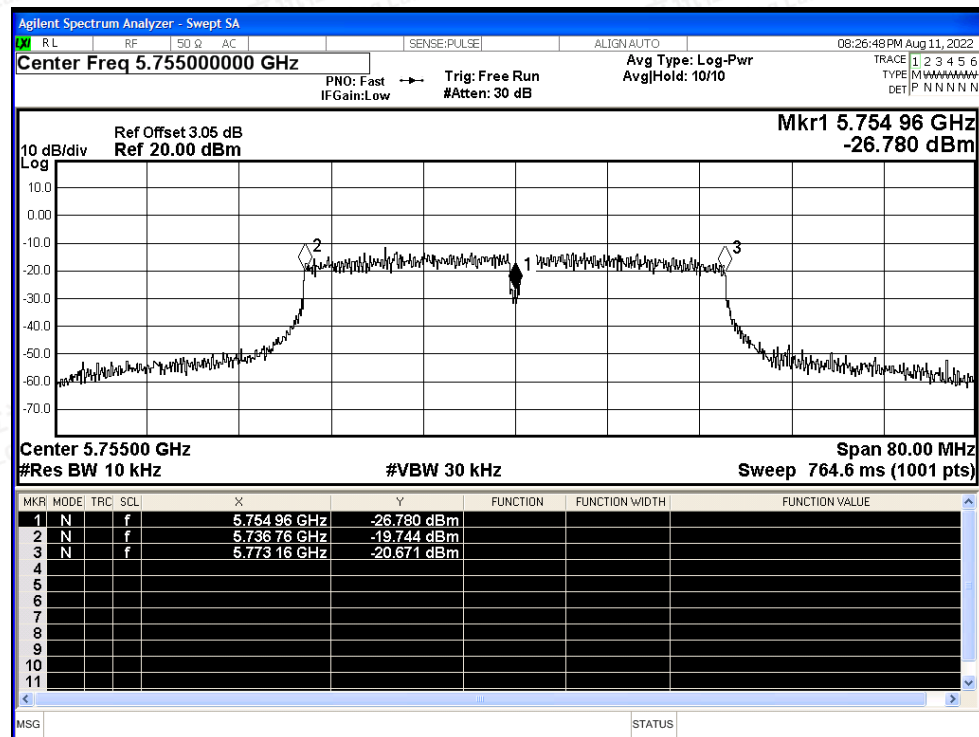


Freq. Stability NVNT n40 5795MHz Ant1

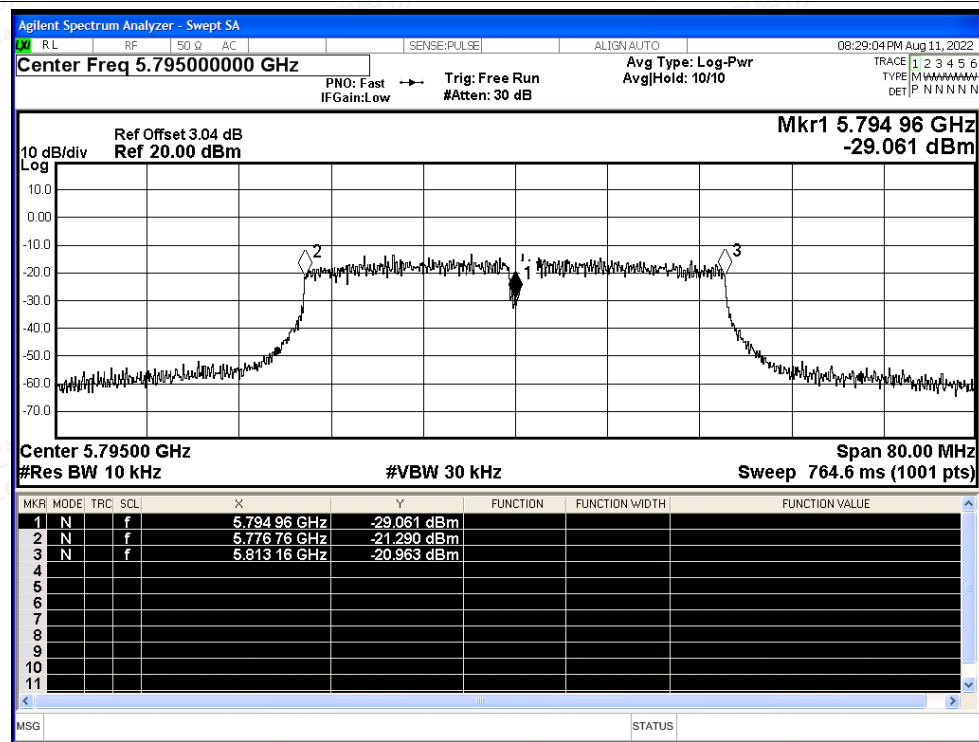




Freq. Stability NVNT ac20 5745MHz Ant1

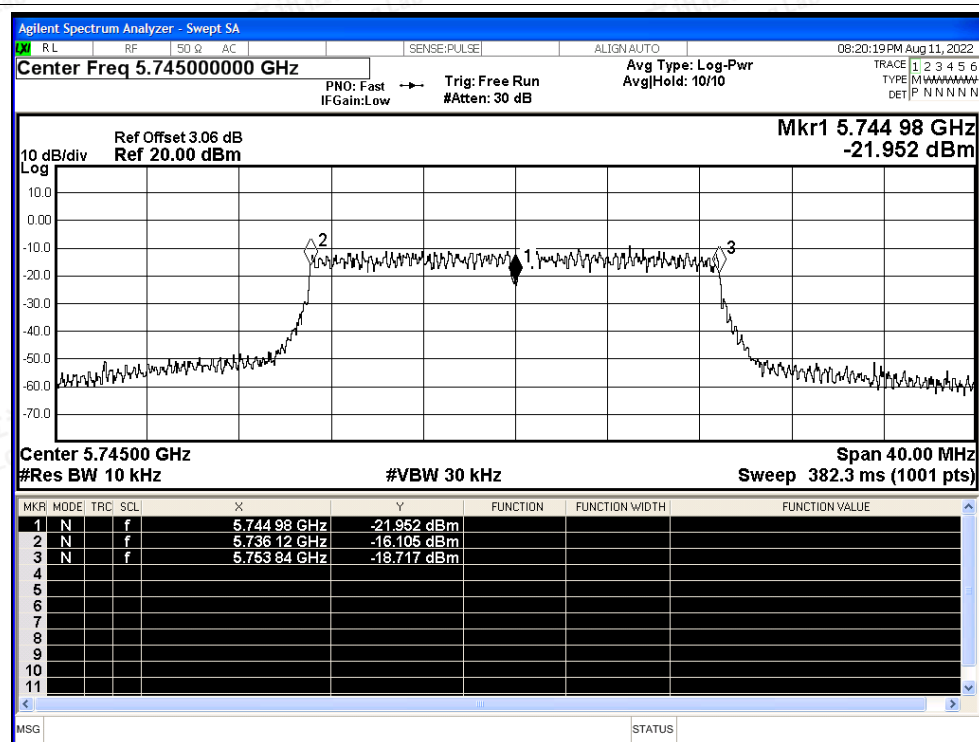


Freq. Stability NVNT ac20 5785MHz Ant1

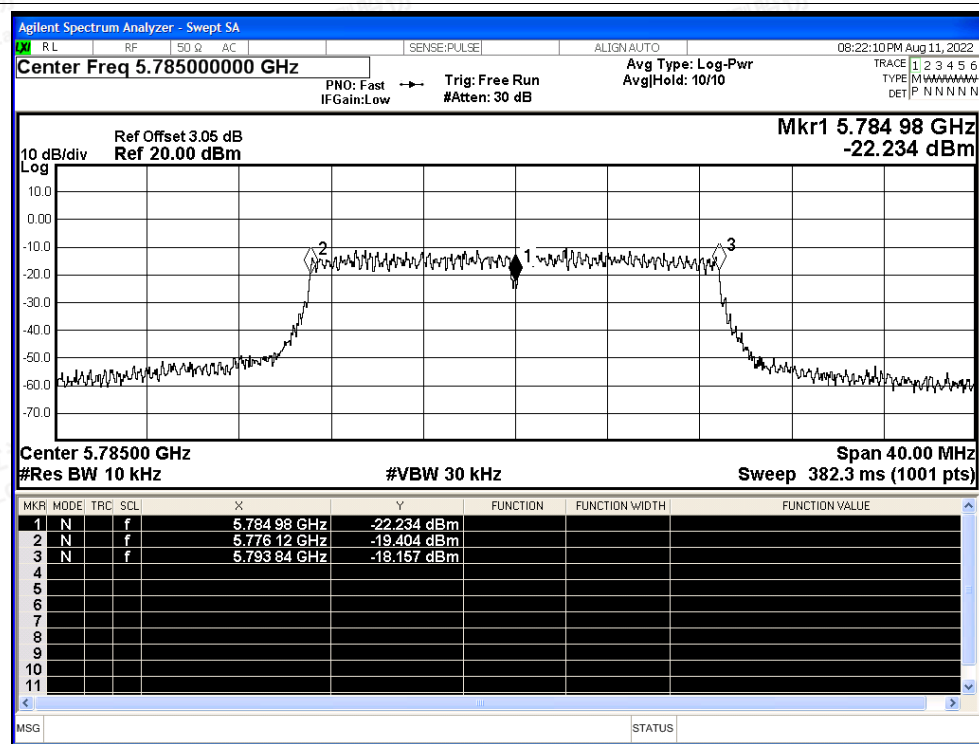




Freq. Stability NVNT ac20 5825MHz Ant1

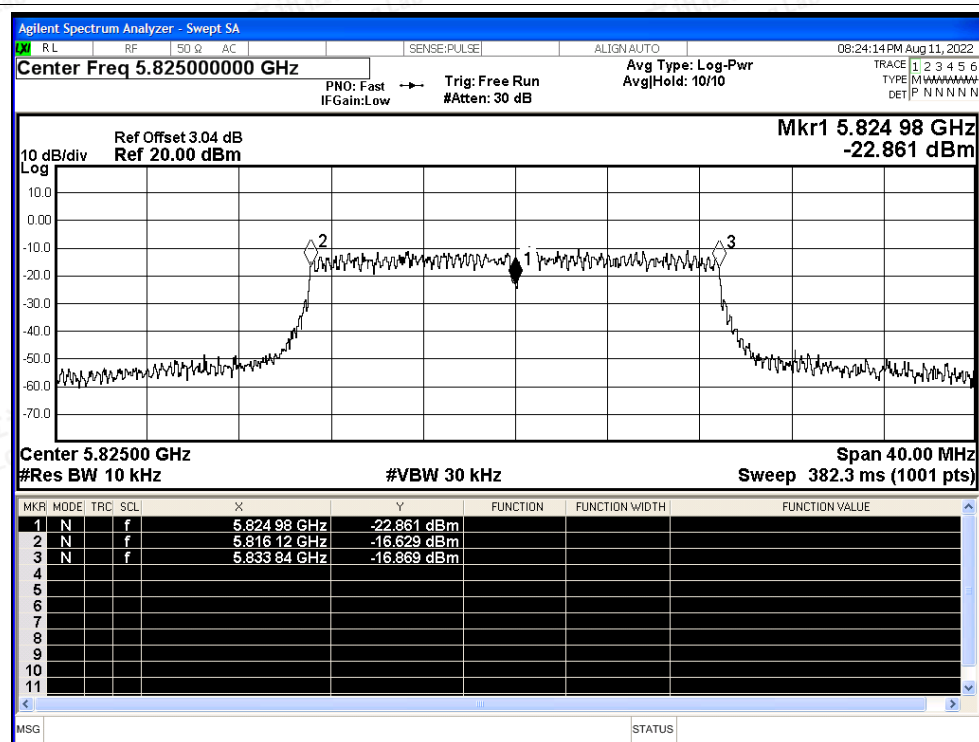


Freq. Stability NVNT ac40 5755MHz Ant1

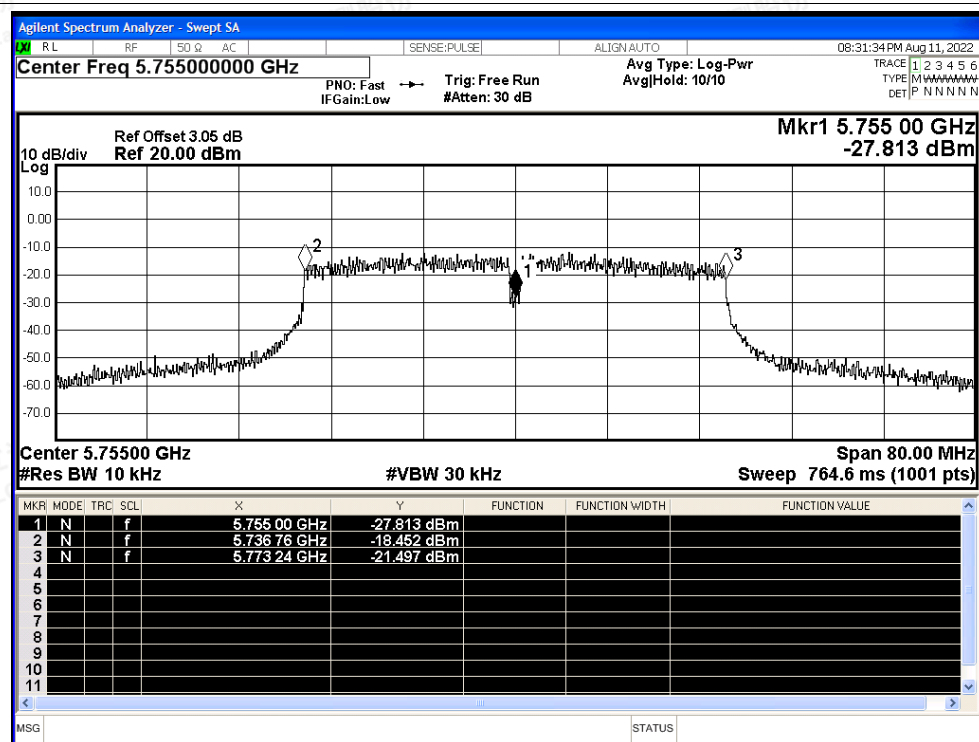




Freq. Stability NVNT ac40 5795MHz Ant1

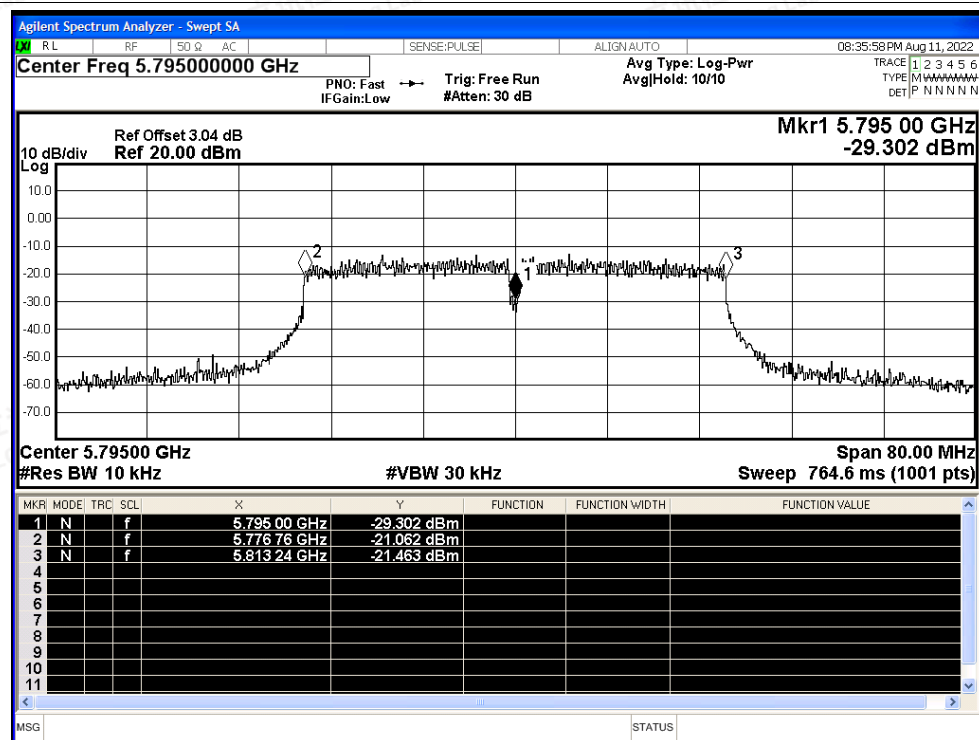

Freq. Stability NVNT ac80 5775MHz Ant1

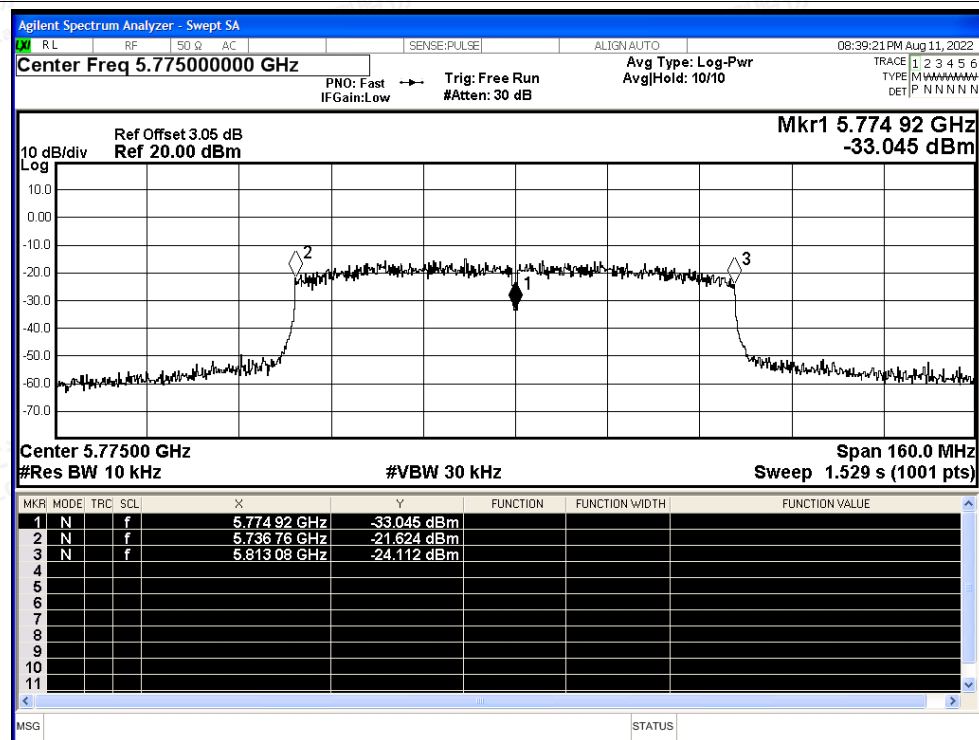



E.6 Duty Cycle


Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant0	80.21	0.96	0.49
NVNT	a	5785	Ant0	80.17	0.96	0.49
NVNT	a	5825	Ant0	80.21	0.96	0.49
NVNT	n20	5745	Ant0	79.05	1.02	0.53
NVNT	n20	5785	Ant0	79.08	1.02	0.53
NVNT	n20	5825	Ant0	79.08	1.02	0.53
NVNT	n40	5755	Ant0	65.1	1.86	1.07
NVNT	n40	5795	Ant0	65.03	1.87	1.08
NVNT	ac20	5745	Ant0	79.08	1.02	0.53
NVNT	ac20	5785	Ant0	79.11	1.02	0.53
NVNT	ac20	5825	Ant0	79.11	1.02	0.53
NVNT	ac40	5755	Ant0	65.16	1.86	1.07
NVNT	ac40	5795	Ant0	65.2	1.86	1.07
NVNT	ac80	5775	Ant0	47.59	3.22	2.2






Test Graphs

Duty Cycle NVNT a 5745MHz Ant0

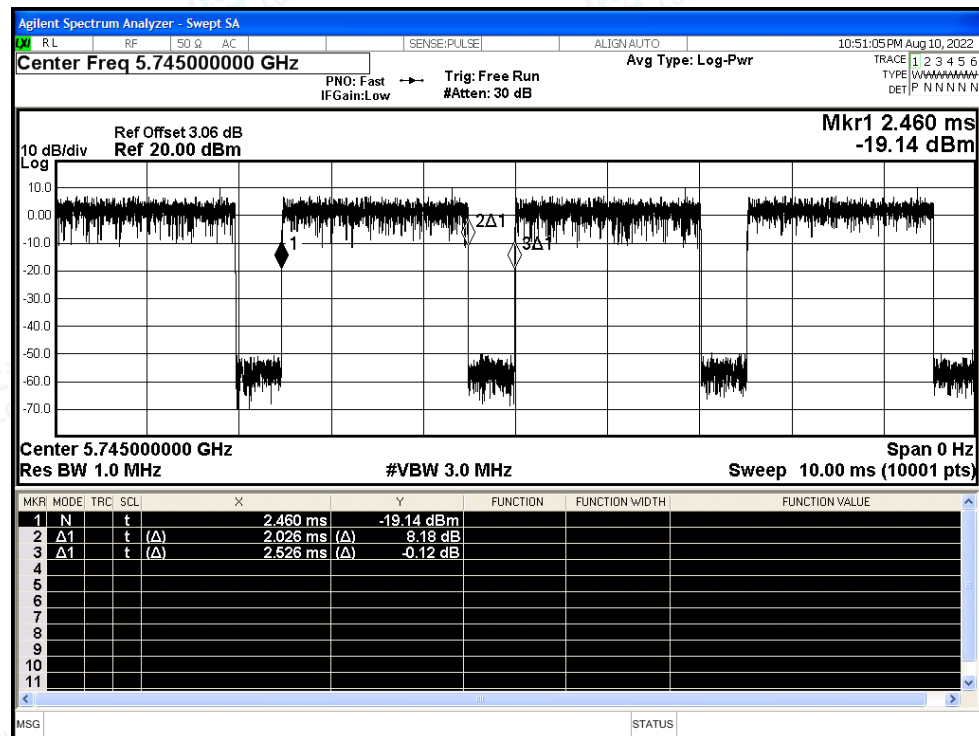


Duty Cycle NVNT a 5785MHz Ant0

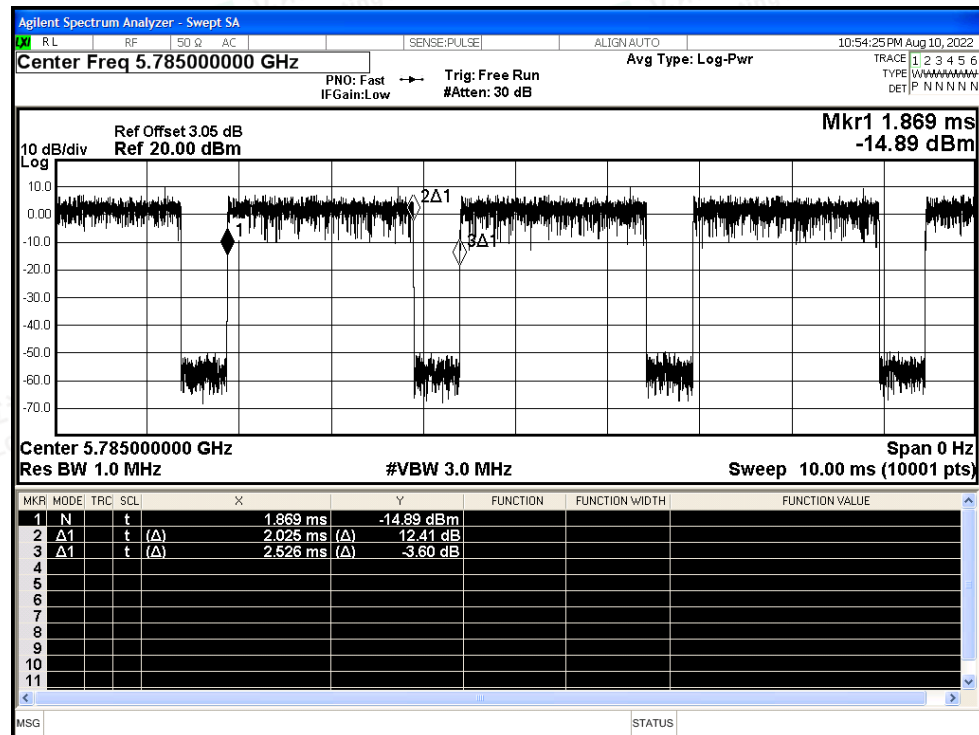






Duty Cycle NVNT a 5825MHz Ant0

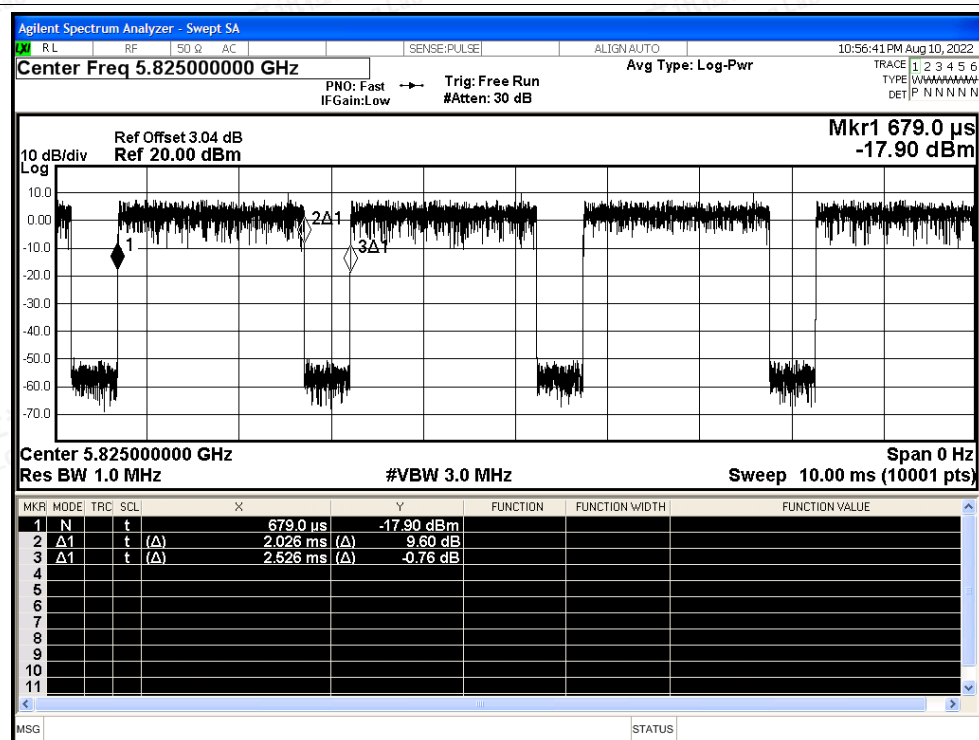


Duty Cycle NVNT n20 5745MHz Ant0

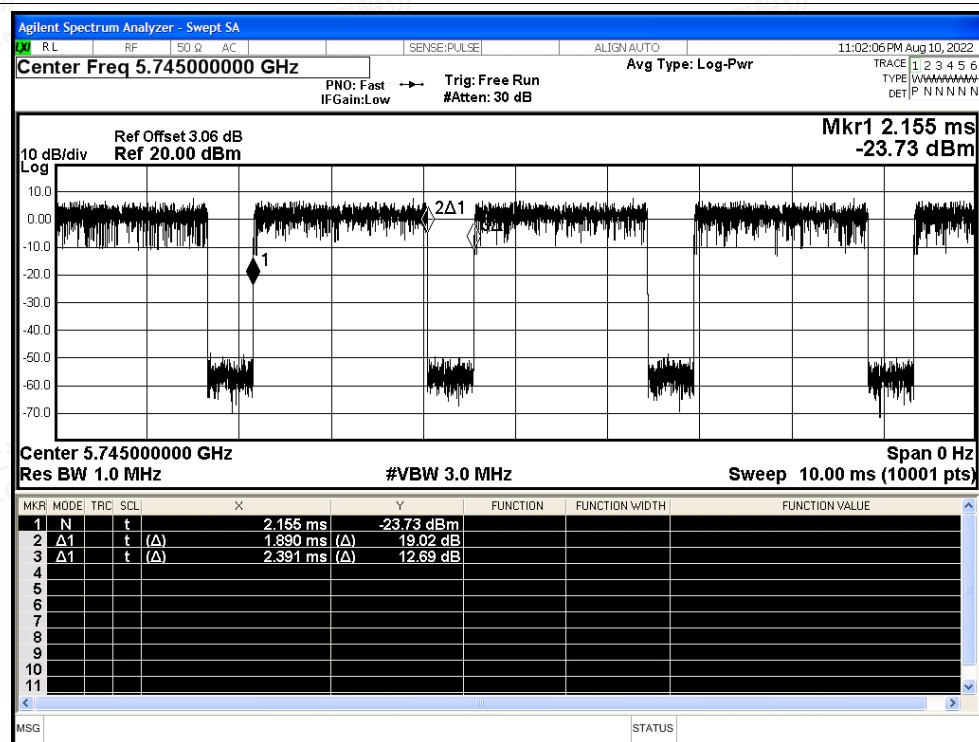

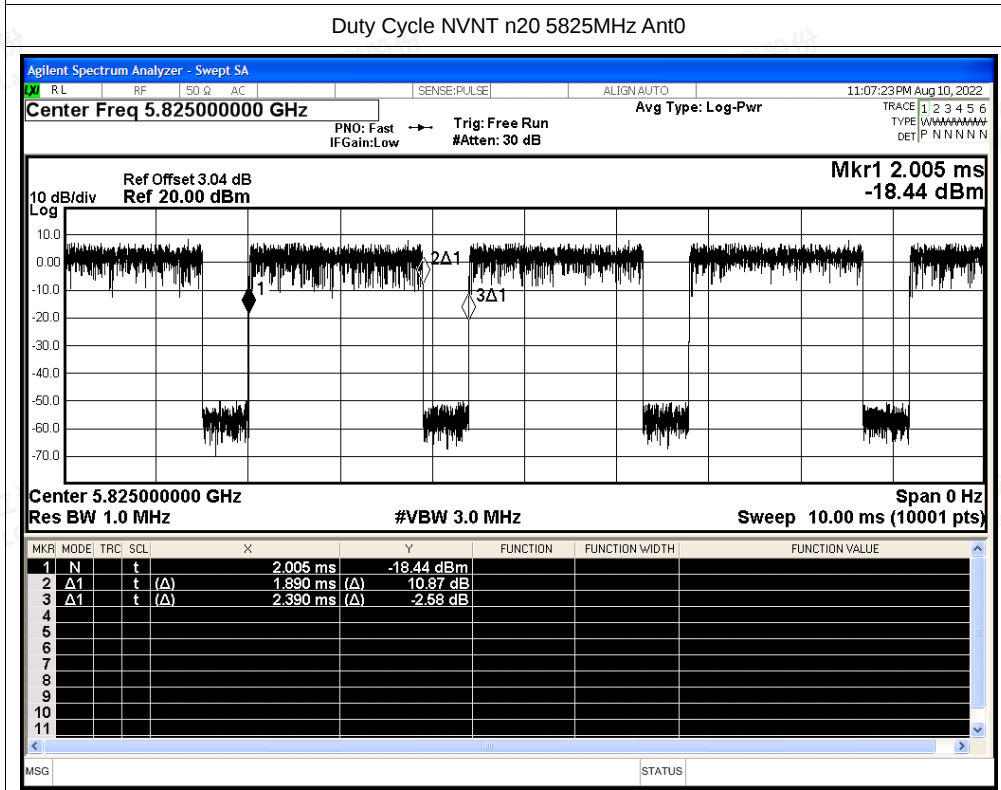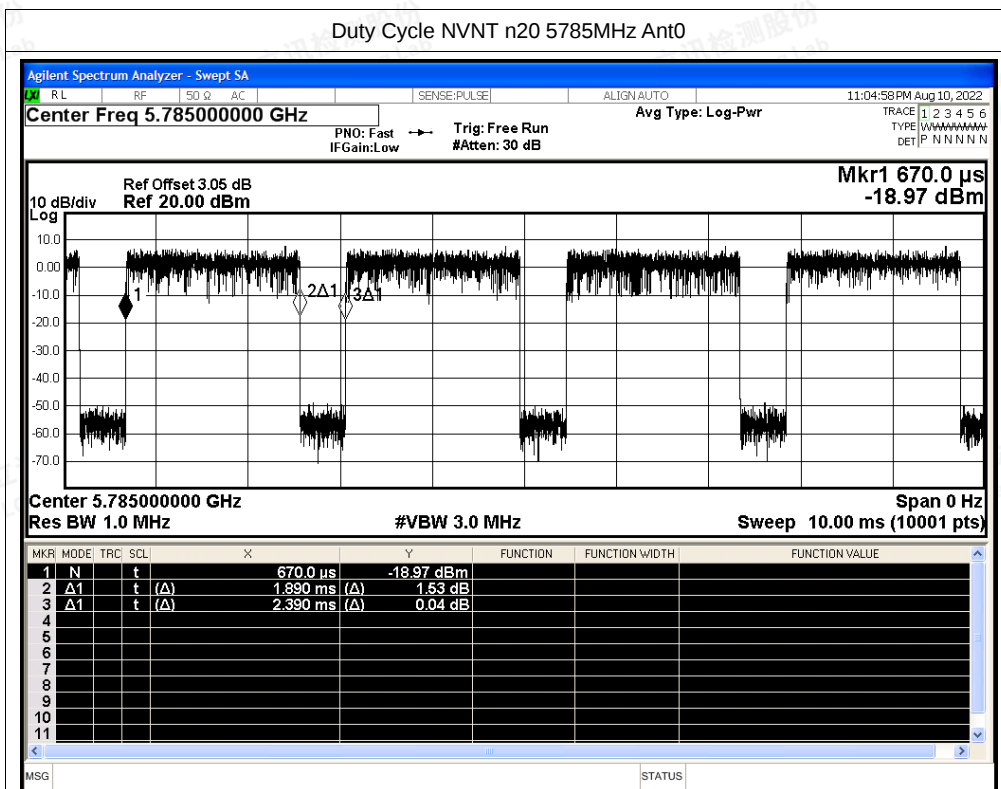




Duty Cycle NVNT n40 5755MHz Ant0

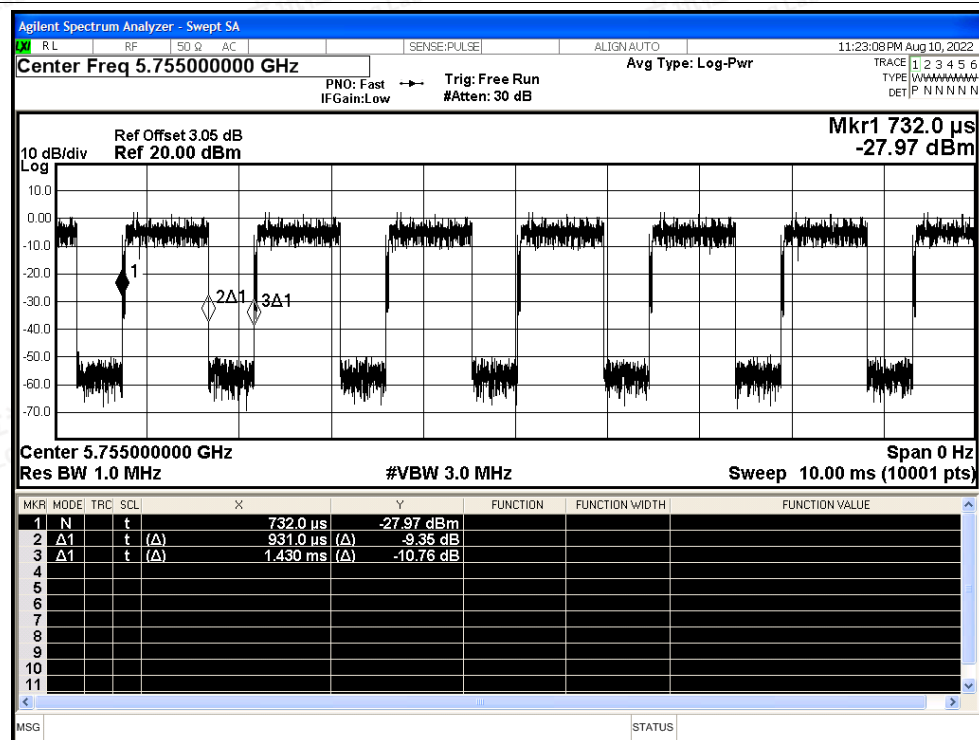


Duty Cycle NVNT n40 5795MHz Ant0

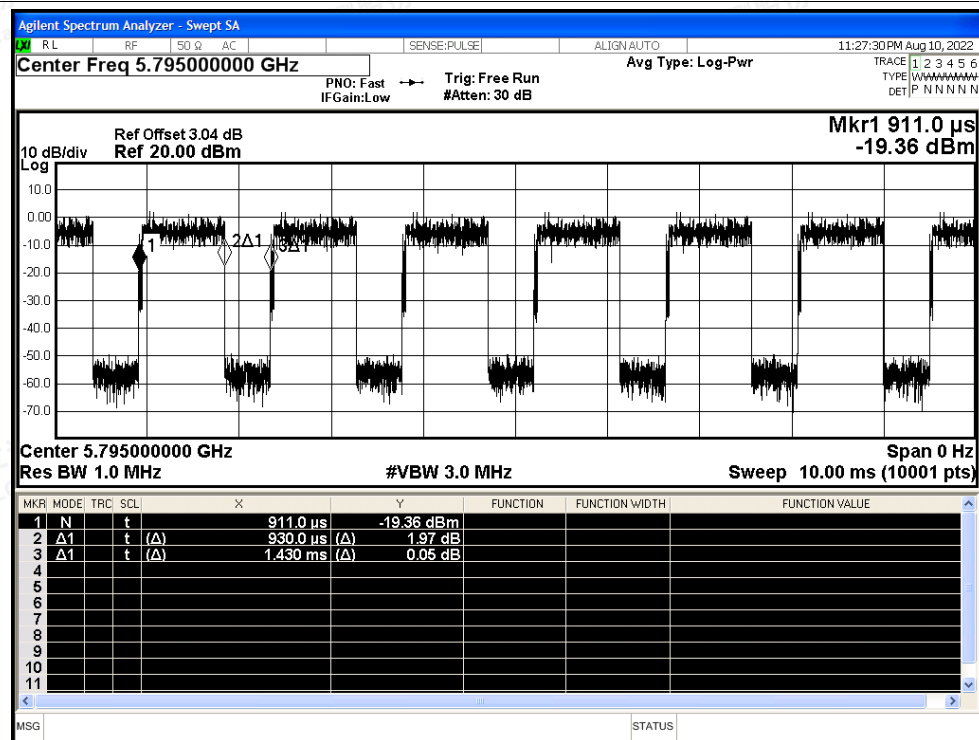




Duty Cycle NVNT ac20 5745MHz Ant0

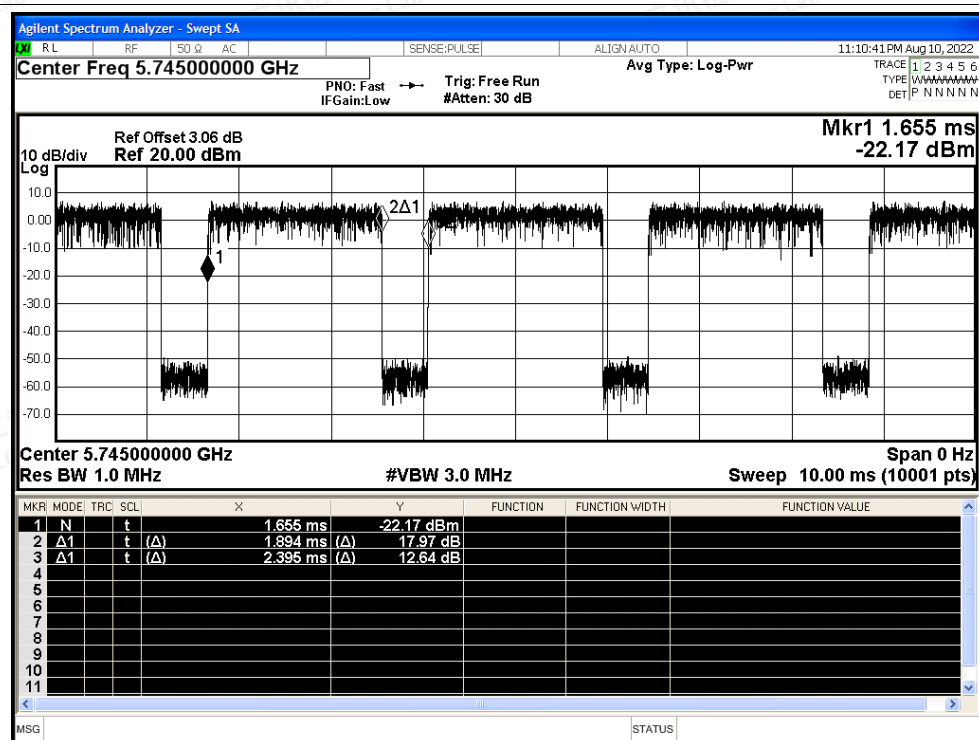


Duty Cycle NVNT ac20 5785MHz Ant0

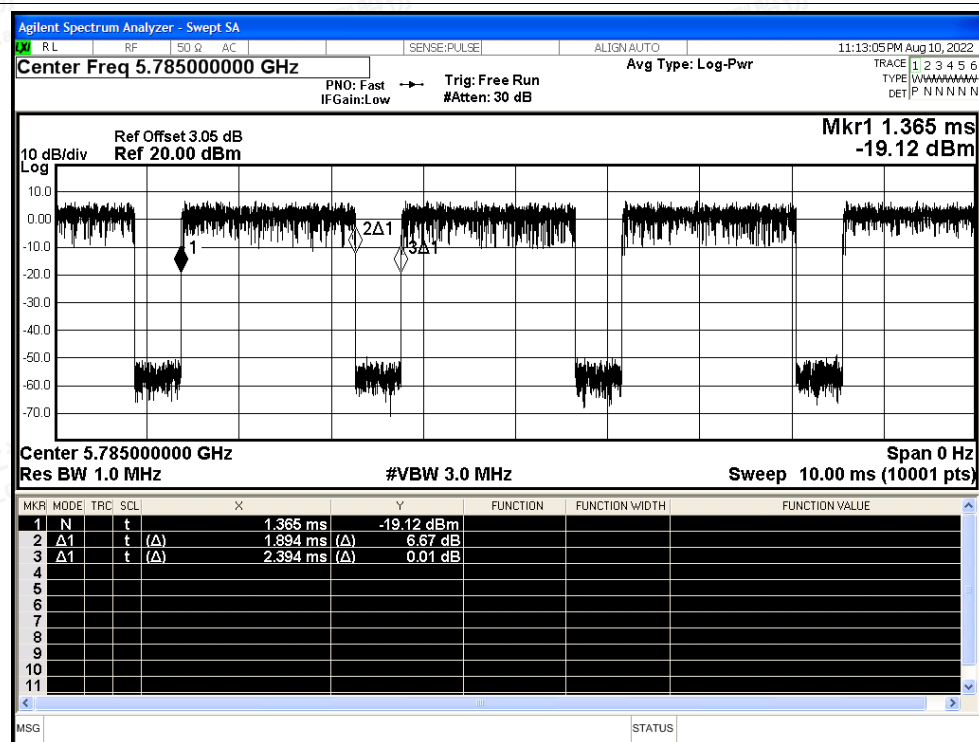




Duty Cycle NVNT ac20 5825MHz Ant0

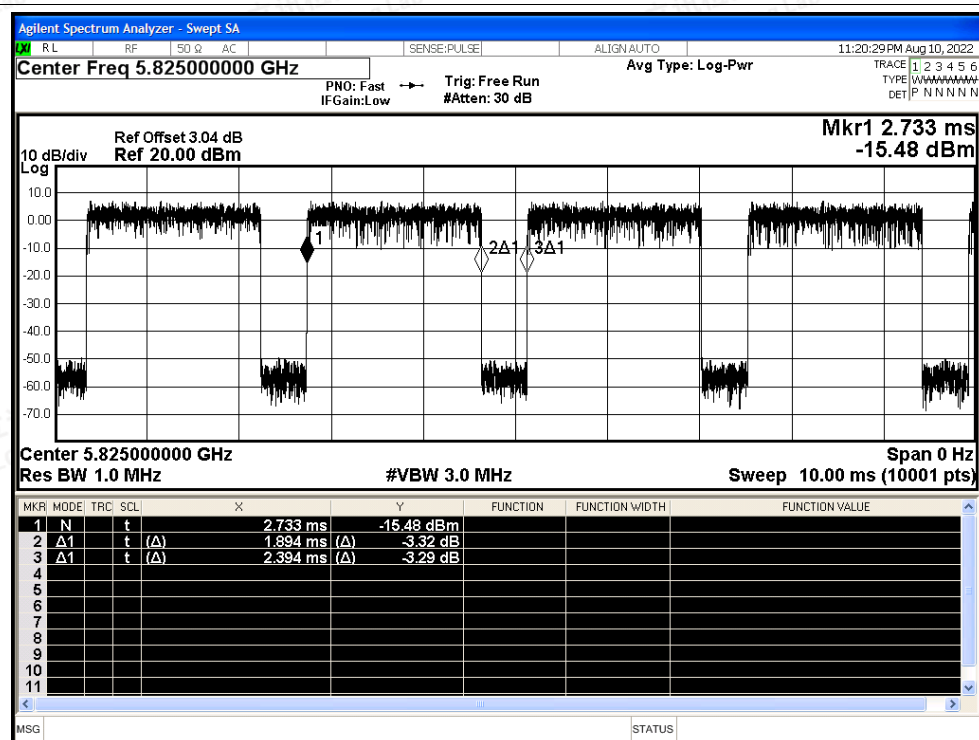


Duty Cycle NVNT ac40 5755MHz Ant0

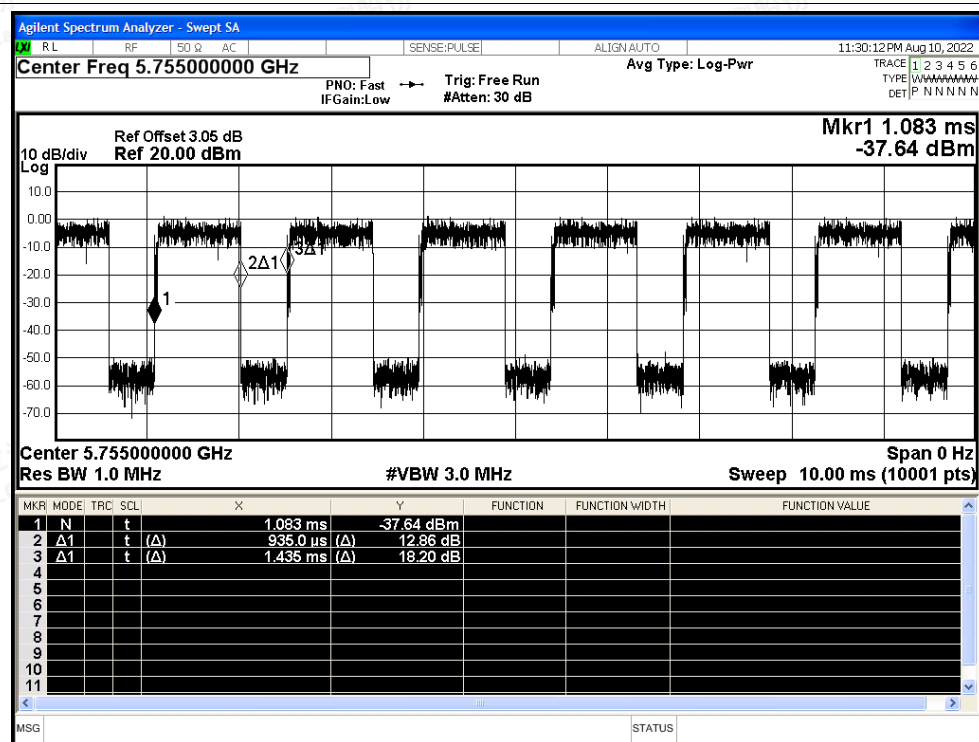




Duty Cycle NVNT ac40 5795MHz Ant0

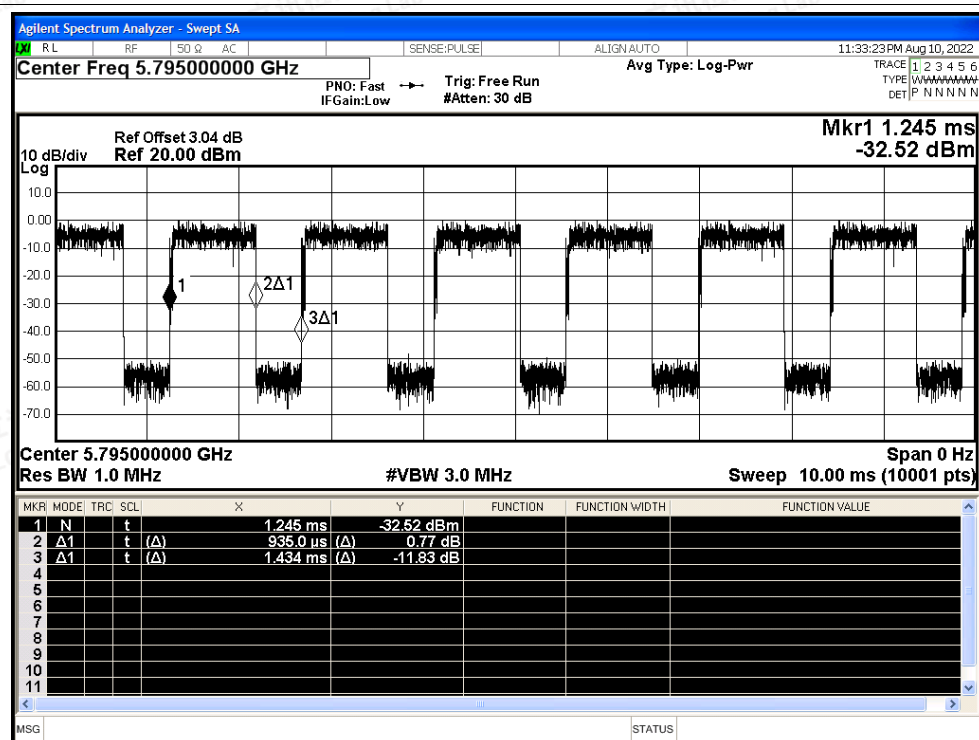

Duty Cycle NVNT ac80 5775MHz Ant0

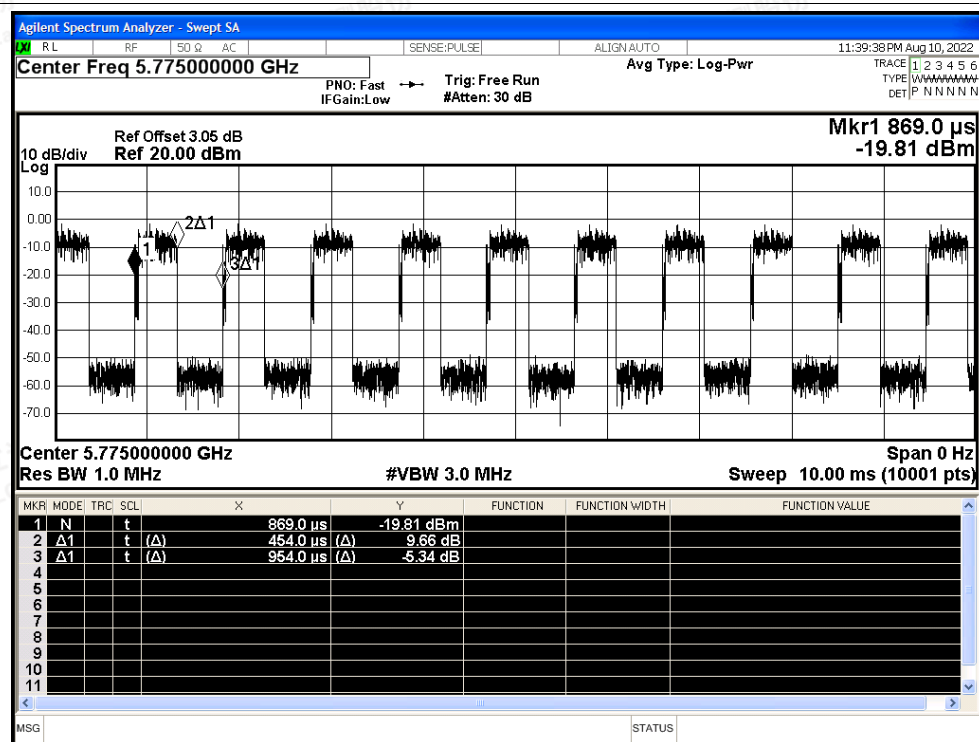




Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant1	80.17	0.96	0.49
NVNT	a	5785	Ant1	80.21	0.96	0.49
NVNT	a	5825	Ant1	80.21	0.96	0.49
NVNT	n20	5745	Ant1	79.08	1.02	0.53
NVNT	n20	5785	Ant1	79.08	1.02	0.53
NVNT	n20	5825	Ant1	79.05	1.02	0.53
NVNT	n40	5755	Ant1	60	2.22	333.33
NVNT	n40	5795	Ant1	65.06	1.87	1.07
NVNT	ac20	5745	Ant1	79.07	1.02	0.53
NVNT	ac20	5785	Ant1	79.08	1.02	0.53
NVNT	ac20	5825	Ant1	79.07	1.02	0.53
NVNT	ac40	5755	Ant1	65.16	1.86	1.07
NVNT	ac40	5795	Ant1	65.16	1.86	1.07
NVNT	ac80	5775	Ant1	47.2	3.26	2.24






Test Graphs

Duty Cycle NVNT a 5745MHz Ant1

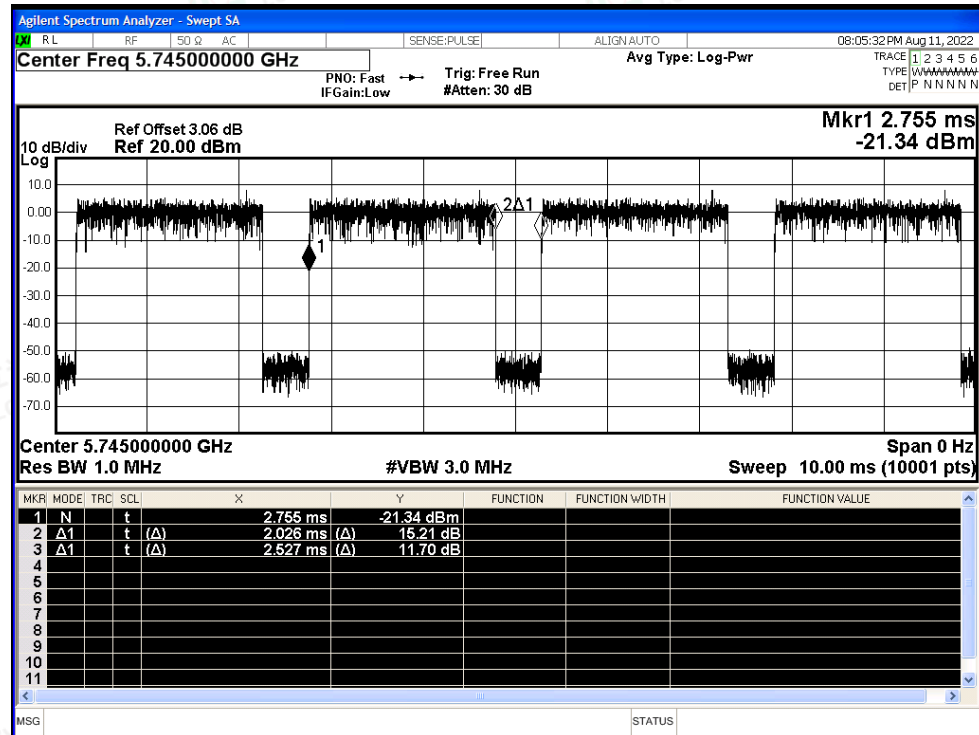


Duty Cycle NVNT a 5785MHz Ant1

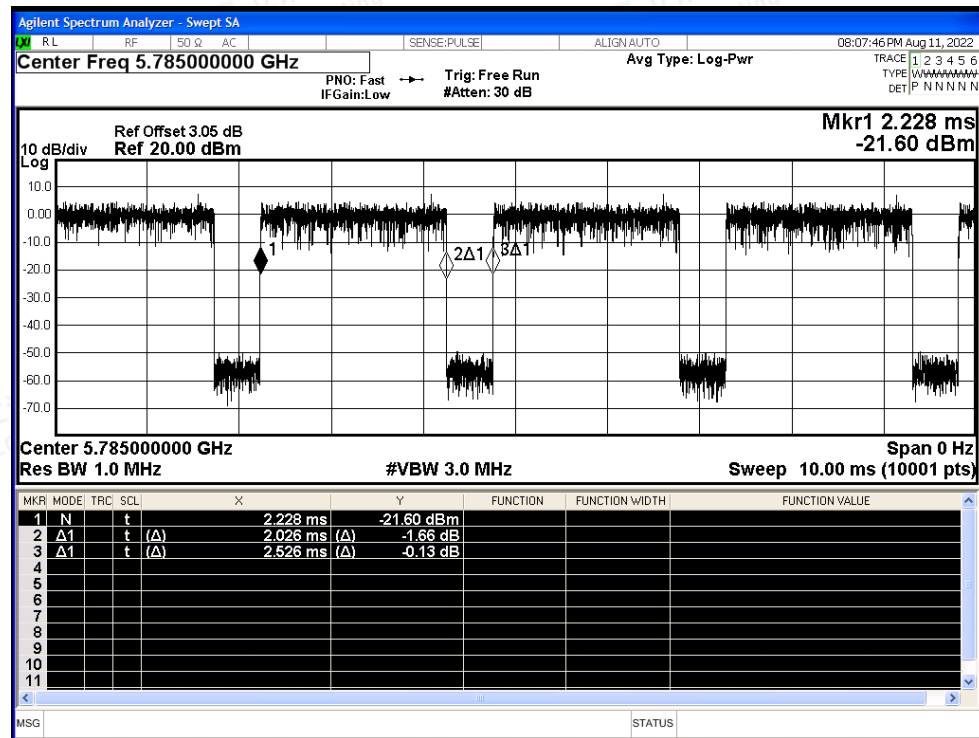




Duty Cycle NVNT a 5825MHz Ant1

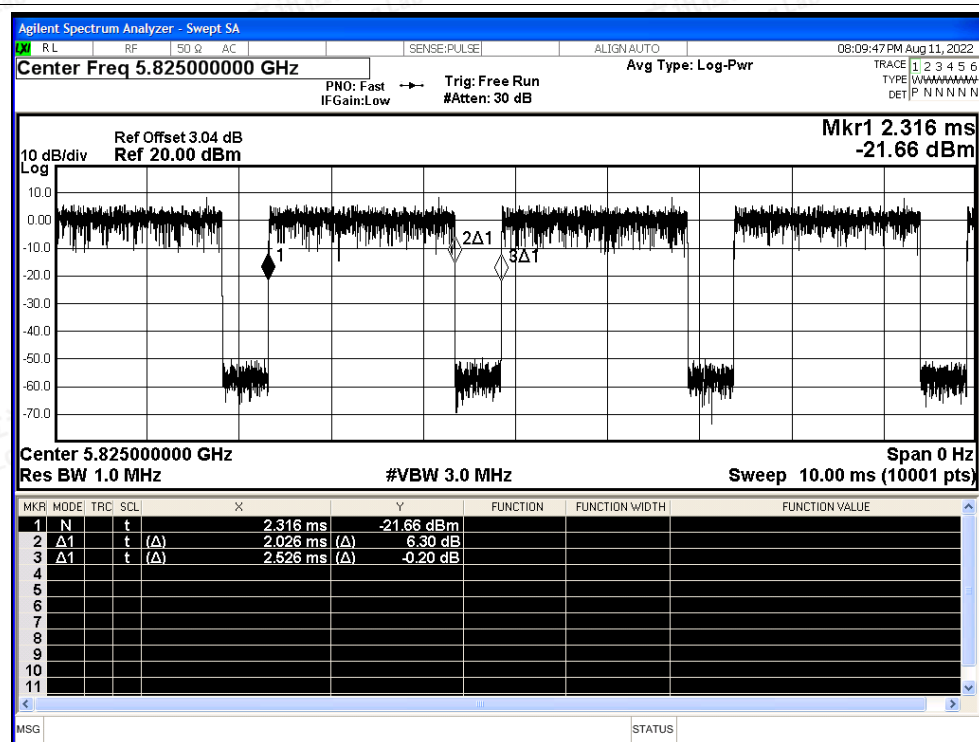


Duty Cycle NVNT n20 5745MHz Ant1

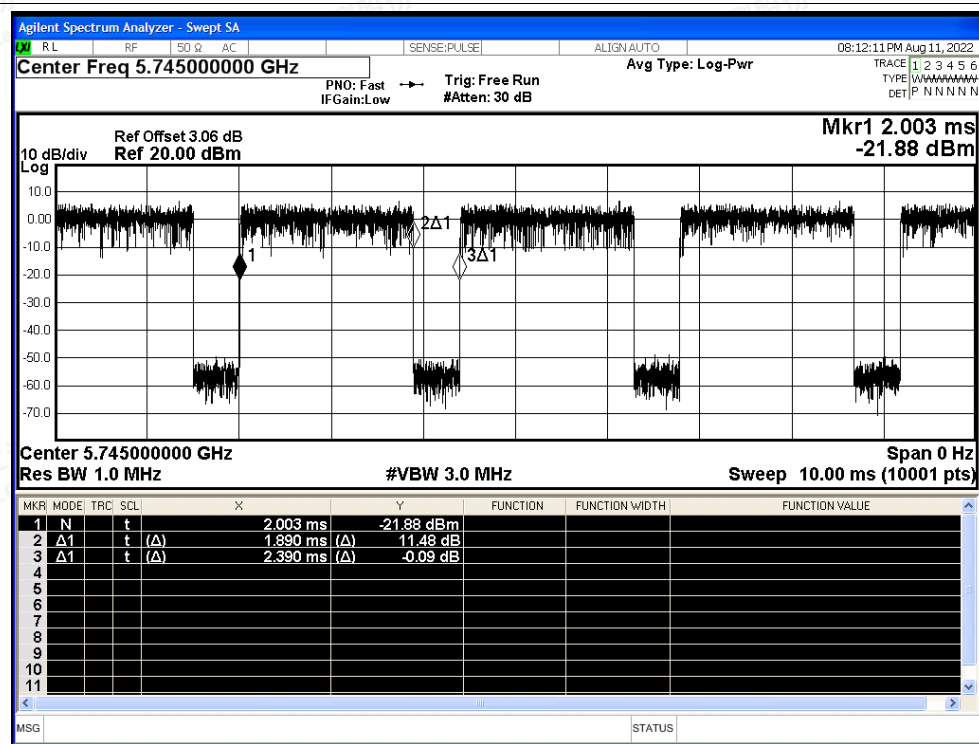




Duty Cycle NVNT n20 5785MHz Ant1

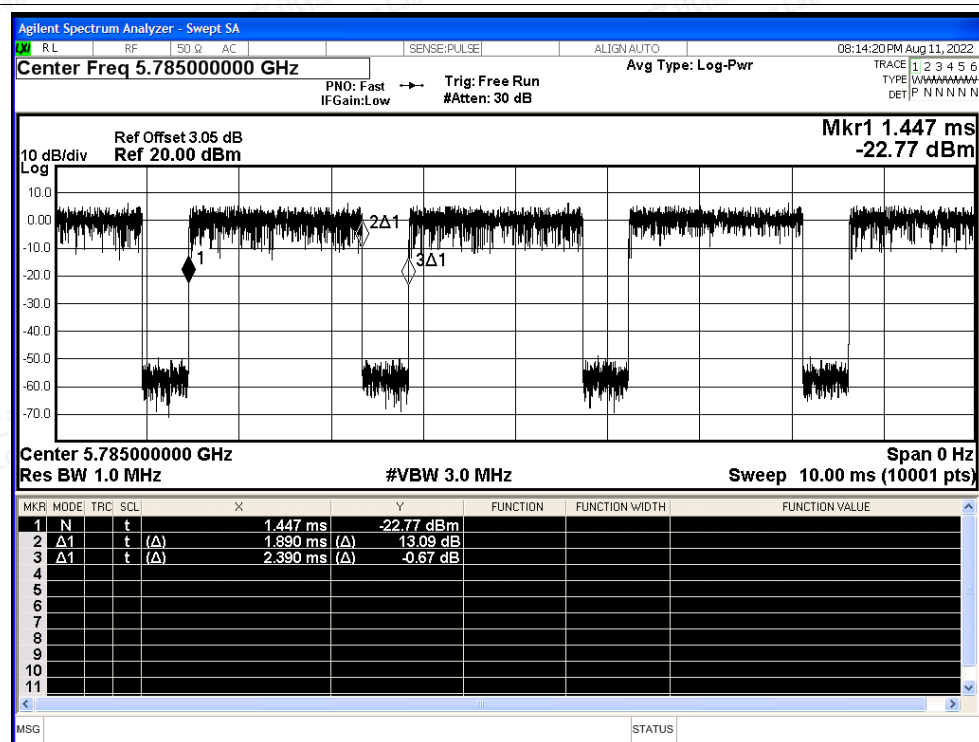


Duty Cycle NVNT n20 5825MHz Ant1

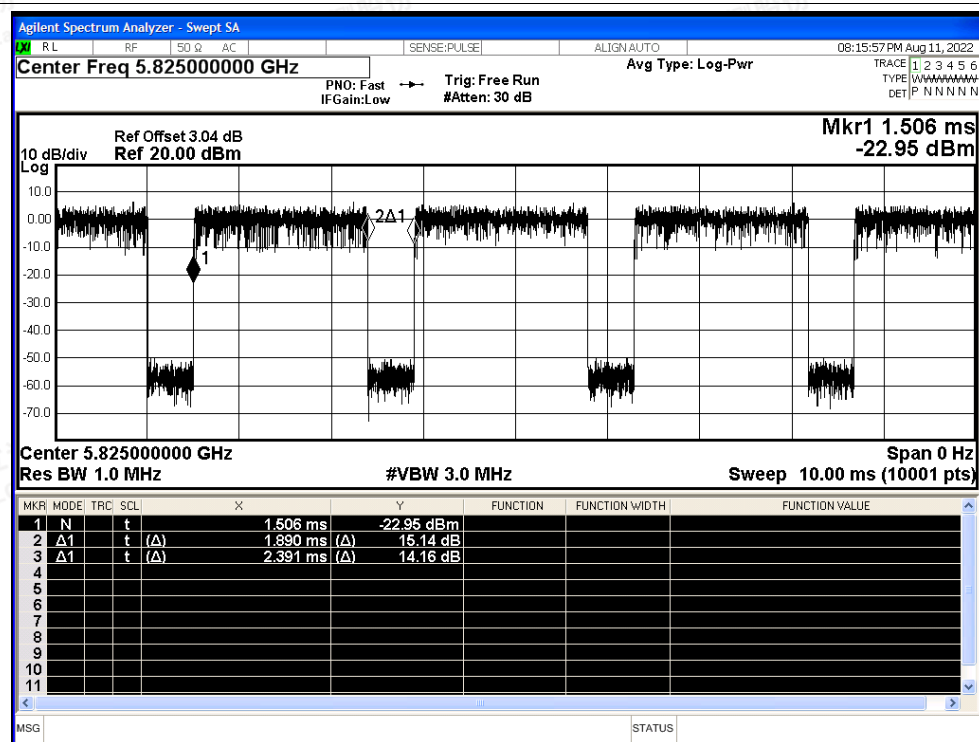




Duty Cycle NVNT n40 5755MHz Ant1

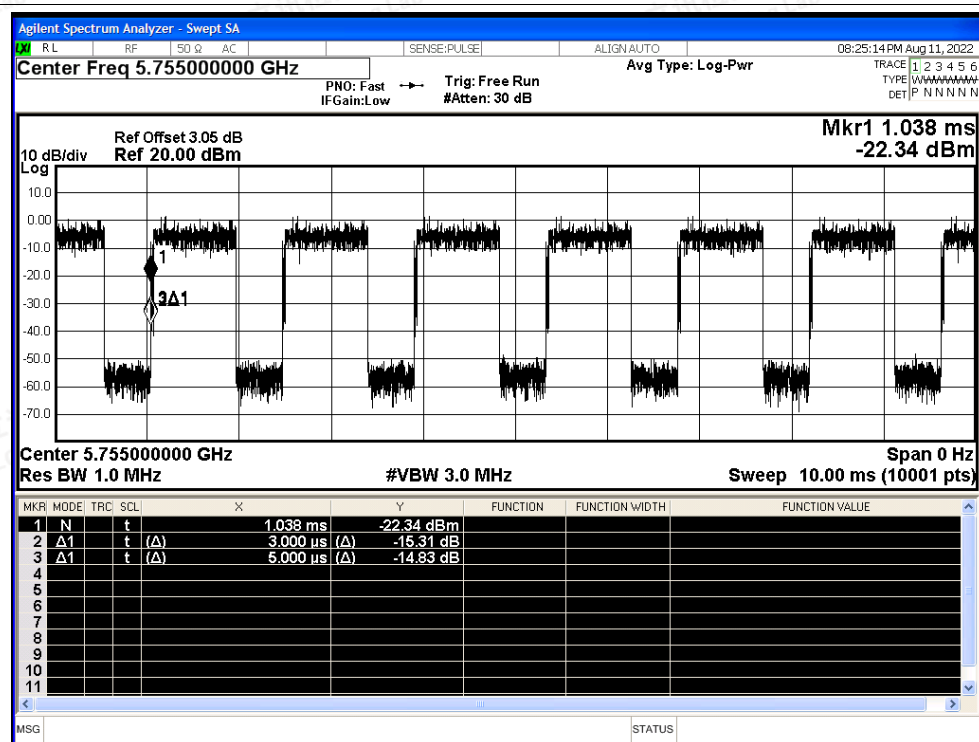


Duty Cycle NVNT n40 5795MHz Ant1

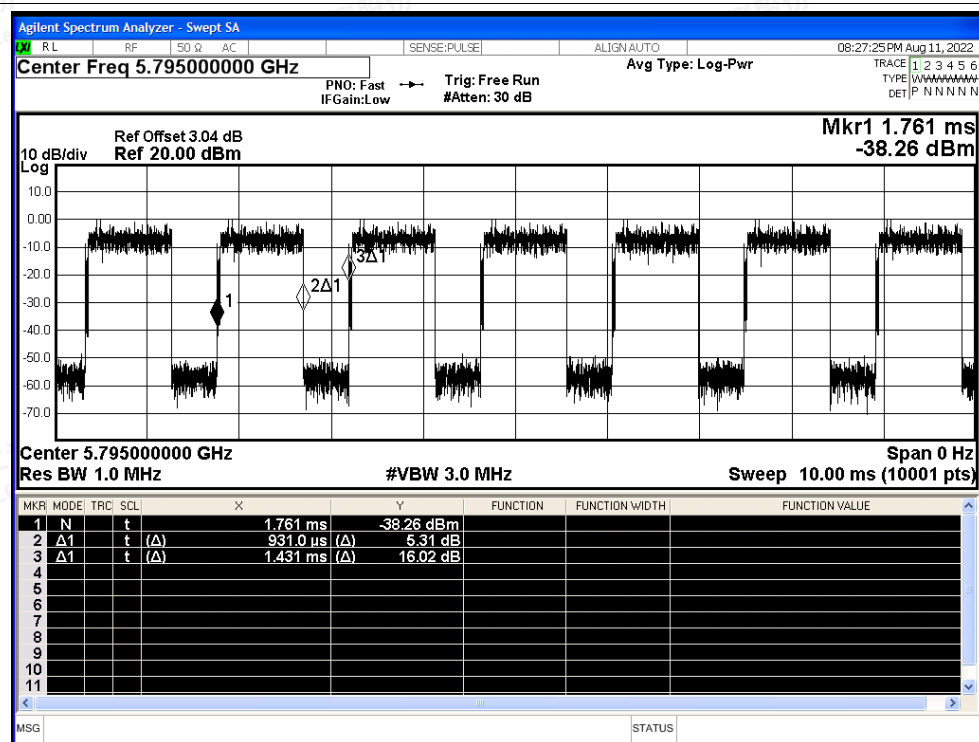




Duty Cycle NVNT ac20 5745MHz Ant1

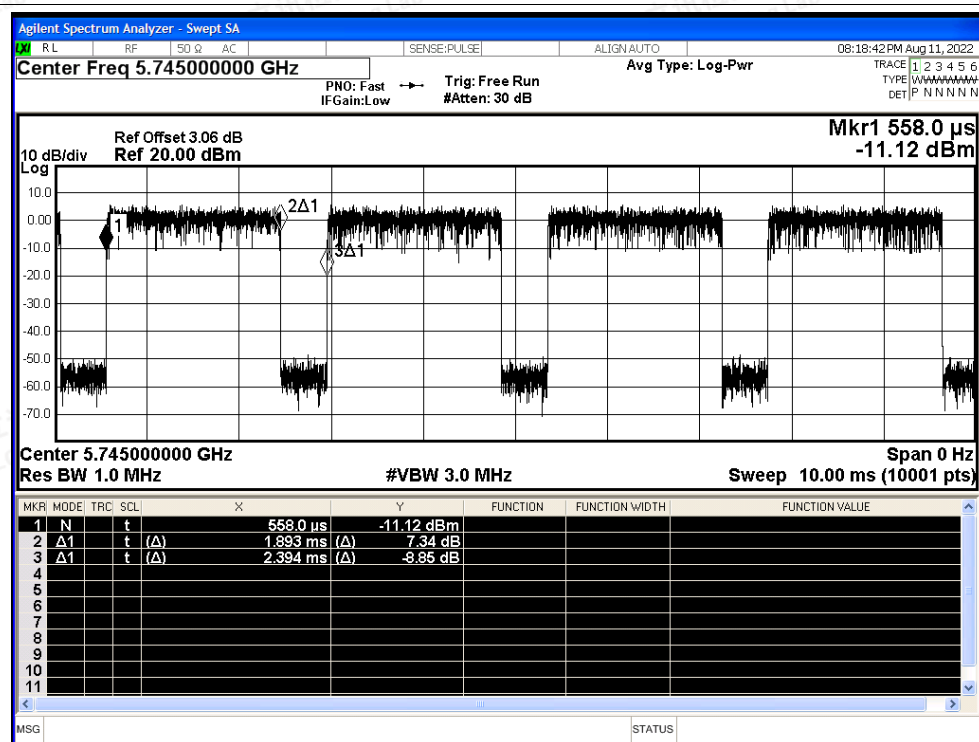


Duty Cycle NVNT ac20 5785MHz Ant1

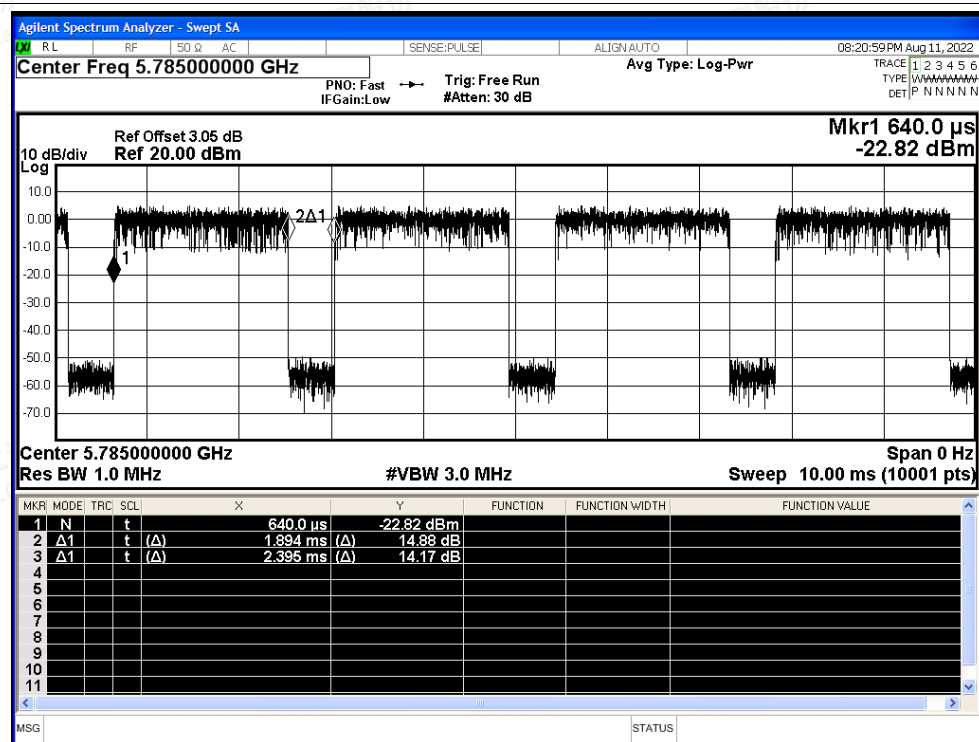




Duty Cycle NVNT ac20 5825MHz Ant1

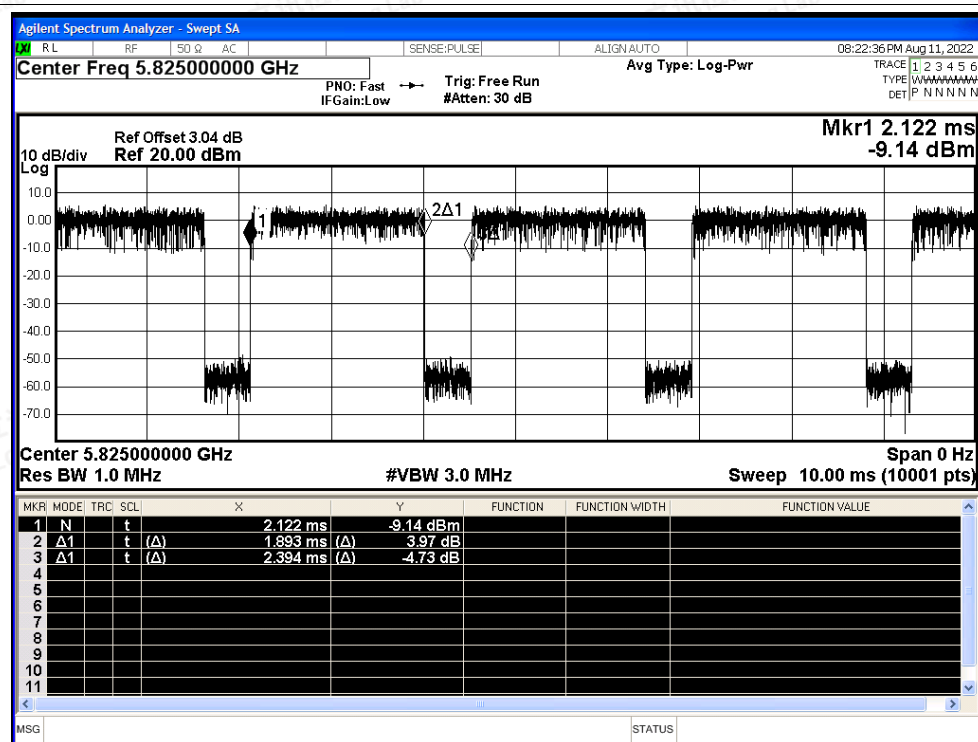


Duty Cycle NVNT ac40 5755MHz Ant1

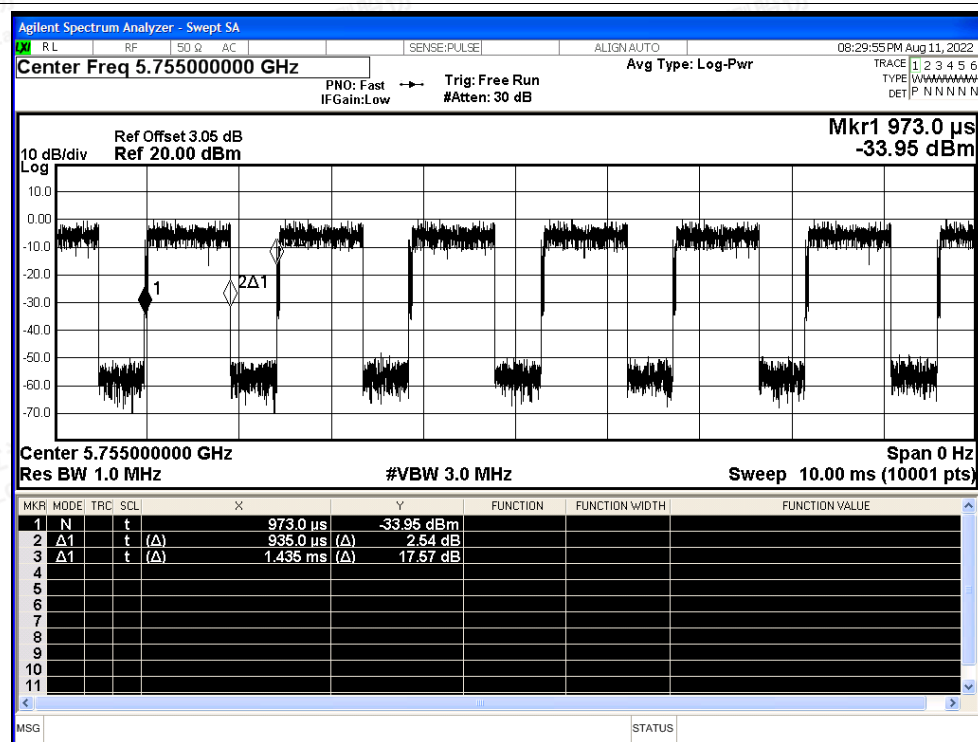



Duty Cycle NVNT ac40 5795MHz Ant1

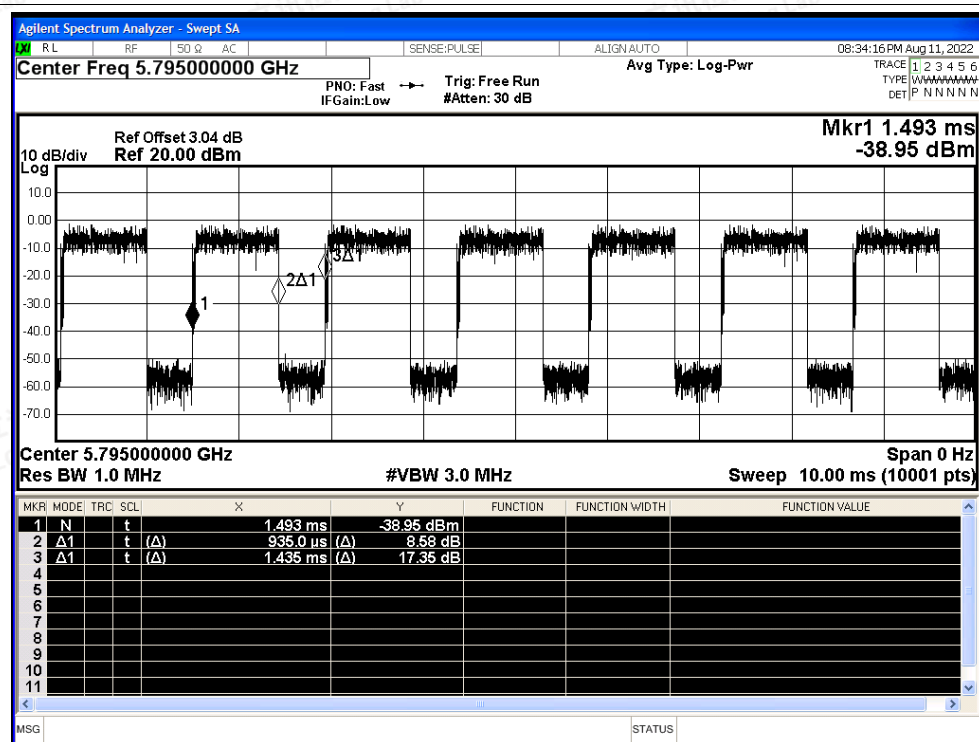

Duty Cycle NVNT ac80 5775MHz Ant1

