

Model No.:MH22198

**MONSTER**


Bluetooth headset

**QUICK START GUIDE**

Please read this Quick Start Guide carefully and keep it for future use.

**Product Overview**

In-ear Earphone x 2 (left & right)  
Charging Case  
USB-C Charging Cable  
Quick Start Guide and Warranty Letter

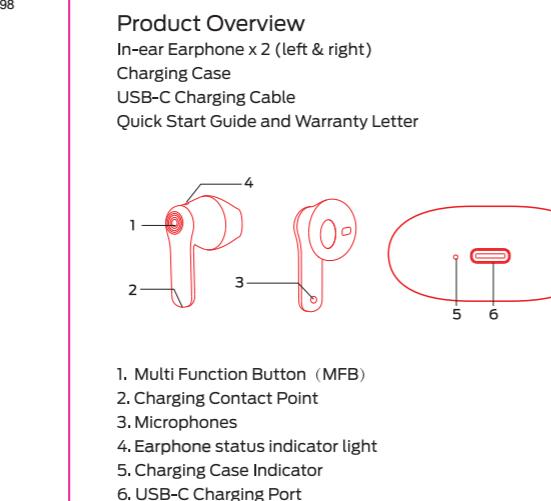

1. Multi Function Button (MFB)  
2. Charging Contact Point  
3. Microphones  
4. Earphone status indicator light  
5. Charging Case Indicator  
6. USB-C Charging Port

**Power On/Off**

Open the cover of the charging case, take out the earphone, and it will turn on automatically. Put the earphone into the charging case, and the earphone will automatically shut down and charge.

**Charging Case Charging**

Use the USB-C charging cable delivered with the product to charge, and the charging case indicator shows the charging status. When the charging case is fully charged, the charging case indicator lights up.

**Pairing**

Open the cover of the charging case, take out the earphone, and it will turn on automatically. Later, you can hear "pairing" as a voice prompt. To connect to a new device, please turn on the Bluetooth of your mobile phone and search for "Monster N-Lite 207" to pairing the device. After successfully connecting, you will hear "connected" voice prompt.

**Volume Control**

Volume down: Double tap the MFB on the left earphone during music streaming.  
Volume up: Double tap the MFB on the right earphone during music streaming.

**Call**

Answer / End a call: Single tap the MFB.  
Reject the call: Press and hold the MFB for about 2 seconds.

**Music**

Play/Pause music: Single tap the MFB  
Previous song: Press and hold the MFB on the left earphone for about 2 seconds.  
Next song: Press and hold the MFB on the right earphone for about 2 seconds.

**Voice Control**

With the earphones connected to the phone, press the MFB key three times to activate or disable the voice assistant.

**Reset**

When the earphone is powered on and not connected to Bluetooth device, press the MFB button of one earphone five times to restore the factory Settings.

**Indicator/Voice Prompt Guide**

Mode	Description	Voice Prompt
Power On	- white light stays on for 1 second	"Power On"
Power Off	- white light will turn on for 3 seconds and then turn off	"Power Off"
Pairing	- White light flashing fast	"Pairing"
Connected	- Light goes out	"Connected"
Charging case	When charging the charging case, the indicator light on the charging case flashes, and it will stay on after being fully charged	-

**Cautions**

- \* After removing the earphones from the charging case, without pressing any buttons, the left and right earpieces will connect automatically.
- When no connections found, it will enter automatic pairing mode.
- \* Please place the earphones in the correct location (L/R) for normal charging.
- \* Replacement of battery (on your own) is not recommended.
- \* Do not expose battery (battery pack) to excessive heat such as direct sunlight or fire.

**FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2AVD2-MH22198

For service, warranty, or product information, please contact: [customerservice@monster-china.com](mailto:customerservice@monster-china.com) with your Amazon order ID.

Model No.: MH22163

**MONSTER**

Bluetooth headset

**快速指南**

请仔细阅读快速指南并妥善保存以备将来使用。

**产品概述**

\*入耳式耳机x 2 (左&右)  
\*充电盒  
\*USB-C充电线  
\*快速指南与保修单



1. 多功能触控键 (MFB)  
2. 充电触点  
3. 麦克风  
4. 耳机状态指示灯  
5. 充电盒指示灯  
6. USB-C充电接口

**电源开/关**

打开充电盒盖, 取出耳机, 它将自动开机。将耳机放入充电盒, 耳机会自动关机及进行充电。

**充电盒充电**

使用产品自带的 USB-C 充电线进行充电, 充电盒指示灯显示充电状态。当充电盒充满电时, 充电盒指示灯长亮。

**配对**

打开充电盒盖子, 取出耳机, 它将自动开机。之后您可以听到 "pairing" 的语音提示。对于新设备连接, 请打开手机蓝牙并搜索 "Monster N-Lite 207" 进行配对, 连接成功后, 你会听到 "connected" 语音提示。

**音量控制**

调低音量: 在音乐播放状态下, 双击左耳机的触摸多功能按键。  
调高音量: 在音乐播放状态下, 双击右耳机的触摸多功能按键。

**通话**

接听/结束通话: 单击触摸多功能按键。  
拒接来电: 按住触摸多功能按键约2秒钟。

**音乐**

播放/暂停音乐: 单击触摸多功能按键。  
上一曲: 长按左耳机触摸多功能按键约2秒。  
下一曲: 长按右耳机触摸多功能按键约2秒。

**语音控制**

在耳机与手机连接状态下, 连按3下MFB键以激活或关闭语音助手。

**恢复出厂设置**

在耳机开机且未连接蓝牙设备时, 连按其中一个耳机的MFB键5次, 即可恢复出厂设置。

**指示灯/语音指南**

模式	描述	声音提示
开机	- 白灯长亮1秒1次	"Power On"
关机	- 白灯亮3秒后灯灭	"Power Off"
配对	- 白灯快闪	"Pairing"
连接	- 灯光熄灭	"Connected"
充电盒充电	充电盒充电时, 充电盒上的指示灯闪烁, 充满后长亮	-

**注意**

- \*从充电盒中取出耳机后, 无需按任何按键, 左右耳机会自动连接和自动进入配对模式。
- \*请将耳机放在正确的位置进行充电。
- \*不建议未经许可私下更换电池。
- \*电池[电池组或电池组合]不得暴露在照明, 烘烤或类似过热的环境中。

封面

75X95MM 105G双胶+1专1黑+风琴折