

TH300

OUICK START GUIDE

Product Overview

USB-C cable x1




Charging case x1 earphones x2 (L & R)





Eartips x 3 Pairs (The M size is installed on the earphones)

Charging Before using the "Monster TH300", please connect the USB-C cable to a power adapter to begin charging, Fully charge the earphones and the charging case before the first

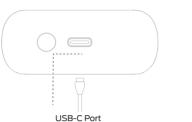

When open the charging case, the earphones will power on automatically. If you want to turn off the earphones, please put the earphones into the charging case and close the cover, the earphones will power off and charge at the same time.

When open the charging case, the earphones will power on

 
automatically.

For new device connection, turn on the Bluetooth in your device and choose "Monster TH300" from the Bluetooth list to connect. You will hear system prompts after the earphones are connected to the device.

being turned on.

Wearing

experience.



Power On/Off

If the earphones have been connected before, they will

connect to the last connected device automatically after

Put the "Monster TH300" onto your ears and rotate to fit

comfortably to get the best wearing and sound quality



MFB Operation





In the power on state, touch the MFB of earphones 5 times

(two earphones at the same time), and the earphones will

automatically shut down and restore the factory settings.



Swipe left and right to After the screen is turned off without operation, double-click enter the main interface of the function the screen to light up: · Short press the MFB button of the charging compartment for 1

time to turn on the screensaver or turn off the screen. Open and close the charging cover, you can turn on the screen or turn off the screen

Smart Charging Case Operation

M MONSTER

智能仓操作

可以点亮屏保或熄屏。

点亮屏或熄屏

・开合充电盒盖,也可以

M MONSTER

Smart Charging Case function display










English ▶

08:00:00

Additional Operation

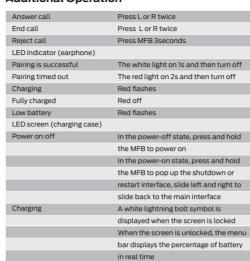

Play/Pause: Tap the play icon Bluetooth to take pictures Next song: Tap the right icon Previous song: Tap the left icon Volume adjustment Volume up: Tap the right icon Volume down: Tap the left icon Tap the icon to select a ambient Answer an incoming call sound mode, From left to right: Normal/Noise Reduction/ Transparent Tap the left/right icon to select EQ sounds Tap the left/right icon to select screen brightness Tap the left/right icon Language switch Reject an incoming call to select a language Find my earphone Tap the left/right ear icon and select Start accordingly (If you

cancel, you will return), and the L/R

earphone will sound accordingly.

to disappear and go back

When connected to a mobile phone

the network time is automatically

分别轻点对应文字图标选择环境音模式

Tap the stop button

calibrated

be determined by turning the equipment off and on, the user is connected outside the charging encouraged to try to correct the interference by one or more of the case, tap the storage screen following measures: - Regrient or relocate the receiving antenna. Hang up icon - Increase the senaration between the equipment and the receiver When the earphones remains - Connect the equipment to an outlet on a circuit different from that to connected outside the charging which the receiver is connected. - Consult the dealer or an experienced radio / TV technician for help. case, tap the storage screen Changes or modifications not expressly approved by the party responsible Hang up icon or compliance could void the user's authority to operate the equipment.

When your phone turns on the

camera, tap the on-screen

camera icon to start the remote

photo taking feature on your

When the earphones remains

connected outside the charging

case, tap the storage screen

When the earphones remains

phone

Answer icon

*Private replacement of batteries without permission is not recommended.

environments.

power source:

interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement. *Batteries [battery packs or battery combinations] should not be exposed to lighting, baking or similar overheating

The device can be used in portable exposure condition without restriction. FCC ID: 2AVD2-MH22203 *The input voltage and current standard ≤ 5V/1A when

the following two conditions:

FCC STATEMENT

for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a

generates uses and can radiate radio frequency energy and, if not installed

interference to radio communications. However, there is no guarantee that

does cause harmful interference to radio or television reception which can

This device complies with Part 15 of the FCC Rules. Operation is subject to

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received. Including

interference will not occur in a particular installation. If this equipment

hese limits are designed to provide reasonable protection against

harmful interference in a residential installation. This equipment

and used in accordance with the instructions, may cause harmful

Class B digital device, pursuant to part 15 of the FCC Rules.

IC CAUTION Changes or modifications not expressly approved by the party responsible

Radio Standards Specification RSS-Gen, issue 5 This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two This device may not cause interference. This device must accept any interference, including interference that may

cause undesired operation of the device.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Cet appareil contient des émetteurs / récenteurs exemptés de licence conformes aux PSS (PSS) d'Innovation. Sciences et Dévelonnement économique Canada. Le fonctionnement est soumis aux deux condition

Cet appareil ne doit pas causer d'interférences. Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

RF exposure statement:

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction. IC: 28087-MH22203

Model No.: MH 22203



TH300



产品概述

耳机x2 (左&右耳)


USB-C充电线 x1



充电盒x1


耳套 x3 对 (M号已安装在耳机上)

 
请在使用此设备前先给耳机和充电仓充满电,此设备可以通过USB-C 接口进行充电。



快速指南/保修卡



 


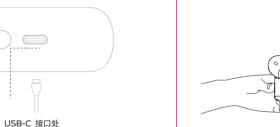

打开充电盒盖,耳机将自动开机。如果想要关闭耳机,请将耳机放入 充电盒并关盖,耳机会关机同时进行充电。

打开充电盒,耳机会自动开机。对于新设备连接,请打开蓝牙设备并 搜索 " Monster TH300 "进行连接,配对成功后,您会听到系统 如果耳机之前已配对过,开机就会尝试连接上一次的设备。



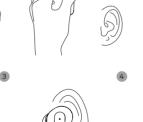



按键操作

出厂设置。



开机状态下连续5击耳机触控键(双耳同时),耳机将自动关机,恢复







智能仓功能展示











更多操作

×	1XIII DIESTO
1 指示灯(耳机)	
对成功	白灯长亮18熄灭
对超时	红灯长亮2S熄灭
电中	红灯慢闪
满	红灯熄灭
量低	红灯慢闪
) 屏(充电盒)	
. 关机	在关机状态,长按MFB键开机
	在开机状态,长按MFB键弹出关机或重启
	界面,左右滑动则退回到主界面
€	锁屏时显示白色闪电符号
	屏幕解锁时菜单栏实时显示百分比电量
电提醒	屏幕解锁时菜单栏实时显示充电仓
	百分比电量,同时图标变红色慢闪
乐播放	播放/暂停:轻点播放图标
	下一曲: 轻点右侧切歌图标
	上一曲: 轻点左侧切歌图标
量调节	加音量: 轻点右侧小喇叭图标
	减音量: 轻点左侧小喇叭图标

双击左或右耳

双击左或右耳

按MFB键3秒

When the screen is unlocked, the menu

bar displays the charging case in real

time, Percentage battery and the icon

turns red and flashes slowly

从左往右依次是:正常、降噪、通透 轻点左/右三角标单向选择EQ音效 屏幕亮度 轻占左/右三角标单向选择屈募高度 语言切换 轻点左/右三角标单向选择语言 轻点左/右耳图标,对应选择"开始" (取消则返回),L/R耳机对应发出 提示音,点击停止键声音消失并返回 与手机连接时,自动校准网络时间 时间设置 蓝牙拍照 手机打开相机时,轻点屏幕相机小图标 启动手机远程拍照功能 接听来电 耳机在仓外保持连接时,轻点仓屏的 接听图标 挂断电话 耳机在仓外保持连接时,轻点仓屏的 挂断图标 拒接来电 耳机在仓外保持连接时,轻点仓屏的 挂断图标

*不建议未经许可私下更换电池。

*电池[电池组或电池组合]不得暴露在照明,烘烤或类似过热的环境中。 *耳机充电仓在外接电源充电时,输入电压电流标准≤5V/1A;

charging the headset charging compartment from an external

