

Model: MS22119





SPARKLE

HIGH POWER SPEAKER

Quick Start Guide

Please read this Quick Start Guide carefully and keep it for future use

Content

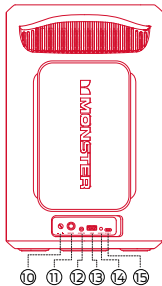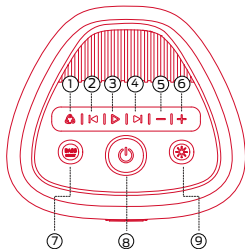

1. Bluetooth pairing/disconnecting
2. Previous track
3. Multi Function Button (MFB) – music play/pause...
4. Next track
5. “-” Volume down
6. “+” Volume up
7. Bass boost on/off

8. Power On & Off/Audio Input Mode Selection /LED Indicator
9. Light effect on/off
- 10.Reverb adjustment
11. MIC IN (6.35mm)
12. AUX IN
13. USB IN (Audio)
14. Reset Button
15. USB-C Charging Input

Power/Charging

For better enjoyment, fully charge the speaker before use.

A USB-C charging cable (charge only) is included for standard USB compatible device.

Please use a 5V/2A or above power adapter (not included).

Caution: - Use compatible standard 5 volt power adapter ONLY.

- Other incompatible charges may cause damages.
- Do not use if the connector or device is wet or damaged.

Power On/Off

To turn on the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power on tone.

To turn off the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power off tone.

Caution: If no Bluetooth device is connected, the speaker will turn off in 15 minutes.

Pairing

First time "power on", the speaker will enter pairing mode automatically.

Pairing with a new device, press the "①" button to disconnect the current connected device.

When speaker is not connected to any Bluetooth device, pairing mode will start automatically.

In pairing mode, turn on Bluetooth function on your phone and search for new Monster device for pairing. When the speaker is connected, a connected tone will be heard, the LED indicator will stop flashing and remain on.

Volume Control

Short press the Volume Button “+” or “-” to turn volume up or down.

Music Mode

Play/Pause: Press the MFB to play or pause.

Next song: press the “▶|” button.

Previous song: press the “◀|” button.

AUX IN Mode

AUX IN is the priority playback source when plugged in with a device. Press “Ⓢ” button to switch to other playback source.

USB IN (Audio) Mode

USB IN (Audio) is the priority playback source when a device is plugged in. Press “Ⓢ” button to switch to other playback source.

Playback Priority

Bluetooth Mode is the default, audio playback sources can be selected by pressing the “Ⓢ” button in the following sequence:



Microphone (dynamic -52dB ± 3dB) Mode

Insert a microphone (not included) with 6.35mm jack into the MIC IN for this function.

Power Saving Setting

- In Bluetooth mode, when no device is connected, the speaker will be switched off automatically in 15 minutes.
- AUX IN mode/ USB IN (AUDIO) mode, no music playback for 15 minutes, the speaker will be switched off automatically.
- The speaker will not automatically power off after 15 minutes if a microphone is connected.

Light mode

When the speaker is turned on, press the "⑨" key to switch between various lighting modes. If you want to turn off the light mode, press and hold the "⑨" key for 2 seconds to turn off the light.

Bass Boost Mode

Press the "⑦" button to activate/deactivate bass boost.

Connect two speakers, stereo mode (same model only)

1. Turn on both speakers and do not connect to any Bluetooth device (such as a mobile phone).
2. Quick press "①" button twice on one of the speakers, voice prompt "discovering" will be heard, the indicator of the main speaker flashes, the indicator of the auxiliary speaker stays on and a prompt tone will be heard when successfully connected.
- 3.Enable Bluetooth function on the mobile phone, search for "Monster Sparkle" for connection. After the connection is successful, you will hear a prompt tone, the indicator on the main speaker will stop flashing and the indicator of the auxiliary speaker stays on.

Reset

If the speaker needs to be reset, press the “⑭” button.

Reset Device

If the speaker needs to be reset, press and hold the “①” button for 5 seconds.

LED indicator/Prompt tone Guide

Status	Describe	Prompt tone
Power On	White LED stays On	“Power on tone”
Power Off	White LED lights off	“Power off tone”
Pairing	White LED flashes quickly	-
Bluetooth Connected	White LED stays On	“Connected tone”
USB IN Mode	White LED stays On	-
AUX IN Mode	White LED stays On	-
Battery low	-	“Low battery tone”
Charging	Red LED lights when charging, turns off after fully charged	-

Caution

- Self replacement of battery is prohibited.
- Do not expose battery (battery pack or battery pack combination) in direct sunlight, fire or high temperatures.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

For service, warranty, or product information,
Please contact: support@mct-audio.com with your order ID.

FCC ID: 2AVD2-MS22119