


Product Overview

- Speaker
- AUX IN Cable
- USB-C Charging Cable
- Quick Start Guide & Warning card

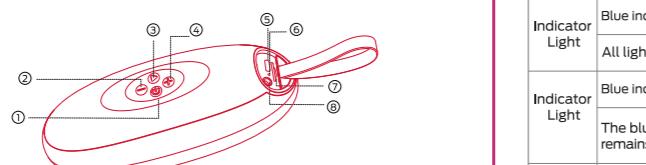

1.Power On/Off

Long press: Power on/off

2.Previous song/Volume down

Long press: Previous song

Short press: Volume down

3.Play/Pause

Short press: Play/pause

4.Next song/Volume up

Long press: Next song

Short press: Volume up

5.USB-C Charging

6.Charging Indicator Light

7.Micro SD card Input

Connect a Micro SD card mode

8.AUX Input

External audio devices can be

connected using audio cables

LED indicator/Voice prompt Guide

	Describe	Voice/Tone	Status
Indicator Light	Blue indicator light is flashing	Discovering	Power on
	All lights off	Goodbye	Power off
Indicator Light	Blue indicator light is flashing	-	Not connected
	The blue indicator light remains steadily illuminated.	Your device is connected	Connected
Low battery	-	Battery low	-
	Charging in progress, the red indicator light is flashing	-	-
Speaker charging	When fully charged, the red indicator light remains steadily illuminated	-	-

Power/Charging

For better enjoyment, fully charge the speaker before use. A USB-C charging cable (charge only) is included for standard USB compatible device. Please use a 5V/1A or above power adapter (not included). Caution: - Other incompatible charges may cause damages. - Do not use if the connector or device is wet or damaged.

Power On/Off

To turn on the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power on tone. To turn off the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power off tone.

Caution: If no Bluetooth device is connected, the speaker will turn off in 5 minutes.

Bluetooth Connection

• When first used and turned on, the speaker will automatically enter a waiting mode for connection. • If the Bluetooth device is already connected, long press "▶" button to disconnect the current connection so that you can connect to another device.

• The speaker will automatically enter pairing mode if it is not connected to a Bluetooth device. When connecting, enable the Bluetooth function of the mobile phone, search for "Monster S260" and connect. After the connection is successful, the blue indicator light flashing on the main speaker, and the blue indicator light long on the secondary.

Call Mode

Answer a call: Short press the "▶" button. End the call: Short press the "▶" button. Reject/return a call: Double click the "▶" button.

Volume Control

Short press the "+" button to turn up the volume. Short press the "-" button to turn down the volume

Micro SD Card Playback

When speaker is on and micro SD card (not included) is inserted, micro SD card is the priority playback source. If you want to use Bluetooth function, press the "Ø" button to switch the source.

Music Control

Short press "▶" music can be played or paused. Long press "▶" to go to the previous song.

Long press "+" to go to the next song.

AUX IN Playback

When speaker is on and audio source is inserted via AUX IN, AUX IN is the priority playback source. If you want to use Bluetooth function, press the "Ø" button to switch the source.

Power Saving Settings

In Bluetooth mode, when no device is connected, the speaker will be switched off automatically in 5 minutes.

Connect Two Speakers, Stereo Mode (Same Model Only)

1.Turn on two Monster S260 speakers and do not connect to a Bluetooth device (such as a mobile phone).

2.Double click the "Ø" button on one of the speakers twice, and

you will hear a voice prompt. The two speakers will automatically pair. After the connection is successful, the blue indicator light

flashing on the main speaker, and the blue indicator light long on

the secondary.

Caution

It is not recommended to replace the battery privately.

The battery (battery pack or battery pack combination) must not

be exposed to sunshine, fire or similar overheated environments.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician.
 Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:
 (1) This device may not cause harmful interference, and
 (2) This device must accept any interference received, including interference that may cause undesired operation.
 This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.
 FCC ID: 2AV2-MS29