

80g双胶186C+K 风琴折
双色印刷 75x95mm

Model: M562130

MONSTER™

CHARM MICRO


PORTABLE BLUETOOTH SPEAKER

Quick Start Guide

Please read this Quick Start Guide carefully and keep it for future use

Product Overview

- Speaker
- USB-C Charging Cable
- Quick Start Guide & Warning card

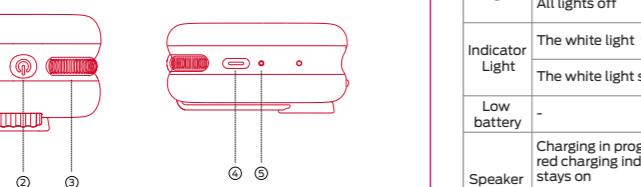

LED indicator/Voice prompt Guide

	Describe	Voice/Tone	Status
Indicator Light	The white light flashing	Power on tone	Power on
	All lights off	Goodbye	Power off
Indicator Light	The white light flashing	Discovering	Not connected
	The white light stays on	Your device is connected	Connected
Low battery	-	Battery low	-
	Charging in progress, the red charging indicator light stays on	-	-
Speaker charging	After fully charged, the red charging indicator light off	-	-

Power On/Off

To turn on the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power on tone.
To turn off the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power off tone.
Caution: If no Bluetooth device is connected, the speaker will turn off in 15 minutes.

Bluetooth Connection

- When first used and turned on, the speaker will automatically enter a waiting mode for connection.
- If the Bluetooth device is already connected, press " \$" button to disconnect the current connection so that you can connect to another device.
- The speaker will automatically enter pairing mode if it is not connected to a Bluetooth device.

When connecting, enable the Bluetooth function of the mobile phone, search for "Monster Charm Micro" and connect. After the connection is successful, you will hear a voice prompt, the white light of stays on.

Power/Charging

For better enjoyment, fully charge the speaker before use. A USB-C charging cable (charge only) is included for standard USB compatible device.
Please use a 5V/1A or above power adapter (not included).
Caution: - Other incompatible charges may cause damages.
- Do not use if the connector or device is wet or damaged.

Music Control

Single click "O" music can be played or paused.

Call Mode

Answer a call: Single click the "O" button.
Reject a call: Double click the "O" button.
End the call: Single click the "O" button.

Volume Control

Dial up to turn up the volume
Dial down to turn down the volume

Voice Assistant

If the Bluetooth is connected, double click the "O" button to turn on/off the voice assistant.

Micro SD Card mode key operation (only domestic version with Micro SD Card)

In Micro SD Card mode, hold down the "O" and " \$" button at the same time to switch modes.
Single click " \$" music can be played or paused.
Triple click " \$" to go to the previous song.
Double click " \$" to go to the next song.

BLUETOOTH BROADCAST MODE

Set one "Charm Micro" as the main speaker, and you can connect it to more than 100 auxiliary "Charm Micro" speakers to control their functions.

Reset Device

If the speaker needs to be reset, press and hold the "O" button for 8 seconds.

Caution

- It is not recommended to replace the battery privately.
- The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device contains a transceiver and transmitter(s)/receiver(s). It complies with Innovation, Science and Economic Development Canada's licence-exempt RSS. Operation is subject to the following two conditions:
1. First, connect one of the "Charm Micro" speakers to your Bluetooth device (such as a mobile phone) as the main speaker and play music.
2. Press the " \$" button twice on the main speaker and other "Charm Micro" speakers to enter Bluetooth broadcast connection mode and connect automatically.

RF exposure statement:
The device has been evaluated to meet general RF exposure requirements.
The device can be used in portable exposure condition without restriction.

- French:
Cet appareil contient des émetteurs / récepteurs exempts de licence conformes aux RSS (RS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:
Cet appareil doit ne pas causer d'interférences.
Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.
Déclaration d'exposition RF:
L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé dans des conditions d'exposition portante sans restriction.
IC: 28087-M62130

IC Caution

Radio Standards Specification RSS-GEN-5
- English:
This device contains a transceiver and transmitter(s)/receiver(s). It complies with Innovation, Science and Economic Development Canada's licence-exempt RSS. Operation is subject to the following two conditions:
1. First, connect one of the "Charm Micro" speakers to your Bluetooth device (such as a mobile phone) as the main speaker and play music.
2. Press the " \$" button twice on the main speaker and other "Charm Micro" speakers to enter Bluetooth broadcast connection mode and connect automatically.

- French:
Cet appareil contient des émetteurs / récepteurs exempts de licence conformes aux RSS (RS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:
Cet appareil doit ne pas causer d'interférences.
Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Model: M562130

MONSTER™

CHARM MICRO


便携蓝牙音响

快速指南

请仔细阅读本快速指南并妥善保存以备将来使用
本产品由中国平安保险公司承保

产品概述

- 音响
- USB-C充电线
- 快速指南&合格证

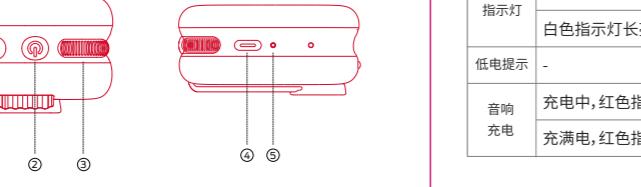

LED 指示灯 / 语音提示指南

	描述	语音提示	状态
指示灯	白色指示灯闪烁	开机提示音	开机
	所有灯熄灭	关机提示音	关机
指示灯	白色指示灯闪烁	等待配对提示音	未连接
	白色指示灯长亮	连接成功提示音	已连接
低电提示	-	低电提示音	-
	充电中, 红色指示灯长亮	-	-
音响	充满电, 红色指示灯熄灭	-	-

电源/充电

为了更好的使用体验,在使用音响前,您需要先为其充满电。包装中包含了一条USB-C充电线(仅充电,无数据传输功能),使用5V/1A或以上适配器(不包含)进行充电。
注意:- 其它不兼容的充电线可能会造成损坏。
- 如果连接线或设备潮湿、损坏,请勿充电。

开机/关机

在关机模式下,按住"O"键2秒开启音响,可听到开机提示音。关闭音响,请再次按住"O"键2秒,可听到关机提示音。
注意:开机后如没有连接到蓝牙设备,音响大约在15分钟后关闭。

蓝牙配对

首次使用并开机时,音响将自动进入配对模式。
•如已连上蓝牙设备,单击" \$"键,即可断开当前连接,以便与其它设备进行配对。
•如没有连上蓝牙设备,音响也会自动进入配对模式。
连接时,启用手机的蓝牙功能,搜索"Monster Charm Micro"进行连接,连接成功后你会听到提示音,白色指示灯长亮。

音乐控制

单击"O"键,可播放或暂停音乐。

通话控制

接听来电:单击"O"键。
拒接来电:双击"O"键。
结束通话:单击"O"键。

音量控制

向上拨动滚轮调高音量。
向下拨动滚轮调低音量。

语音助手

已连接蓝牙状态,双击"O"键开启/关闭语音助手。

TF 卡模式按键操作(仅国内版带 TF 卡)

在TF卡模式下,同时按住"O"和" \$"键,即可切换模式。
单击" \$"键,可播放或暂停音乐。
三击" \$"键,可播放上一首歌。
双击" \$"键,可播放放下一首歌。

蓝牙广播模式

设置一个"Charm Micro"为主音响,可连接100+ "Charm Micro" 副音响控制其功能。
1.首先,将其中一个"Charm Micro"音响连接到您的蓝牙设备(例如手机)作为主音响并播放音乐。
2.双击主音响和其它"Charm Micro"音响上的" \$"键,进入蓝牙广播连接模式并自动连接。
3.连接成功后,主音响上的绿色LED指示灯继续闪烁,副音响上的绿色LED指示灯长亮。

省电设置

- 音响开机后,如没有连接到蓝牙设备,大约在15分钟后自动关机。
- 在TF卡模式(仅国内),15分钟未播放音乐将自动关机。

恢复出厂设置

在开机状态下,长按8秒"O"键,即可恢复出厂设置。

注意

- 不建议未经许可私下更换电池。
- 电池(电池组或电池组合)不得暴露在诸如日照、火烤或类似过热环境中。