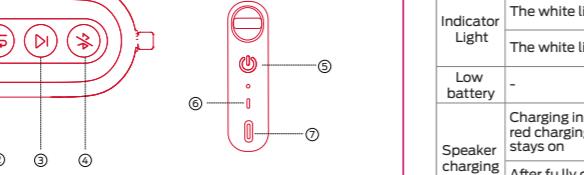
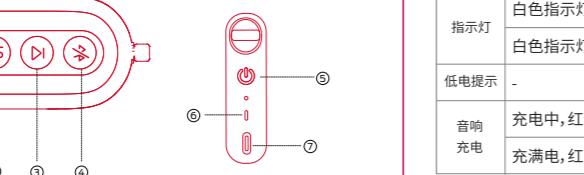


80g双胶186C+K 风琴折  
双色印刷 75x95mm

<p>Model: MS62131</p> <p><b>MONSTER™</b></p> <p><b>CHARM MINI</b> PORTABLE BLUETOOTH SPEAKER</p> <p><b>Quick Start Guide</b> Please read this Quick Start Guide carefully and keep it for future use</p>	<p><b>Product Overview</b></p> <ul style="list-style-type: none"><li>Speaker</li><li>Braided rope</li><li>USB-C Charging Cable</li><li>Quick Start Guide &amp; Warning card</li></ul>  <p><b>LED Indicator/Voice prompt Guide</b></p> <table border="1"><thead><tr><th></th><th>Describe</th><th>Voice/Tone</th><th>Status</th></tr></thead><tbody><tr><td>Indicator Light</td><td>The white light flashing</td><td>Power on tone</td><td>Power on</td></tr><tr><td></td><td>All lights off</td><td>Goodbye</td><td>Power off</td></tr><tr><td>Indicator Light</td><td>The white light flashing</td><td>Discovering</td><td>Not connected</td></tr><tr><td></td><td>The white light stays on</td><td>Your device is connected</td><td>Connected</td></tr><tr><td>Low battery</td><td>-</td><td>Battery low</td><td>-</td></tr><tr><td>Speaker charging</td><td>Charging in progress, the red charging indicator light stays on</td><td>-</td><td>-</td></tr><tr><td></td><td>After fully charged, the red charging indicator light off</td><td>-</td><td>-</td></tr></tbody></table> <p><b>Power/Charging</b> For better usage, fully charge the speaker before use. A USB-C charging cable (charge only) is included for standard USB compatible device. Please use a 5V/1A or above power adapter (not included). Caution: - Other incompatible charges may cause damages. - Do not use if the connector or device is wet or damaged.</p> <p><b>1.Previous song/Volume down</b> Long press: Previous song Single click: Volume down</p> <p><b>2.Play/Pause</b> Long press: Switching EQ Single click: Play/pause</p> <p><b>3.Next song/Volume up</b> Long press: Next song Single click: Volume up</p> <p><b>4.Bluetooth mode</b> Short press: Disconnect/connect Bluetooth Double click: Enter/exit Stereo Mode</p> <p><b>5.Power On/Off</b> Long press: Power on/off</p> <p><b>6.Indicator Light</b></p> <p><b>7.USB-C Charging</b></p>		Describe	Voice/Tone	Status	Indicator Light	The white light flashing	Power on tone	Power on		All lights off	Goodbye	Power off	Indicator Light	The white light flashing	Discovering	Not connected		The white light stays on	Your device is connected	Connected	Low battery	-	Battery low	-	Speaker charging	Charging in progress, the red charging indicator light stays on	-	-		After fully charged, the red charging indicator light off	-	-	<p><b>Power On/Off</b> To turn on the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power on tone. To turn off the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power off tone. Caution: If no Bluetooth device is connected, the speaker will turn off in 15 minutes.</p> <p><b>Bluetooth Connection</b> - When first used and turned on, the speaker will automatically enter a waiting mode for connection. - If the Bluetooth device is already connected, press "≡" button to disconnect the current connection so that you can connect to another device. - The speaker will automatically enter pairing mode if it is not connected to a Bluetooth device. When connecting, enable the Bluetooth function of the mobile phone, search for "Monster Charm Mini" and connect. After the connection is successful, you will hear a voice prompt, the white light of stays on.</p> <p><b>Volume Control</b> Single click the "≡" button to turn up the volume. Single click the "≡" button to turn down the volume.</p> <p><b>Voice Assistant</b> If the Bluetooth is connected, double click the "≡" button to turn on/off the voice assistant.</p> <p><b>Power/Charging</b> For better usage, fully charge the speaker before use. A USB-C charging cable (charge only) is included for standard USB compatible device. Please use a 5V/1A or above power adapter (not included). Caution: - Other incompatible charges may cause damages. - Do not use if the connector or device is wet or damaged.</p>	<p><b>Power On/Off</b> Single click "≡" music can be played or paused. Long press "≡" to go to the previous song. Long press "≡" to go to the next song.</p> <p><b>Call Mode</b> Answer a call: Single click the "≡" button. Reject a call: Double click the "≡" button. End the call: Single click the "≡" button.</p> <p><b>Bluetooth Connection</b> 1.First, connect one of the "Charm Mini" speakers to your Bluetooth device (such as a mobile phone) as the main speaker and play music. 2.Press the "≡" button twice on the main speaker and other "Charm Mini" speakers to enter Bluetooth broadcast connection mode and connect automatically. 3.After successful connection, the green LED indicator on the main speaker will continue to flash, and the green LED indicator on the auxiliary speaker will change from flashing to long light.</p> <p><b>Volume Control</b> Single click the "≡" button to turn up the volume. Single click the "≡" button to turn down the volume.</p> <p><b>Voice Assistant</b> If the Bluetooth is connected, double click the "≡" button to turn on/off the voice assistant.</p> <p><b>Power/Charging</b> For better usage, fully charge the speaker before use. A USB-C charging cable (charge only) is included for standard USB compatible device. Please use a 5V/1A or above power adapter (not included). Caution: - Other incompatible charges may cause damages. - Do not use if the connector or device is wet or damaged.</p>	<p><b>Music Control</b> Set one "Charm Mini" as the main speaker, and you can connect it to more than 100 auxiliary "Charm Mini" speakers to control their functions.</p> <p><b>Bluetooth Broadcast Mode</b> 1.First, connect one of the "Charm Mini" speakers to your Bluetooth device (such as a mobile phone) as the main speaker and play music. 2.Press the "≡" button twice on the main speaker and other "Charm Mini" speakers to enter Bluetooth broadcast connection mode and connect automatically. 3.After successful connection, the green LED indicator on the main speaker will continue to flash, and the green LED indicator on the auxiliary speaker will change from flashing to long light.</p> <p><b>Reset Device</b> If the speaker needs to be reset, press and hold the "O" button for 8 seconds.</p> <p><b>Caution</b> - It is not recommended to replace the battery privately. - The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.</p> <p><b>Reset Device</b> If the speaker needs to be reset, press and hold the "O" button for 8 seconds.</p> <p><b>Caution</b> - It is not recommended to replace the battery privately. - The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.</p> <p><b>Reset Device</b> If the speaker needs to be reset, press and hold the "O" button for 8 seconds.</p> <p><b>Caution</b> - It is not recommended to replace the battery privately. - The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.</p>	<p><b>FCC Statement</b> Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. This equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and the receiver. - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio / TV technician for help.</p> <p><b>Exposure statement:</b> The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p><b>French:</b> Cet appareil est évalué pour émettre une puissance de moins de 100 mW et est conforme aux RSS d'Innovation, Sciences et Développement. Cet appareil peut émettre des interférences, mais il est recommandé d'utiliser ce produit dans des conditions d'antenne et de récepteur.</p> <p><b>Caution</b> - Ce produit ne doit pas causer d'interférences. - Ce produit doit accepter toutes les interférences, y compris celles susceptibles de provoquer fonctionnement indésirable de l'appareil.</p> <p><b>Déclaration d'exposition:</b> L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut émettre des interférences dans les conditions d'exposition portables sans restriction.</p> <p><b>IC Caution</b> Radio Standard Specification RSS-Gen, issue 5 - English: This device contains license-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions: This device may not cause interference. This device must accept any interference, including interference that may cause undesired operation of the device.</p> <p><b>IC Statement</b> Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. This equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and the receiver. - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio / TV technician for help.</p> <p><b>Exposure statement:</b> The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p><b>French:</b> Cet appareil est évalué pour émettre une puissance de moins de 100 mW et est conforme aux RSS d'Innovation, Sciences et Développement. Cet appareil peut émettre des interférences, mais il est recommandé d'utiliser ce produit dans des conditions d'antenne et de récepteur.</p> <p><b>Caution</b> - Ce produit ne doit pas causer d'interférences. - Ce produit doit accepter toutes les interférences, y compris celles susceptibles de provoquer fonctionnement indésirable de l'appareil.</p> <p><b>Déclaration d'exposition:</b> L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut émettre des interférences dans les conditions d'exposition portables sans restriction.</p> <p><b>IC ID: 2AVD2-MS62131</b></p>
	Describe	Voice/Tone	Status																																		
Indicator Light	The white light flashing	Power on tone	Power on																																		
	All lights off	Goodbye	Power off																																		
Indicator Light	The white light flashing	Discovering	Not connected																																		
	The white light stays on	Your device is connected	Connected																																		
Low battery	-	Battery low	-																																		
Speaker charging	Charging in progress, the red charging indicator light stays on	-	-																																		
	After fully charged, the red charging indicator light off	-	-																																		

<p>Model: MS62131</p> <p><b>MONSTER™</b></p> <p><b>CHARM MINI</b> 便携蓝牙音响</p> <p><b>快速指南</b> 请仔细阅读本快速指南并妥善保存以备将来使用 本产品由中国人寿保险公司承保</p>	<p><b>产品概述</b></p> <ul style="list-style-type: none"><li>音响</li><li>编织绳</li><li>USB-C充电线</li><li>快速指南&amp;合格证</li></ul>  <p><b>LED 指示灯 / 语音提示指南</b></p> <table border="1"><thead><tr><th></th><th>描述</th><th>语音提示</th><th>状态</th></tr></thead><tbody><tr><td>指示灯</td><td>白色指示灯闪烁</td><td>开机提示音</td><td>开机</td></tr><tr><td></td><td>所有灯熄灭</td><td>关机提示音</td><td>关机</td></tr><tr><td>指示灯</td><td>白色指示灯闪烁</td><td>等待配对提示音</td><td>未连接</td></tr><tr><td></td><td>白色指示灯长亮</td><td>连接成功提示音</td><td>已连接</td></tr><tr><td>低电提示</td><td>-</td><td>低电提示音</td><td>-</td></tr><tr><td>音响充电</td><td>充电中, 红色指示灯长亮</td><td>-</td><td>-</td></tr><tr><td></td><td>充满电, 红色指示灯熄灭</td><td>-</td><td>-</td></tr></tbody></table> <p><b>电源/充电</b> 为了更好的使用体验, 在使用音响前, 您需要先为其充满电。 包装中包含了一条USB-C充电线(仅充电, 无数据传输功能), 使用5V/1A或以上适配器(不包含)进行充电。 注意: 其它不兼容的充电线可能会造成损坏。 - 如果连接线或设备潮湿、损坏, 请勿充电。</p> <p><b>1.上一曲/音量减</b> 长按: 上一首歌 单击: 调低音量</p> <p><b>2.播放/暂停</b> 长按: 切换EQ 单击: 播放/暂停</p> <p><b>3.下一曲/音量加</b> 长按: 下一首歌 单击: 调高音量</p> <p><b>4.蓝牙模式</b> 单击: 断开/回连蓝牙 双击: 进入/退出TWS连接 长按5秒可清除所有已配对的设备记录</p> <p><b>5.电源开/关机</b> 长按: 开机/关机</p> <p><b>6.指示灯</b></p> <p><b>7.USB-C充电接口</b></p>		描述	语音提示	状态	指示灯	白色指示灯闪烁	开机提示音	开机		所有灯熄灭	关机提示音	关机	指示灯	白色指示灯闪烁	等待配对提示音	未连接		白色指示灯长亮	连接成功提示音	已连接	低电提示	-	低电提示音	-	音响充电	充电中, 红色指示灯长亮	-	-		充满电, 红色指示灯熄灭	-	-	<p><b>开机/关机</b> 在开机模式下, 按住"O"键2秒开启音响, 可听到开机提示音。 关闭音响, 请再次按住"O"键2秒, 可听到关机提示音。 注意: 开机后如没有连接到蓝牙设备, 音响大约在15分钟后关闭。</p> <p><b>蓝牙配对</b> - 首次使用并开机时, 音响将自动进入配对模式。 - 如已连上蓝牙设备, 单击"≡"键, 即可断开当前连接, 以便与其它设备进行配对。 - 如没有连上蓝牙设备, 音响也会自动进入配对模式。 连接时, 启用手机的蓝牙功能, 搜索"Monster Charm Mini"进行连接, 连接成功后你会听到提示音, 白色指示灯长亮。</p> <p><b>音乐控制</b> 单击"≡"键, 可播放或暂停音乐。 长按2秒"≡"键, 可播放上一首歌。 长按2秒"≡"键, 可播放下一首歌。</p> <p><b>通话控制</b> 接听来电: 单击"≡"键。 拒接来电: 双击"≡"键。 结束通话: 单击"≡"键。</p> <p><b>省电设置</b> 音响开机后, 如没有连接到蓝牙设备, 大约在15分钟后自动关机。</p> <p><b>恢复出厂设置</b> 在开机状态下, 长按8秒"O"键, 即可恢复出厂设置。</p>	<p><b>音量控制</b> 单击"≡"键调高音量。 单击"≡"键调低音量。</p> <p><b>注意</b> - 不建议未经许可私下更换电池。 - 电池(电池组或电池组合)不得暴露于诸如日照、火烤或类似过热环境中。</p>
	描述	语音提示	状态																																
指示灯	白色指示灯闪烁	开机提示音	开机																																
	所有灯熄灭	关机提示音	关机																																
指示灯	白色指示灯闪烁	等待配对提示音	未连接																																
	白色指示灯长亮	连接成功提示音	已连接																																
低电提示	-	低电提示音	-																																
音响充电	充电中, 红色指示灯长亮	-	-																																
	充满电, 红色指示灯熄灭	-	-																																