



LED indicator/Prompt tone Guide			
Status	Indicator light	Prompt tone	Status
Power on	RGB light mode rotation	Power on tone	Power on
Power off	All lights off	Goodbye	Power off
Not connected	RGB light mode rotation	-	Not connected
Connected	RGB light mode	Your device is connected	Connected
Low battery	RGB red light flashes	Battery low	-
Speaker charging	Charging in progress, the red charging indicator light stays on	-	-
	After fully charged, the red charging indicator light turns off	-	-

Power/Charging
For better enjoyment, fully charge the speaker before use. A USB-C charging cable (charge only) is included for standard USB compatible device.
If the Bluetooth device is already connected, press "O" button to disconnect the current connection so that you can connect to another device.
Caution: - Other incompatible charges may cause damages.
- Do not use if the connector or device is wet or damaged.

Power On/Off
To turn on the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power on tone.
Short press: Play/pause
Double click: Enter/exit Stereo Mode
2. Previous song/Volume down
Long press: Previous song
Short press: Volume down
3. Next song/Volume up
Long press: Next song
Short press: Volume up

LED indicator/Prompt tone Guide

Bluetooth Connection
When first used and turned on, the speaker will automatically enter a waiting mode for connection.
• If the Bluetooth device is already connected, press "O" button to disconnect the current connection so that you can connect to another device.
When connecting, enable the Bluetooth function of the mobile phone, search for "Monster S270" and connect. After the connection is successful, you will hear a voice prompt, the white light of the speaker will change to RGB mode.
If the speaker have been paired before, they will automatically pair. After the connection is successful, you will hear a prompt tone, the RGB light mode rotation the main speaker will flow in a cycle, and the indicator light of the secondary will be in RGB light mode.

Music Control
Short press "O" music can be played or paused.
Long press "O" to go to the previous song.
Long press "O" to go to the next song.
Caution: If no Bluetooth device is connected, the speaker will turn off in 10 minutes.

Call Mode
Answer a call: Short press the "O" button.
Reject a call: Long press the "O" button.
End the call: Short press the "O" button.

Volume Control

Short press the "O" button to turn up the volume.
Short press the "O" button to turn down the volume.

Power Saving Settings

• In Bluetooth mode, when no device is connected, the speaker will be switched off automatically in 10minutes.

Connect Two Speakers, Stereo Mode (Same Model Only)

1. Turn on two S270 speakers and do not connect to a Bluetooth device (such as a mobile phone).

2. Double click the "O" button on one of the speakers twice, and you will hear a prompt tone. The two speakers will automatically pair. After the connection is successful, you will hear a prompt tone, the RGB light mode rotation the main speaker will flow in a cycle, and the indicator light of the secondary will be in RGB light mode.

Reset Device

If the speaker needs to be reset, press and hold the "O" and "P" button for 2 seconds.

Caution

• It is not recommended to replace the battery privately.

• The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

Bluetooth Connection

• When first used and turned on, the speaker will automatically enter a waiting mode for connection.

• If the Bluetooth device is already connected, press "O" button to disconnect the current connection so that you can connect to another device.

Caution: - Other incompatible charges may cause damages.

- Do not use if the connector or device is wet or damaged.

Music Control

Short press "O" music can be played or paused.

Long press "O" to go to the previous song.

Long press "O" to go to the next song.

Caution: If no Bluetooth device is connected, the speaker will turn off in 10 minutes.

Call Mode

Answer a call: Short press the "O" button.

Reject a call: Long press the "O" button.

End the call: Short press the "O" button.

Volume Control

Short press the "O" button to turn up the volume.

Short press the "O" button to turn down the volume.

Power Saving Settings

• In Bluetooth mode, when no device is connected, the speaker will be switched off automatically in 10minutes.

Connect Two Speakers, Stereo Mode (Same Model Only)

1. Turn on two S270 speakers and do not connect to a Bluetooth device (such as a mobile phone).

2. Double click the "O" button on one of the speakers twice, and you will hear a prompt tone. The two speakers will automatically pair. After the connection is successful, you will hear a prompt tone, the RGB light mode rotation the main speaker will flow in a cycle, and the indicator light of the secondary will be in RGB light mode.

Reset Device

If the speaker needs to be reset, press and hold the "O" and "P" button for 2 seconds.

Caution

• It is not recommended to replace the battery privately.

• The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

Bluetooth Connection

• When first used and turned on, the speaker will automatically enter a waiting mode for connection.

• If the Bluetooth device is already connected, press "O" button to disconnect the current connection so that you can connect to another device.

Caution: - Other incompatible charges may cause damages.

- Do not use if the connector or device is wet or damaged.

Music Control

Short press "O" music can be played or paused.

Long press "O" to go to the previous song.

Long press "O" to go to the next song.

Caution: If no Bluetooth device is connected, the speaker will turn off in 10 minutes.

Call Mode

Answer a call: Short press the "O" button.

Reject a call: Long press the "O" button.

End the call: Short press the "O" button.

Volume Control

Short press the "O" button to turn up the volume.

Short press the "O" button to turn down the volume.

Power Saving Settings

• In Bluetooth mode, when no device is connected, the speaker will be switched off automatically in 10minutes.

Connect Two Speakers, Stereo Mode (Same Model Only)

1. Turn on two S270 speakers and do not connect to a Bluetooth device (such as a mobile phone).

2. Double click the "O" button on one of the speakers twice, and you will hear a prompt tone. The two speakers will automatically pair. After the connection is successful, you will hear a prompt tone, the RGB light mode rotation the main speaker will flow in a cycle, and the indicator light of the secondary will be in RGB light mode.

Reset Device

If the speaker needs to be reset, press and hold the "O" and "P" button for 2 seconds.

Caution

• It is not recommended to replace the battery privately.

• The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

Bluetooth Connection

• When first used and turned on, the speaker will automatically enter a waiting mode for connection.

• If the Bluetooth device is already connected, press "O" button to disconnect the current connection so that you can connect to another device.

Caution: - Other incompatible charges may cause damages.

- Do not use if the connector or device is wet or damaged.

Music Control

Short press "O" music can be played or paused.

Long press "O" to go to the previous song.

Long press "O" to go to the next song.

Caution: If no Bluetooth device is connected, the speaker will turn off in 10 minutes.

Call Mode

Answer a call: Short press the "O" button.

Reject a call: Long press the "O" button.

End the call: Short press the "O" button.

Volume Control

Short press the "O" button to turn up the volume.

Short press the "O" button to turn down the volume.

Power Saving Settings

• In Bluetooth mode, when no device is connected, the speaker will be switched off automatically in 10minutes.

Connect Two Speakers, Stereo Mode (Same Model Only)

1. Turn on two S270 speakers and do not connect to a Bluetooth device (such as a mobile phone).

2. Double click the "O" button on one of the speakers twice, and you will hear a prompt tone. The two speakers will automatically pair. After the connection is successful, you will hear a prompt tone, the RGB light mode rotation the main speaker will flow in a cycle, and the indicator light of the secondary will be in RGB light mode.

Reset Device

If the speaker needs to be reset, press and hold the "O" and "P" button for 2 seconds.

Caution

• It is not recommended to replace the battery privately.

• The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

Bluetooth Connection

• When first used and turned on, the speaker will automatically enter a waiting mode for connection.

• If the Bluetooth device is already connected, press "O" button to disconnect the current connection so that you can connect to another device.

Caution: - Other incompatible charges may cause damages.

- Do not use if the connector or device is wet or damaged.

Music Control

Short press "O" music can be played or paused.

Long press "O" to go to the previous song.

Long press "O" to go to the next song.

Caution: If no Bluetooth device is connected, the speaker will turn off in 10 minutes.

Call Mode

Answer a call: Short press the "O" button.

Reject a call: Long press the "O" button.

End the call: Short press the "O" button.

Volume Control

Short press the "O" button to turn up the volume.

Short press the "O" button to turn down the volume.

Power Saving Settings

• In Bluetooth mode, when no device is connected, the speaker will be switched off automatically in 10minutes.

Connect Two Speakers, Stereo Mode (Same Model Only)

1. Turn on two S270 speakers and do not connect to a Bluetooth device (such as a mobile phone).

2. Double click the "O" button on one of the speakers twice, and you will hear a prompt tone. The two speakers will automatically pair. After the connection is successful, you will hear a prompt tone, the RGB light mode rotation the main speaker will flow in a cycle, and the indicator light of the secondary will be in RGB light mode.

Reset Device

If the speaker needs to be reset, press and hold the "O" and "P" button for 2 seconds.

Caution

• It is not recommended to replace the battery privately.

• The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

Bluetooth Connection

• When first used and turned on, the speaker will automatically enter a waiting mode for connection.

• If the Bluetooth device is already connected, press "O" button to disconnect the current connection so that you can connect to another device.

Caution: - Other incompatible charges may cause damages.

- Do not use if the connector or device is wet or damaged