


# 32" & 43" Connect PVM Basic Setup Guide


## 1. Remove Cover Plate and Install PVM

Remove the cover plate on the back-side of the PVM and set aside. Install the PVM to desired VESA mount following instructions supplied with VESA mount.

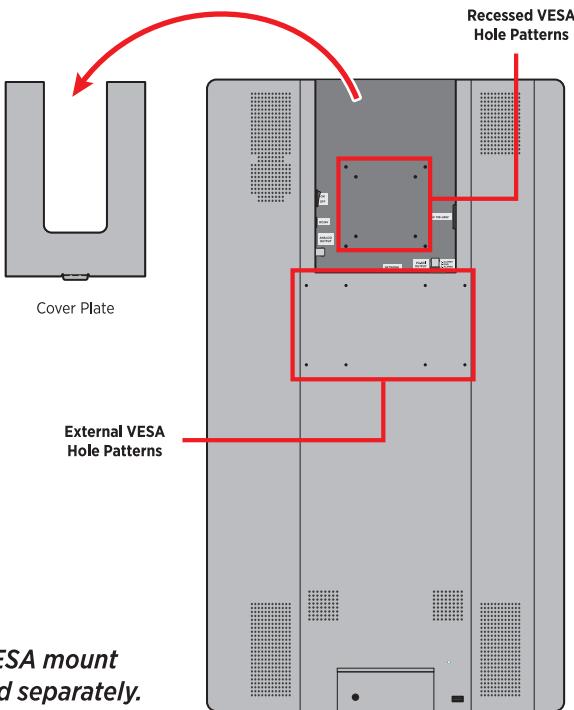

## 2. Connect Power

Connect either DC24V power to PVM (using the supplied 4-Pin DIN pigtail adapter cable) or AC110V (using the supplied power cord).

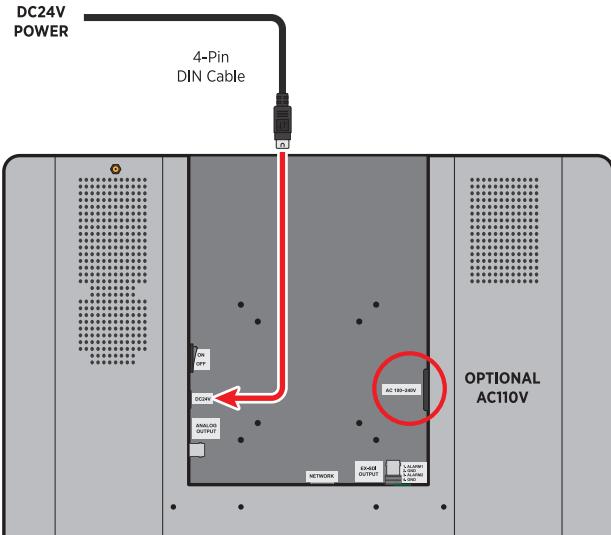


**ONLY USE DC24V OR AC110V INPUT!**

**DO NOT CONNECT DC24V & AC110V POWER SIMULTANEOUSLY.**  
Connecting both will cause damage to the device.

## 3. Connect Network


Connect an ethernet cable to the port marked 'NETWORK' if this PVM will use a "hard-wired" network connection. If this will PVM be connected using WiFi attach the included antenna.

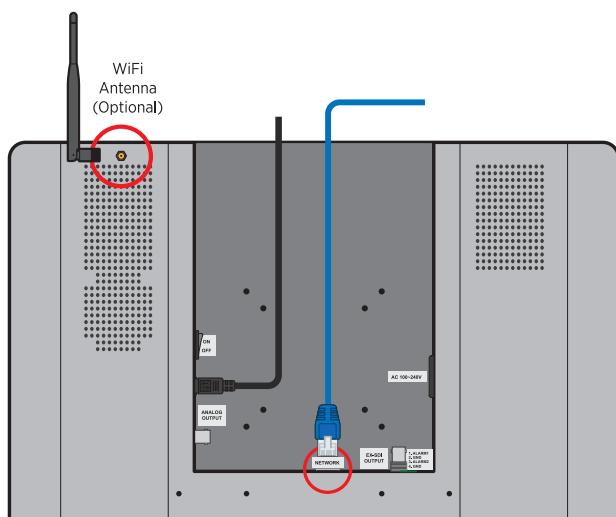

**This is NOT a PoE device!**  
Power must come from DC24V or AC110V source

## 4. Power 'ON' PVM and Begin On-Screen Setup


Set the power switch to the ON position. Wait for the boot-up to complete.

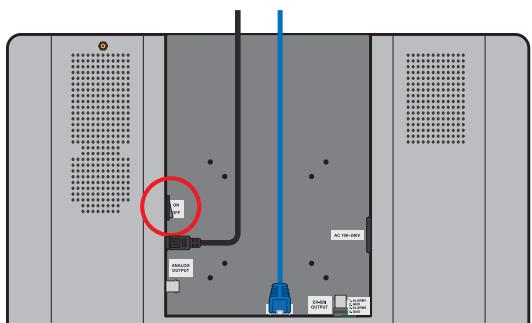

Start of Boot-up



..... Boot-up Complete

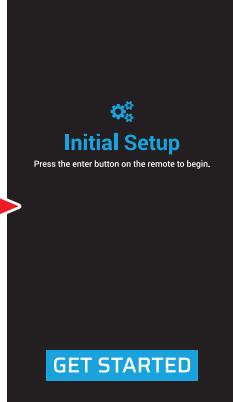

**\*A network connection is required for the PVM to receive media updates and complete the setup process.**


## 5. Connect to Internet

Follow the on-screen prompts using the included remote and connect to the desired network. After selecting a network (and entering a password if applicable), an Internet check test will be performed.

Remote is required for setup



Keep the remote in a safe place for later use

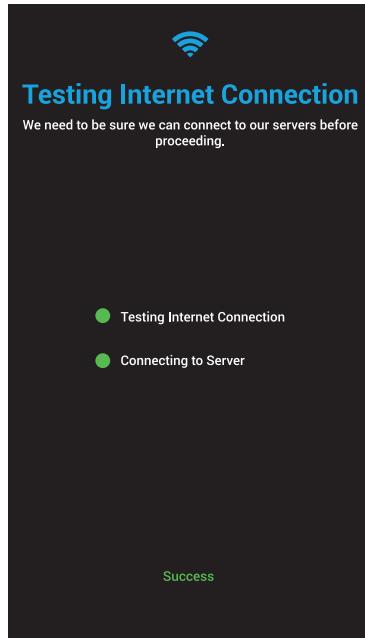

**\*If the device can not connect to the internet and/or the Clinton server—contact the company's IT admin.**

## 6. Scan QR Code and Complete Setup

Display the company-specific QR Code when prompted. Ensure the correct company code is being used, using the wrong company code will result in the PVM receiving incorrect updates.




*\*The QR Code is required to associate the PVM with a company so it can receive the correct content. If you do not have a QR Code, contact your supervisor or Clinton Connect account admin and to request a code. The QR Code can be found online at [app.clintonconnect.com](http://app.clintonconnect.com)*

## 32" & 43" EX-SDI PVMs: Optional Connections

If desired, connect alarm input connections using the included 4-Pin terminal block.

If connecting locally to a DVR, use either the Analog or EX-SDI Output.


The EX-SDI camera settings and zoom/focus adjustments can be made using the OSD Joystick located on the camera access door located near the bottom of the PVM.

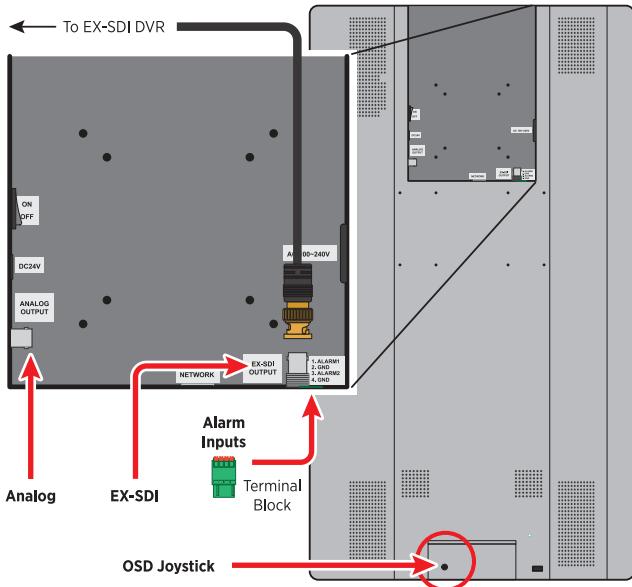

## 32" IP PVMS: Optional Connections

If desired, connect alarm input connections using the included 4-Pin terminal block.

The IP camera uses its own network connection (it can not be accessed using the network connection used in Step 4). To view the IP camera on the network connect a separate ethernet connection to the port marked IP Camera and follow the setup instructions from the included IP camera software.

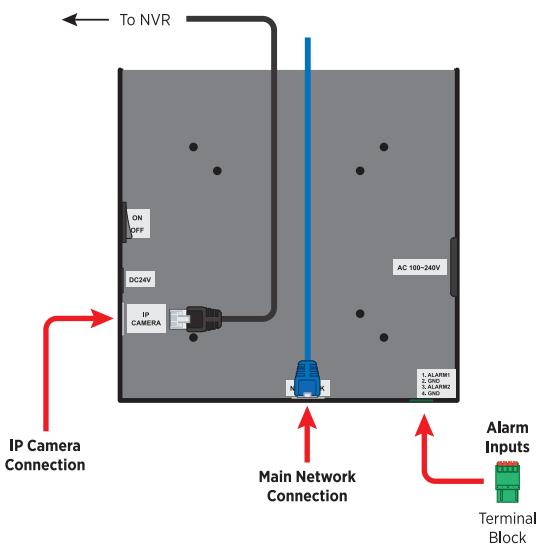

## Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

### FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of **20cm(7.875")** between the radiator & your body.

### FOR COUNTRY CODE SELECTION USAGE (WLAN DEVICES)

Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.