



STEP 7

# Connect your Gardyn to get growing

Download the app



Activate your membership



Meet your AI Gardening Assistant Kelby



Discover and shop for your favorite varieties



Control your device at your fingertips



Gardyn


## Download the Gardyn app

to connect your Gardyn to WiFi and pair it with your phone.



## A whole community awaits you in our app!

Connect with fellow Gardyners while participating in fun activities, getting helpful tips and tricks, sharing recipes, and so much more.

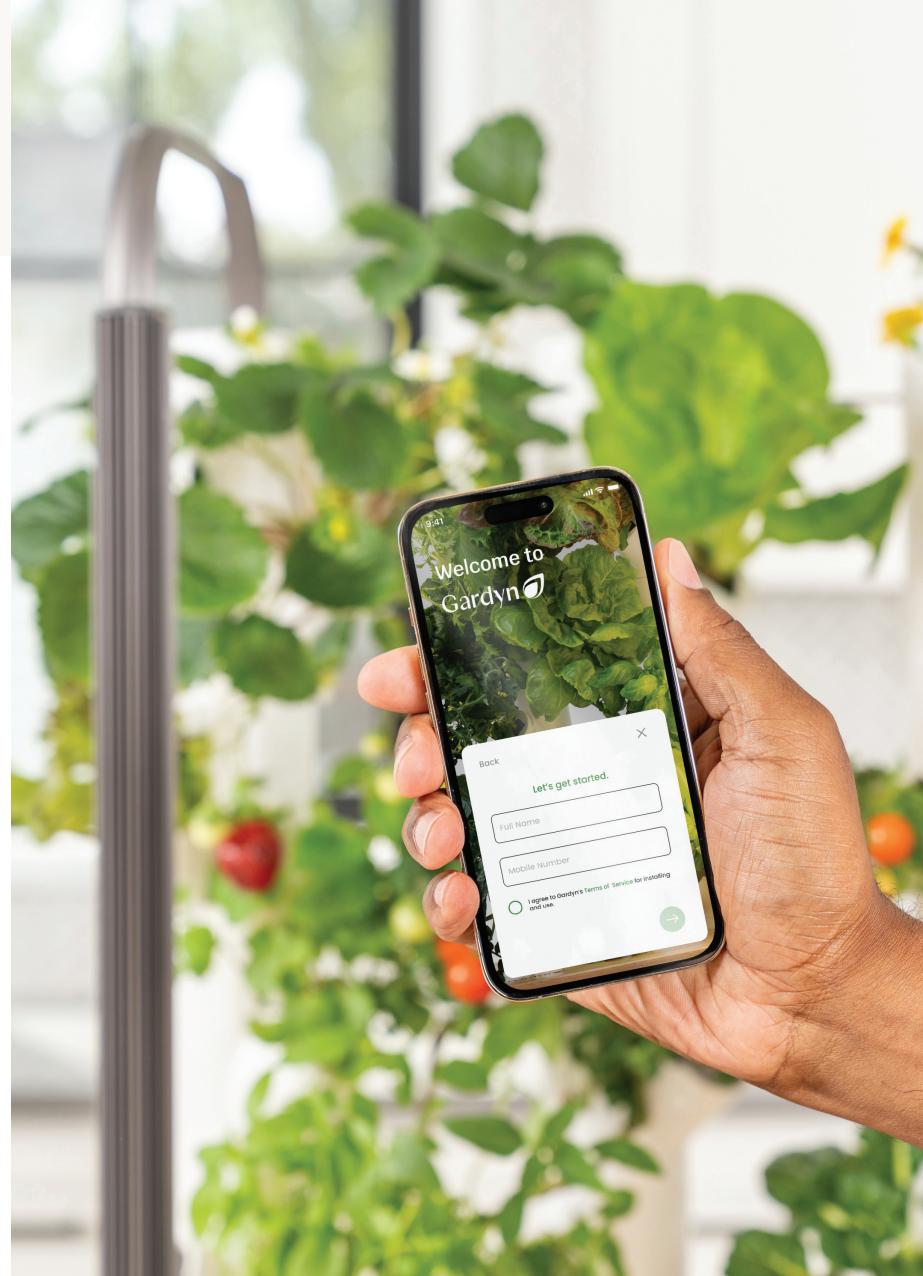



Scan to shop

# The Gardyn Essentials

Grow with confidence and ease using our unique accessories.

## Nursery

Enjoy continuous harvests by germinating new yCubes after you've started your Gardyn, plus grow Microgreens with ease.



## HydroBoost

Reduce the frequency and intensity of cleaning while boosting plant health with our plant-based water treatment solution.



Gardyn Vase



yCovers



Plant Belt



Gardyn Trellis



Gardyn Cap




Gardyn Dolly



# Your Gardyn's Care Cycle

[Learn More](#)

Get to know the life cycle of your device from seed to harvest and beyond. You'll get the hang of this simple routine in no time. Plus, Kelby and the app will guide members on all the details!

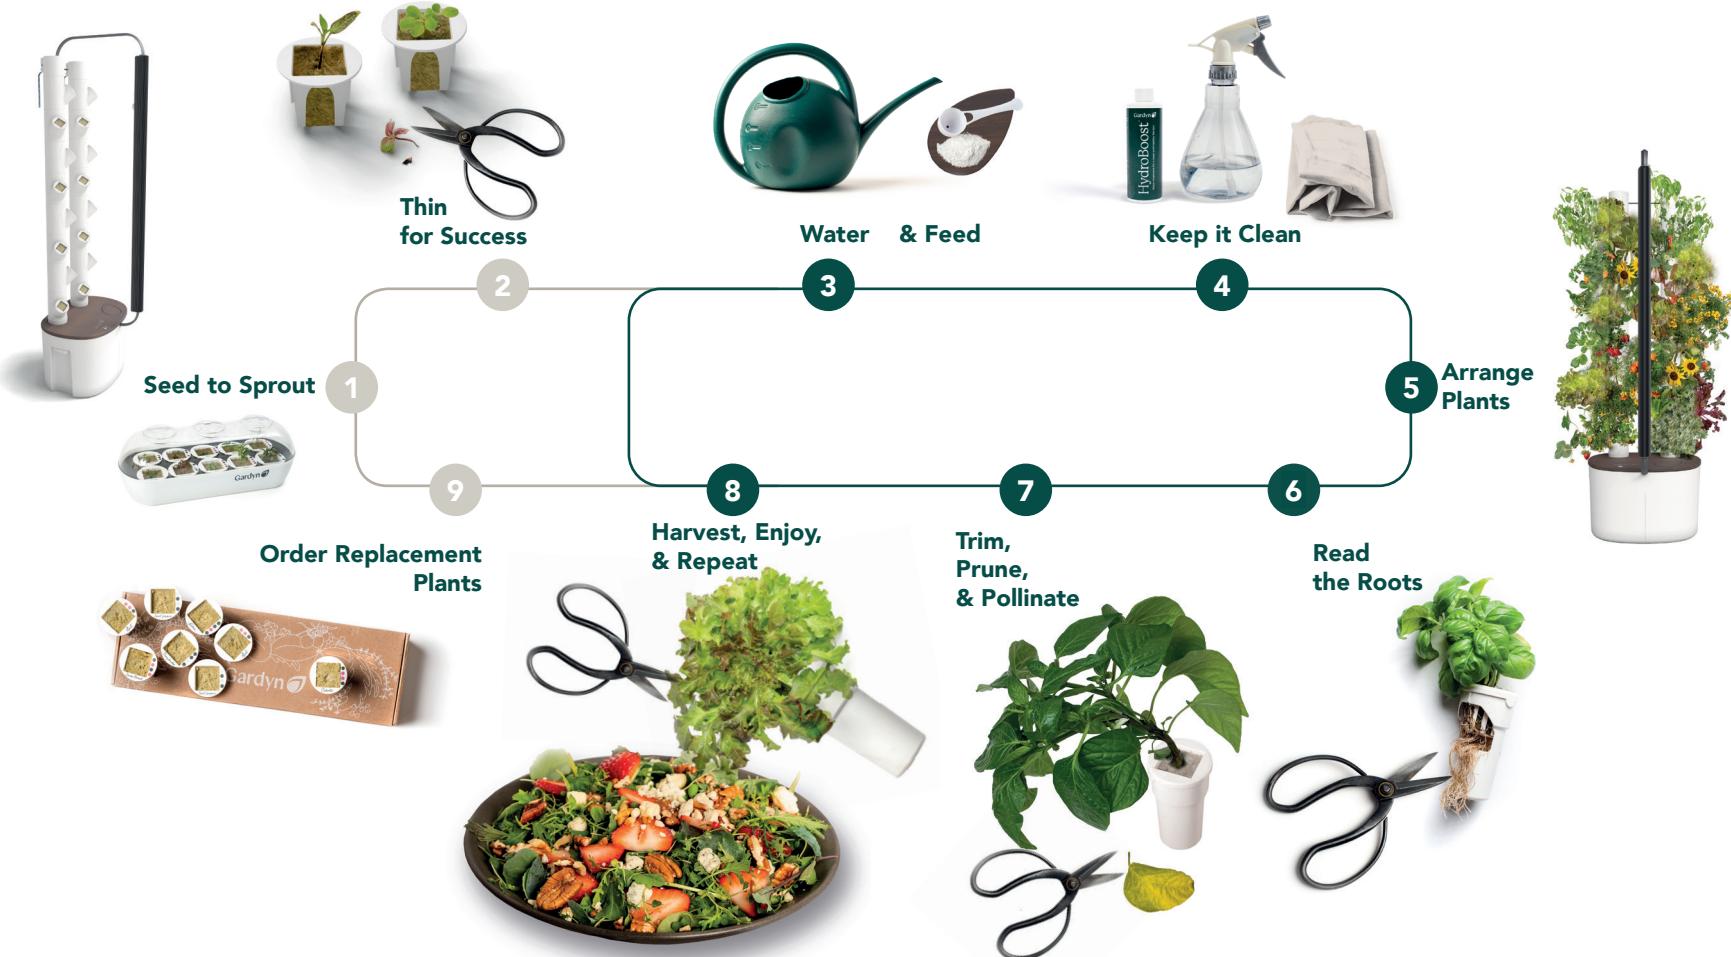

# Safety instructions

Thank you for choosing Gardyn Studio! Please read and follow these safety instructions before you set up your device and keep them handy if you run into any issues while using your device. If you have any questions about your device or its operation please contact us at [support@gardyn.com](mailto:support@gardyn.com).

## Read all instructions before installing and operating your device.

It is the owner's responsibility to ensure that all users are aware of all warnings and precautions. When using an electrical unit, basic precautions should always be followed, including the following:

### DANGER – To reduce the risk of electric shock:

- Always unplug the Gardyn Studio from the electrical outlet before cleaning or performing maintenance operations.
- If setting up multiple devices, be sure not to overload the power supply or circuit, and if needed, utilize two different outlets.
- Never allow the electrical cord or outlet to get wet.
- Be sure to fully set up Gardyn Studio first, and then fill the reservoir with water, and be careful to not splash or spill water outside of the reservoir, especially near any electrical outlets or the electrical components of the device.
- When filling the reservoir be careful not to overflow the reservoir with too much water. If the reservoir is overfilled, there are weeping holes that will cause the excess water to drain out and in addition to the potential electrical issues, the additional water could damage or destroy carpet and surrounding floors.
- When moving the device or performing any maintenance on the device, be sure to fully empty the water reservoir first to avoid any spills or splashing.

### WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- Unplug from outlet before assembling or disassembling parts.
- To disconnect, place the power switch located behind the unit in OFF position, then remove plug from outlet.
- Use this unit only for its intended use as described in these instructions. Use only original parts from the manufacturer. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- If a part is damaged or worn, contact the manufacturer immediately to order the appropriate spare part, then replace the damaged or worn parts. Do not use the unit until the repair is performed. The provision of replacement parts may be subject to the warranty on the device and if expired, may require additional costs.
- Never operate this unit if it is incomplete, has a damaged cord or plug, is not working properly, has been dropped or damaged, or has been dropped into water or had an excessive amount of water spilled onto it.
- Do not try to unscrew any part of the unit or open it using force.
- Keep the cord away from any heat source and open flame.
- Never drop or insert any object into any unit opening.
- This unit is for indoor use only. Do not store it outdoors, near water, or in high humidity levels. Failure to maintain the product indoors could result in pest infestations or other damage to the device.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered. Do not store near aerosol products or oxygen tanks.
- Do not immerse the unit, cord, or plug in water or any other liquid. As noted above, be mindful to not splash or spill water when filling the water reservoir and be careful not to overflow the water reservoir.
- Make sure there is no water close to the power supply or its cord.
- Never pour water on the lights, on the power supply, on the cord, or on the power outlet.
- This product is not intended for use by children or persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge, unless they are directly supervised by a responsible and capable adult who is responsible for their safety and understands the hazards involved.
- Cleaning and user maintenance shall not be performed by children.
- Close supervision is necessary when this product is stored or used by, or near where children or individuals with special needs frequently gather and/or can obtain access to the product.
- User's home electrical wiring shall be in accordance with all applicable laws, rules and regulations.
- Users must ensure that the product is connected to an outlet having the same configuration as the device's plug. No adapters or extension cords should be used with this product, however a surge protector may be used.

### Device Camera

- Do not touch or try to manually adjust the camera.
- When first installing the product or when physically moving/changing its location, and if using the Camera, Users should check the pictures that are being taken to ensure that there is no images or other information being captured by the Camera that the User does not want to share.
- Never place the device in a child's bedroom or an area where children regularly play such as a playroom.
- Any photos taken by the Camera can be deleted by the Customer Service team.
- Camera can be disabled by adjusting the settings in the App or by leaving the sticker on. Please note that the camera only takes still pictures every 30 minutes and does not record video or sound.

### Notice & Additional safeguards

- Do not look directly into the lights when ON.
- The device should be used indoors exclusively, in a dry and temperate environment (65 ° F-80 ° F / 18 ° C - 27 ° C).
- Make sure all packaging material or promotional labels have been removed and safely discarded before using the unit for the first time.
- To operate, the device needs to be connected to WiFi. Any WiFi that the device connects to should be secured with a password.
- No water connection is necessary.
- No sunlight is necessary.
- Use the lateral lid locks to secure the lid on the water tank before powering the device.
- Do not touch the lights' enclosure: it can get warm due to the heat dissipated by the lights.
- An opening on the surface of the wooden board makes it possible to fill the tank and add nutrients. When filling the water tank, make sure that the water level stays below the bottom edge of the circular opening.
- Any water that may spill on the device should be promptly wiped off.
- The removable wooden cap, which covers the hole to pour water onto the tank, should remain in position when the device is ON to avoid the development of biofilm in the device.
- Always make sure the water pump is in the lowered position inside the water tank when the device is ON.
- When pulling yPods out of the column, use the sleeve to avoid any water spillage. Do not pull the yPods from the column when the pump is working or within the 5 minutes following irrigation by the water pump.
- Used electric or electrical products should not be disposed of with general household waste. Please recycle where facilities exist. Check with your local authority for recycling advice. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.
- The plants growing on the device are of the user's sole responsibility. Do not add any spray or liquid or chemical on the plants. Do not eat any plant if it presents any risk, including food sensitivities and/or allergies. Typically, only some parts of the plants are edible. Non-edible parts should not be consumed.
- If pests, including insects, become apparent, please contact Gardyn for information on how to manage any pest issues. It is important to move as expeditiously as possible. Gardyn shall not be responsible for any resulting damages following an untreated pest infestation, including damage to user's property or health issues.
- As with any natural product, it is possible that mold or fungus may develop on the plants or other organic materials used with the device. If mold or fungus develops, please contact Gardyn for information on how to safely remove it and ways to avoid it from redeveloping.
- Use of untested or unauthorized products with the Gardyn device, including third party branded plant food, cleaning agents, chemicals such as hydrogen peroxide, etc., may result in damage to the machine or plants, or may result in toxicity in plants or produce. Such use is strictly prohibited and will be considered a use against recommendation voiding the warranty.
- Gardyn branded products are meant to be used with the Gardyn device and should not be used for any other purposes, including for use in other brands indoor planting devices, and if you do so it is at your own risk, and Gardyn is not liable. Unauthorized use of Gardyn products such as HydroBoost or Gardyn-brand plant food with any plants or devices besides the Gardyn device may result in damage to persons or property and is strictly prohibited.
- If users experience illness after ingesting or otherwise coming into contact with a plant grown from Gardyn, users should immediately contact a medical professional.
- Some Gardyn plants may be toxic to animals, including pets. Please consult with your veterinarian regarding which Gardyn plants may be dangerous to your pets and keep any such toxic plants out of reach. Gardyn disclaims any responsibility for illness of pets or other animals who have ingested plants grown from Gardyn devices.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:
  - this device may not cause harmful interference, and
  - this device must accept any interference received, including interference that may cause undesired operation.

### FCC & IC Radiation Exposure Statement:

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

#### Terms of Service:

[mygardyn.com/policy/terms-of-service](http://mygardyn.com/policy/terms-of-service)

#### Warranty:

[mygardyn.com/policy/warranty](http://mygardyn.com/policy/warranty)

#### Privacy:

[mygardyn.com/policy/privacy](http://mygardyn.com/policy/privacy)

#### Referral Terms & Conditions:

[mygardyn.com/gardyn-referral-program-terms-and-conditions/](http://mygardyn.com/gardyn-referral-program-terms-and-conditions/)

#### Subscription terms:

[mygardyn.com/policy/subscription](http://mygardyn.com/policy/subscription)

#### Return:

[mygardyn.com/policy/return](http://mygardyn.com/policy/return)

#### Patents:

[mygardyn.com/patents](http://mygardyn.com/patents)

*Due to continuous product improvement, the products illustrated/photographed in this booklet may vary slightly from the actual product.*



# Questions?

---

**Explore the Help Center**



[support@mygardyn.com](mailto:support@mygardyn.com)



Norme(s) RSS exempté(s) de licence d'Industrie Canada. Le fonctionnement est soumis aux deux conditions suivantes :

- cet appareil ne doit pas causer d'interférences nuisibles, et
- cet appareil doit accepter toute interférence reçue, y compris les interférences susceptibles de provoquer un fonctionnement indésirable.

**Déclaration d'exposition aux radiations de la FCC et de l'IC :**

Cet équipement est conforme aux limites d'exposition aux radiations de la FCC et du Canada établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

Cet émetteur ne doit pas être installé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.