

User Guide

Charisma

In-Ear Feather Light TWS Wireless Earphone with IntelliTap

Introduction

The sleekest earbuds to immerse in the musical world. Experience the freedom of Truly Wireless Stereo earbuds, outfitted with the latest Bluetooth v5.0 take you in the musical realm. The high-grade microphone ensures more transparent, stable conversations. Charisma is your perfect go-to earbuds as they sport stylish design that offers True Comfort with a secure fit for all your activities. With a playback time of up to 5 hours and 20 hours with charging case, let your music play without charging worries. Just take the earbuds out of the stylish sliding charging case, and auto-pairing will take care of the rest.

PackagingContents

- Charisma
- Charging case
- User guide
- 3 pairs Ear caps (S/M/L)
- USB-C Charging Cable

Specifications

- Bluetooth Version: v5.0
- Bluetooth Chipset: JL 6936D
- Bluetooth Profile: HSP, HFP, A2DP, AVRCP
- Earphone Input: 5V, 35mA
- Charging Case Input: 5V, 300mA
- Impedance: 16Ω
- Frequency Range: 2.402 – 2.483 GHz
- Charging Time: 1 Hour
- Playing Time: 5 Hours
- Standby Time: 120 Hours
- Earphone Battery Capacity: 55mAh x 2
- Charging Case Battery Capacity: 600mAh
- Battery Type: Li-Polymer
- Operating Distance: 10m

Features

- **Breath-taking Sound:** The Truly Wireless Stereo earbuds offer ultimate listening freedom needed for your music.
- **Smarter Listening Control:** Keep music and calls under your control with the built-in smart touch sensors.
- **Class-Leading Connectivity:** Charisma features Bluetooth v5.0, ensuring a superior connection with no drops in signal or wireless connectivity.
- **One Charge, Longer Music Time:** Charisma provides playtime of up to 5 hours on a single charge and an additional 20 hours with charging case.

- **Smart Auto-Pairing:** The TWS earbuds auto-pair with your device as soon as taken out of the box.
- **Engineered For A Secure Fit:** The stylish design fits into your ears perfectly and doesn't fall off even during the toughest workouts.

Compatibility


Charisma can be paired to all Bluetooth-enabled devices.

Precautions

Please read all safety instructions and warnings thoroughly before using this product. Improper use of this product may result in damage to this or attached products.

1. Do not disassemble the product or attempt to fix it.
2. Do not attempt to replace any part of this product or battery inside.
3. Do not crush, puncture, dispose of in fire, short the contacts or expose the product to water or other liquids.
4. Do not store or use the product in a high-temperature environment, including intense sunlight or heat.
5. Avoid drops, bumps, abrasions and impacts.
6. If there is any reason to believe that there is damage to the product, discontinue use immediately.
7. If you find that the product is too hot, is emitting an odour, or is deformed, punctured or exhibits any suspicious or abnormal behaviour, discontinue use immediately and contact our customer service.

Appearance & Interface Description

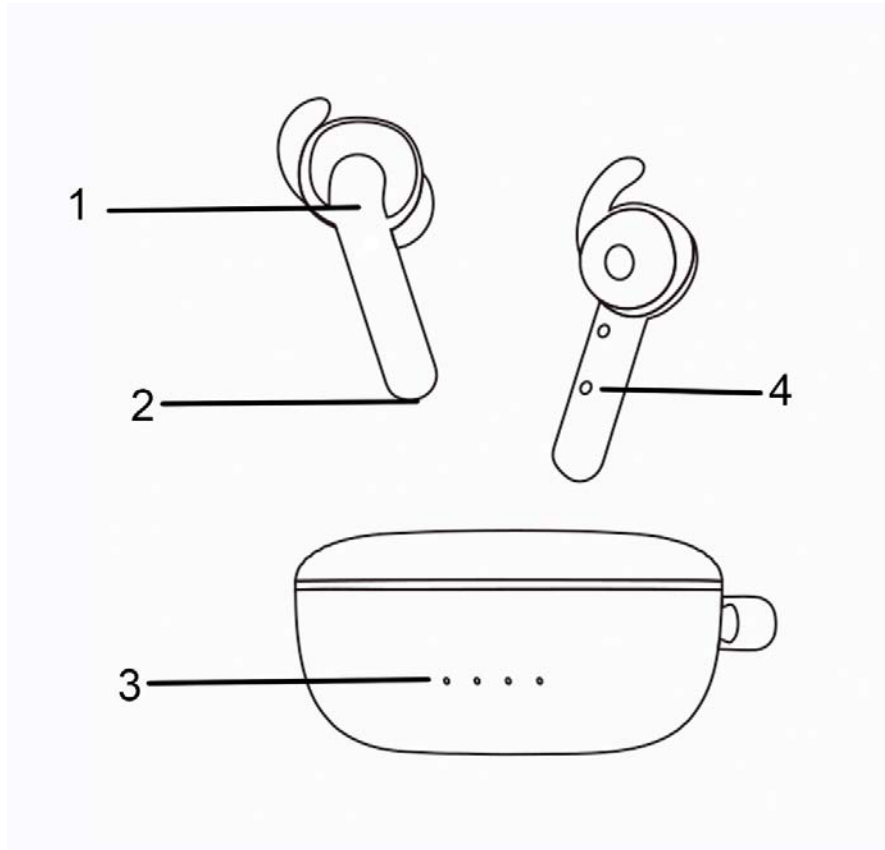

1. Touch Point
2. Microphone
3. Charging Case LED Indicator
4. Charging Contact

Operation Instructions

1. Automatic Power On/Off:

- Open the charging case and remove the earbuds to power on or press the touch point for 3 seconds to power on.
- Put the earbuds back in the charging case or press the touch point for 5 seconds to power off.

2. Headphone Pairing:

- Charisma automatically enters into pairing mode once removed from the charging case.
- Search the earbuds on Bluetooth list of your phone to connect for the first time.
- The earbuds will pair automatically to the last paired device when taken out of the charging case.

3. Call Function:

- Press the touch point on left/right earbud to answer or end calls.
- Press the touch point on left/right earbud for 2 seconds to reject an incoming call.

4. Music Controls:

- Press the touch point on left/right ear while playing music to play/pause.
- Press the touch point on left earbud for 2 seconds to play the previous track.
- Press the touch point on right earbud for 2 seconds to play the next track.

5. Voice Assistant Function:

- Tap the touch point on either ear 3 times to wake up the voice assistant in standby or music playing mode.

6. Charging Charisma:

- Place the earbuds inside the charging case with contact points touching the charging contact perfectly.
- Connect the USB-C cable to the charging case to charge using a cable.
- The charging case indicator lights start flashing when charging.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.