

Manual

Before installation

Note: Remove all packaging materials from the product.

The included mounting material (screws and wall plugs) is suitable for ordinary solid concrete or masonry construction. Check which mounting material is suitable for your chosen mounting surface. If necessary, seek expert advice.

Installation

Note:For best effect,the security light should be installed at a height of 0.5-1.6m above ground level.

Installing the wall light

- Drill two mounting holes on the wall using an appropriately sized drill bit for mount screws
- After inserting the anchor, install the screws and reserve a small screw head outside.
- Align the two holes at the back of the lamp with the two screws.
- Note:if the mounting surface requires the use of wall plugs(e.g.brick or concrete)or pre-drilling(e.g. hard wood),first mark and drill pilot holes in the wall using the wall bracket as a template.
- Ensure that the solar panel is angled so that it receives the maximum amount of sun exposure.



Operation

The switch has three gears.

Auto: Induction mode, lights up for 30 seconds after detecting the induction

Off: off mode, the light does not work

On: long light mode, continuous lighting

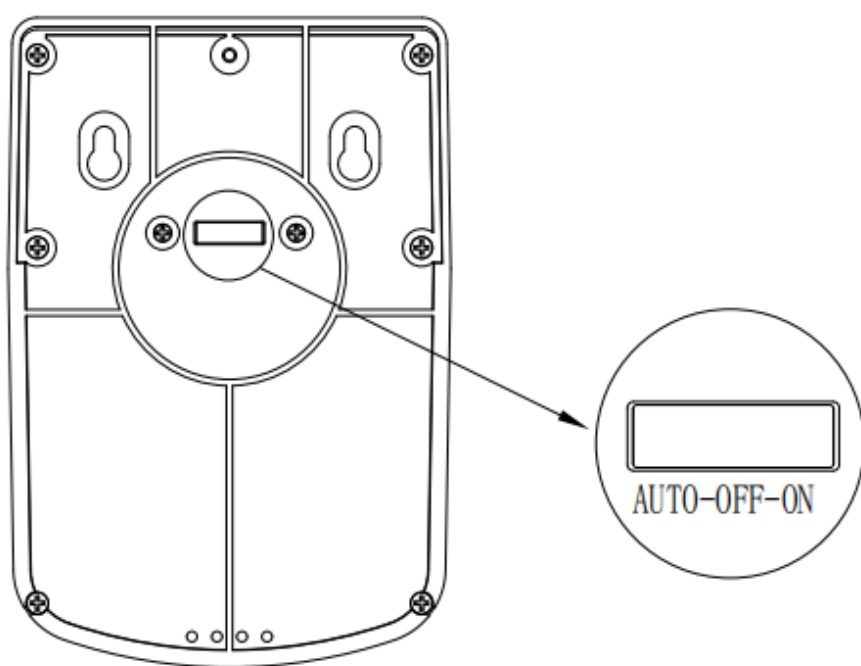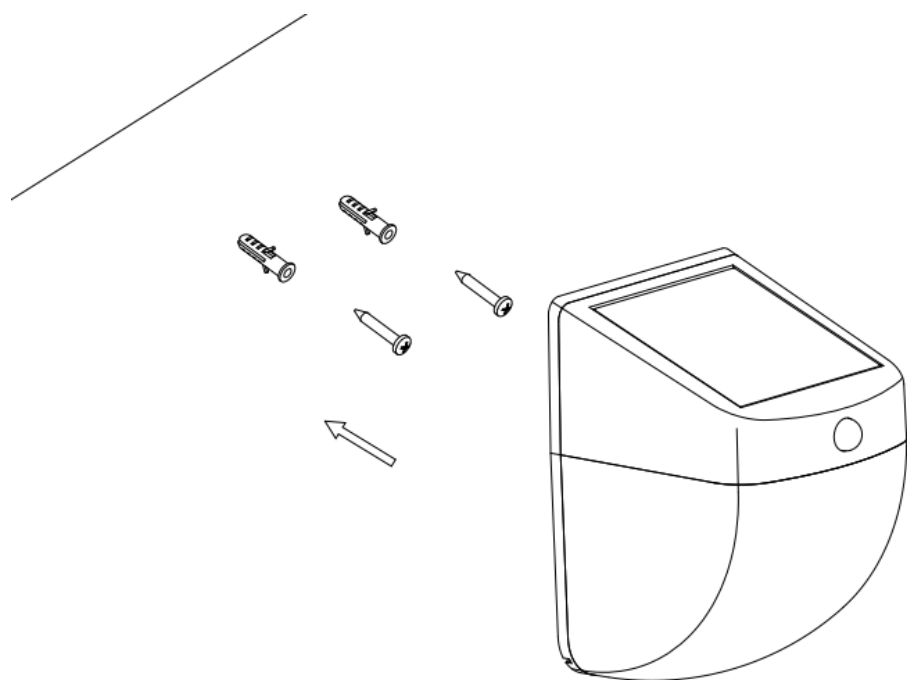

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.