

T62
User Manual
TRUE WIRELESS
EARBUDS

Contents

- Customer Service & Packing List.....01
- Product Overview & Parameters.....02
- How to Pair with Your Devices / Reset.....03-04
- How to Wear Your Earbuds.....05
- How to Fit Your Ears.....06
- Power on / Power Off.....07
- How to Charge.....08
- Touch Control/Music/Call/Voice Assistance.....09
- Touch Control (Use one Earbud).....09
- How to sync volume on Android.....09
- Battery Warning, Storage and Maintenance.....10
- FCC Citation.....11-12
- FAQ.....13-16

Customer Service

Email: T62@zingbird.store
Web: www.zingbird.store
If you have any issues, please feel free to contact us, and we will reply within 24hrs.

Packing List

Charging Case * 1, Earbuds * 1 Pair (L & R), Ear Tips * 3 Pairs (1 pair on the earbuds), Type-C Charging Cable * 1, User Manual * 1.

Note: Please remove protective films of the charging pins before using it.

Overview

Product Parameters

Model No.: T62
Charging Port: Type-C
Input: 5V 1A
Support Profile: A2DP/AVRCP
Earbuds: 30mAh 3.7V, 0.11Wh
Charging Case: 300mAh 3.7V, 1.11Wh
Charging Time: 1h for earbuds; 1h-1.1h for charging case
Transmission Range: 33 feet
Earbuds: 30mAh 3.7V, 0.11Wh (without obstacle)

How to Pair with Your Devices?

Stereo Mode
(Prior to first use - please ensure that both the earbuds and the charging case are fully charged.)

- Take out both earbuds from the case. (Both earbuds will automatically power on and enter pairing mode within 10s.)
- Turn on Bluetooth on your device/Phone/PC, select "T62" to connect the earbud successfully.

Reset
If only one earbud is working or the earbuds fail to pair or connect, reset them as follows:
1. Turn off Bluetooth on all devices near the earbuds and remove/forgot [T62] records from your device.
2. Put both earbuds in the charging case and ensure that they are charging.
3. Tap both earbuds quickly 5 times to clear the pairing record with the last device. (Both earbuds' LEDs will flash green and white lights 3 times).

Single Earbud Mode

- Take out one earbud from the charging case.
- Turn on Bluetooth on your device, select "T62" to connect the earbud successfully.

How to Wear Your Earbuds?

Step 1: Make sure the ear tips are facing down. Then place the earbuds in your ears.
Step 2: Rotate the earbuds back to the auricle side to fit snugly. Ear tip facing up is the wrong way to wear earbuds.

How to Fit Your Ears?

Step 1: Select the appropriate ear tip size (small, medium, large) and place it on the earbuds.
Step 2: Place the ear tips firmly on the earbuds. There should be no gap between the ear tip and earbuds. (Medium-sized ear tips are pre-mounted on earbuds.)

Power On and Power Off

Power On
Auto Power On: Open the charging case, earbuds will automatically power on.
Manual Power On: Long tap on the touch control area for 2s, earbuds will power on and earbud light will flash white 1s.

Power Off
Auto Power Off: Put both earbuds in the charging case, and closing the case earbuds will automatically power off.
Note: This method just for earbuds doesn't pair with your device yet.

How to Charge?

Earbuds Charging:
Place both earbuds in the charging case and close the lid of the case. (Earbuds are charging, the LED indicator will flash green; Earbuds are fully charged, the green light will go off.)

Charging Case Charging:
Please use the included Type-C USB cable to charge the charging case. (When charging, the digital display will flash and show the real-time battery level.)

Power On and Power Off

Power On
Auto Power On: Open the charging case, earbuds will automatically power on.
Manual Power On: Long tap on the touch control area for 2s, earbuds will power on and earbud light will flash white 1s.

Power Off
Auto Power Off: Put both earbuds in the charging case, and closing the case earbuds will automatically power off.
Note: This method just for earbuds doesn't pair with your device yet.

How to Charge?

Earbuds Charging:
Place both earbuds in the charging case and close the lid of the case. (Earbuds are charging, the LED indicator will flash green; Earbuds are fully charged, the green light will go off.)

Power On and Power Off

Power On
Auto Power On: Open the charging case, earbuds will automatically power on.
Manual Power On: Long tap on the touch control area for 2s, earbuds will power on and earbud light will flash white 1s.

Power Off
Auto Power Off: Put both earbuds in the charging case, and closing the case earbuds will automatically power off.
Note: This method just for earbuds doesn't pair with your device yet.

How to Charge?

Earbuds Charging:
Place both earbuds in the charging case and close the lid of the case. (Earbuds are charging, the LED indicator will flash green; Earbuds are fully charged, the green light will go off.)

Touch Control

Use Two Earbuds

Music: Play/Pause, Next Track, Last Track, Volume +, Volume -, Call: Answer Call, End Call, Reject Call, Voice Assistance: Activate Siri or other voice assistances.

Use One Earbud

Left Earbud: Single Tap, Double Tap, Long Tap, Triple Tap, Long Press 2s.

Right Earbud: Single Tap, Double Tap, Long Tap.

How to sync volume on Android?

- Find "Settings" on the phone
- Enable "Bluetooth"
- Connect with "T62"
- Click on the "Set button"
- Sync volume with phone

Use One Earbud

Left Earbud: Single Tap, Double Tap, Long Tap.

Right Earbud: Single Tap, Double Tap, Long Tap.

Battery Warning

Using the wrong battery can cause fire and other hazards (for example, in the case of lithium battery types).
1. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery that can result in an explosion.
2. Do not use a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
3. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is a guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to attempt to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase separation between equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Battery Warning

Using the wrong battery can cause fire and other hazards (for example, in the case of lithium battery types).
1. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery that can result in an explosion.
2. Do not use a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
3. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is a guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to attempt to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase separation between equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Storage and Maintenance

- If the earbuds have been unused for more than 3 months, we recommend that you charge them.
- Please use chargers that are FCC (Federal Communications).
- Do not disassemble earbuds.
- Adult supervision is required for children aged 6 and under.
- Do not expose earbuds to high or low temperature, do not use the earbuds in thunderstorm storm. Avoid falling or violent impact of the device. Keep the device away from fire, do not put.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is a guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to attempt to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase separation between equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Storage and Maintenance

- Find "Settings" on the phone
- Enable "Bluetooth"
- Connect with "T62"
- Click on the "Set button"
- Sync volume with phone

FCC Caution

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FAQ

Poor sound quality, seems unsatisfactory?
① The mesh of earbuds may be dirty. Please use a fine cotton swab dipped in a small amount of alcohol to wipe the mesh of earbuds.
② The size of the choosing earpads and earbuds wearing direction. Please choose the right earpads and adjust earbuds wearing direction.
③ Whether the earbuds can be turned on normally. Please note that the touch area please do not touch other objects to avoid false touch (such as hair, desktop, hats, headbands, etc.)

How to avoid mistaken touch?
① Please do not let the touch area touch other objects (such as hair, desktop, hats, headbands, etc.)
② Please note that the touch area please do not touch other objects to avoid false touch (such as hair, desktop, hats, headbands, etc.)

Why do my earbuds keep falling? How to avoid it?
① May choose the wrong ear caps, pls choose the ear-tips that fit your ear size.
② The earbuds are not worn in the right way, pls put the earbuds under your ear and rotate it to match the right angle.

Signal Lag

- Please check whether there is interference in the surrounding environment.
- Check whether the earbuds are low power state and high temperature state.
- The use distance is not recommended to exceed 10 meters.
- If none of the above conditions exist, please restart the device and earbuds, and re-pair them.

Volume up and down automatically

- Please check whether the surface of the touch area is sweaty, wipe with dry paper and try again.
- Please note that the touch area please do not touch other objects to avoid false touch (such as hair, desktop, hats, headbands, etc.)

What are the possible reasons why earbuds and computers don't pair?

- Your device does not have Bluetooth function, you can connect a Bluetooth converter externally.
- The earbuds are not worn in the right way, pls put the earbuds under your ear and rotate it to match the right angle.

Signal Lag

- Please check whether there is interference in the surrounding environment.
- Check whether the earbuds are low power state and high temperature state.
- The use distance is not recommended to exceed 10 meters.
- If none of the above conditions exist, please restart the device and earbuds, and re-pair them.

Volume up and down automatically

- Please check whether the surface of the touch area is sweaty, wipe with dry paper and try again.
- Please note that the touch area please do not touch other objects to avoid false touch (such as hair, desktop, hats, headbands, etc.)

Why is the volume of my earbuds small?

- Please check whether the sound outlet hole is blocked.
- Try to adjust the device volume and earbuds volume to the maximum, see if it works.

The call is not clear/unable to speak.

- Make a master-slave switch to confirm whether the two earbuds talk the same.
- Confirm that the main earbud is worn, the microphone function only works in the main headset. (The host will switch between master and slave after putting it in the case and closing the lid.)
- If you use the conference APP, it may be poor compatibility.

Signal Lag

- Please check whether there is interference in the surrounding environment.
- Check whether the earbuds are low power state and high temperature state.
- The use distance is not recommended to exceed 10 meters.
- If none of the above conditions exist, please restart the device and earbuds, and re-pair them.

Volume up and down automatically

- Please check whether the surface of the touch area is sweaty, wipe with dry paper and try again.
- Please note that the touch area please do not touch other objects to avoid false touch (such as hair, desktop, hats, headbands, etc.)

Why is the volume of my earbuds small?

- Please check whether the sound outlet hole is blocked.
- Try to adjust the device volume and earbuds volume to the maximum, see if it works.

The call is not clear/unable to speak.

- Make a master-slave switch to confirm whether the two earbuds talk the same.
- Confirm that the main earbud is worn, the microphone function only works in the main headset. (The host will switch between master and slave after putting it in the case and closing the lid.)
- If you use the conference APP, it may be poor compatibility.