


# LE•MEGA

## LIFE & ALOUD

MSY6 ALL-IN-ONE MUSIC SYSTEM

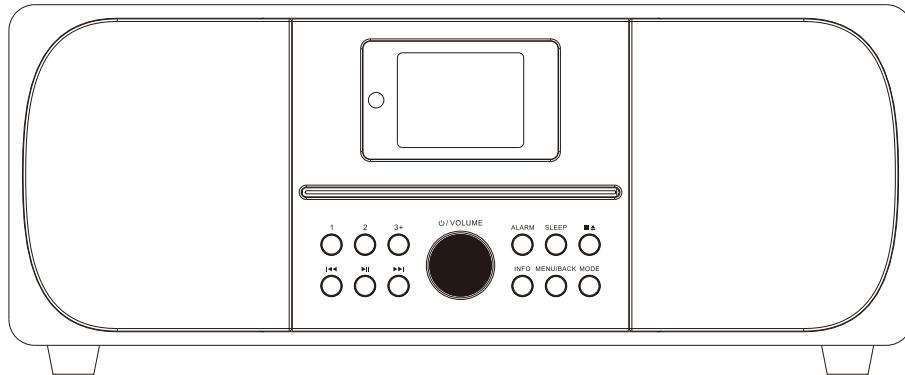

## Owner's manual

### Safety

#### Safety Instructions

Please store this instruction manual for future reference.

- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- **WARNING:** The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.



ATTENTION: RISQUE DE CHOC ELECTRIQUE-NE PAS OUVRIR

- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- **Warning:** To reduce the risk of electric shock, do not remove cover(or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
- **Correct Disposal** of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.
- No naked flame sources, such as lighted candles, should not be placed on the apparatus.
- Do not use this product near water or moisture.
- Clean only with a dry cloth.
- Unplug this product from the wall outlet before cleaning.
- Place the unit on a solid surface.

- Do not put it in a closed bookcase or a cabinet that may keep air from flowing through its ventilation openings.
- Do not install near any heat sources, such as radiators, heat registers, stoves or other appliances that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs and the point where they exit from the product.
- Servicing is required when the product has been damaged. Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please contact the manufacturer to be referred to an authorized service center near you.
- To prevent risk of fire or electric shock, avoid over loading wall outlets, extension cords, or integral convenience receptacles.
- Do not let objects or liquids enter the product.
- Use proper power sources. Plug the product into a proper power source, As described in the operating instructions or as marked on the product.
- Changing sources while a CD is playing causes the CD to stop playback. Playback will resume when the source is set to CD again.
- The sound quality of MP3, CD-R/CD-RW, and even commercially recorded discs can vary greatly. The same holds true for the sound quality of portable MP3 players.
- Do NOT use any CD lens cleaning discs since these are not designed for slot-load machines.
- Avoid bending the disc when loading or ejecting.
- Do not move the unit while a disc is playing and do not ship the unit with a CD inside.
- Do not try to insert a disc in the slot if one is already inside the unit.
- Do not insert specially shaped discs or 3" CD "single" discs.

You may experience a delay in playback when inserting MP3 or WMA discs while the player reads the directory. Paper labels stuck to CD-R/CD-RWs may become loose and possibly damage the player.


- CDs with severe scratches may not play properly.
- Do not insert anything except a CD inside the loading slot in the rare event you experience an error, unplug the power cord for 60 seconds and then plug it back in firmly.

## Carton contents

After you unpack the box, you will find the following items:

- 1 MSY6 unit
- 1 power adapter
- 1 owner's manual
- 1 Remote Control

## Main controls

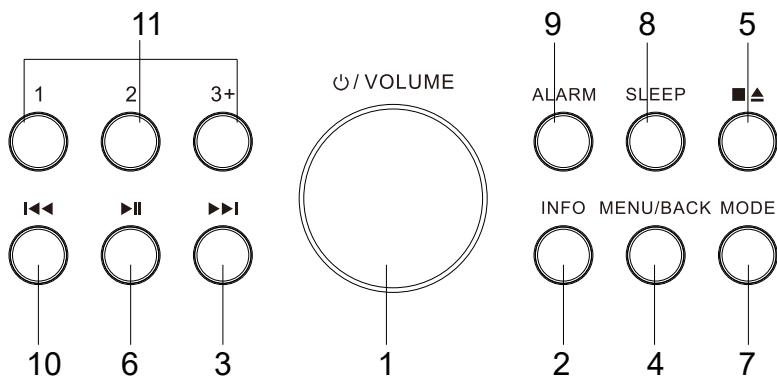

## 1. KNOB: SELECT/ VOLUME/MUTE/SNOOZE:

- a. SELECT: Turn to scroll through a menu or station list. The chosen option is highlighted, Press to the button to select.
- b. VOLUME: Turn to the button to adjust the volume up or down when playback.
- c. MUTE: Press to the button to mute the music when playing.
- d. SNOOZE: Press the button to snooze a set time when alarm sounding.
- e. POWER ON | OFF the unit: Long press this button to power on/standby the unit.

**2. INFO:** View more information about the station or track playing. Press again to cycle through further information screens then return to the normal Now playing screen.

**3. ►► / [TUNE+]:** Next: Press to select the next track under FM/DAB/ Bluetooth / CD mode; Press and hold the Tune+ button 2 seconds to auto scan the stations under the FM mode.

## 4. BACK/MENU:

- a. BACK: press the BACK to return to the previous screen.
- b. MENU: press the MENU to show the MENU for the current mode. Press again to show now playing screen.

5. ■▲ :In CD mode, Press to stop CD track. Press again for CD ejection.

6. ►► : Press to select Play/Pause under USB Playback, Bluetooth and CD mode. In FM mode, press to do auto scan the stations.

**7. MODE:** Press to Source to select different modes , DAB, FM, Bluetooth, CD, USB Playback and AUX.

**8. SLEEP:** When playing, press Sleep, MSY6 will back to set sleep time. When playing, opens the sleep menu to set the time interval before the unit is set to Standby mode. When alarm is sounding, allows you to set the snooze interval.

**9. ALARM:** Press to Alarm, the screen will display Alarm 1 and Alarm 2; then Rotate and press the SELECT button to select alarm 1 or alarm 2 to set up.

**10. ◀◀ / [TUNE-]:** Previous: Press to select the previous track under FM/DAB / Bluetooth/CD mode; Press and hold the Tune- button 2 seconds to auto-scan the stations under the FM mode.

## 11. PRESET

Saving Presets--FM, DAB, total can save 40 preset stations [20 DAB stations and 20 FM stations].


To save a quick preset hold either button 1 or 2 for 2 seconds. To save more than 3 preset, press and hold the Preset button 3+ for 2 seconds, use the navigation control ▶◀ /▶▶ or rotate the knob to select and push Select knob to save.

Recall Presets-- FM, DAB

Short Press Preset button 1 or 2 to recall a quick preset. Press the Preset button 3+ and use the navigation control ▶◀ /▶▶ or rotate the knob to tune into the station.

## Connectors


As shown below has connectors from left to right)for the followings:

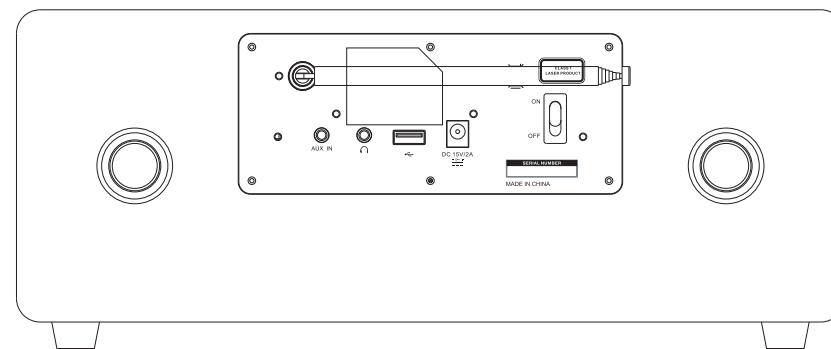

- Aux in (to connect external MP3 music source from the iPod, or Pad other devices)
- Headphone out for the headphone playback.
- USB socket for USB stick with MP3 music playback (not for charging).
- DC Power in 15V/2A
- Power Switch

## Remote control

Most of the functions of the LEMEGA MSY6 can be controlled using either the product or the remote control.

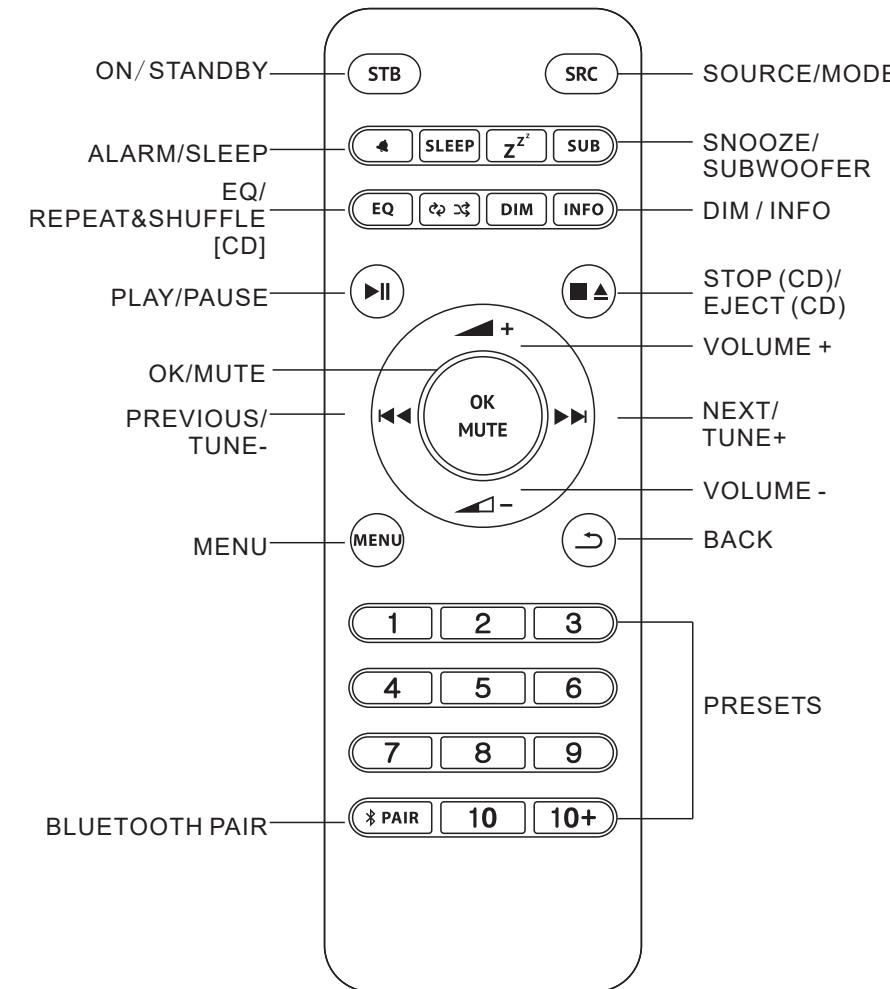

## First steps with MSY6

Insert the power adapter on the backside.

Extend the telescopic antenna in its full length for better FM/DAB reception.

Press the Power Knob once to begin start-up process

## MENU /BACK BUTTON

Pressing the button will take you to the Source Menu for the particular mode of operation you are in. For example, pressing MENU button when in DAB Mode will take you to the DAB MODE MENU. Pressing the button for a second time will return you to the 'playing screen' that you just left.

## NAVIGATING THE MENU

Most of the functions of MSY6 can be accessed in 2 ways:

- via MENU button
- using the optional remote control (shortcuts)

MENU button displays different contents, depending on the current selected mode.

Follow instructions on the display, and

- Use Knob to select and confirm
- Back to step back in the menu tree
- Press MENU to exit menu
- Press SRC [Source] to select MODE

During playback, press INFO button to display current mode additional information.

## PRESETS

PRESETS button is used to conveniently store and recall your favorites. It works

- in FM mode
- in DAB mode

In order to save a preset:

- keep PRESETS button pressed
- select preset position on the list with the knob
- press knob to confirm

To recall presets:

- Press PRESETS button
- select preset with the knob
- press knob to confirm

## Additional Functions

### EQUALIZER

Press MENU > System Setting > Equalizer and pick your favourite EQ setting. MSY6 can also store Bass/Treble combination. Select "MY EQ Settings" and adjust settings at your preference.

### ALARM

MSY6 can store 2 independent alarms. Press ALARM Button to set up Alarms and follow

### Sources [mode]

MSY6 can play different sources:

FM, DAB, CD, AUX, BLUETOOTH, USB Playback.

Press MODE to display sources list and press KNOB to select.

### FM

When listening to FM radio, MSY6 displays the station name and other RDS/BDS informations when available.

### CHANGE STATION

Press and hold **◀◀** or **▶▶** to automatically tune to the previous or next available FM station. Short Press **◀◀** or **▶▶** to select the Previous or next stations.

### SCAN SETTING

You can change the scan settings to only stop at stations with a strong signal by selecting Menu/Scan setting/Strong stations only.

### MONO

As an FM signal becomes weaker, the level of hiss can increase. To reduce it, select Menu/Audio setting/Forced Mono.

### DAB [Optional]

When listening to DAB radio, MSY6 displays the station name and other DLS informations. The first time you select DAB Radio, MSY6 performs an auto-scan of available stations.

## CHANGE STATION

Press **◀◀** or **▶▶** to automatically tune to the next available DAB station. Scroll dial can be used to list all available stations. Highlight the station you wish to listen and press the Scroll dial to confirm.

### STATION ORDER

The DAB station list can be ordered by Alphanumeric, Ensemble or Valid. To change station order, select Menu/Station order and make your selection.

### STATION SCAN

We recommend to perform a full scan from time to time to discover new stations. Press the MENU button and select Full Scan or Press **▶▶** button to perform the scan

### CD

MSY6 can play CDs. To insert a CD, gently push it into the CD slot. Once loaded, it will play automatically. Track number and time is shown on the display, together with CD text, if available. Use buttons on MSY6 or on the optional remote to perform basic functions like pause, next track, stop, etc. Press eject button to unload the CD. Keep pressed eject button to force eject process.

### Bluetooth

MSY6 can connect to Bluetooth devices and stream in CD quality. As soon as you switch to Bluetooth, MSY6 attempts to connect to the last device it was paired with. If it is the first time, MSY6 displays "Bluetooth discoverable": check your Bluetooth device setting page and select "LEMEGA MSY6" in the available devices list.

To connect a new device, press MENU button > Connect Device. Use buttons on MSY6 or on the optional remote to perform basic functions like pause, next track, stop, etc. Please refer to your Bluetooth device to start playing music on MSY6.

### Connect your Bluetooth headset to the MSY6

With the MSY6 you have the possibility to connect a Bluetooth headset via Bluetooth. Please switch your headphones to the pairing mode.

1. Press the menu button in any mode, **except** Bluetooth mode and go to **Bluetooth headphone**.

2. Choose "Bluetooth headphone On"
3. The Bluetooth symbol is flashing and waiting for pairing
4. After successful pairing, the symbol is not flashing and you can enjoy your music.

**Tips:** The headphone must have the function "simple pairing" or automatic "handshake"

#### **Aux In**

MSY6 accepts analogue audio sources, using a mini jack connector. For best performance, we recommend to balance the volume level on your device.

#### **SLEEP**

MSY6 can set a 15-30-45-60-90 minutes sleep timer. Press SLEEP Button and scroll the SELECT knob to choose the time you want.

#### **USB Playback**

Connect a USB memory stick, select USB Mode and listen to stored MP3 music files.

#### **SOFTWARE UPDATE**

From time to time, MSY6 may make software upgrades available with bug Fixes and/or additional features.

This feature is for service centre.

#### **FACTORY RESET**

Press MENU > System Settings > Factory reset and confirm with the SELECT knob.

#### **Backlight**

The MSY6 has a backlight with three brightness settings and adjustable timeout [this is the time delay, in seconds, after which the display switches to the Dim level].

There are three settings:

- Timeout - On | 10 | 20 | 30 | 45 | 60 | 90 | 120 | 180 sec
- On level - High | Medium | Low
- Dim level - High | Medium | Low

#### **Language**

The default language is English. To change select Menu > System settings > Language > then select your language

#### **Time/Date**

The time and date can be updated manually or automatically. With auto-update, the time and date are automatically synchronised with national time signals broadcast over DAB and FM [when available].

You can also select the display format for the time and date

The Time menu contains the following options

- Set Time/Date – [see below]
- Auto update - Update from Any | Update from Digital Radio | Update from FM | No Update
- Set 12/24 hour - 12 | 24
- Set date format - DD-MM-YYYY | MM-DD-YYYY.
- Clock Style - Normal Digital / Big Digital / Classic Analog / Modern Analog

#### **Set time/date**

This option is for manually setting the time and date displayed. The time displays as hh:mm, with the first value, hh, active (flashing). Adjust each value using the select control knob and push Select knob to confirm. The next value then becomes active and flashes. The date values follow and are set in the same way.

Note: The date displays as DD-MM-YYYY or MM-DD-YYYY depending on your choice of date format (see above).

#### **TROUBLESHOOTING AND ERRORS MESSAGES**

Problem	Cause	Solution
FM: HISS DAB: Burbling/Intermittent Cut-Out	Low signal strength	Check/move antenna Move radio Rescan local (high-strength) stations only
DAB: 'No stations available' message	Low signal strength	As above then rescan stations.

Bluetooth Mode: Can't connect to a paired device	Select BT DISCONNECT from the Bluetooth Menu and delete MSY6's profile from your Bluetooth device, then re-pair the devices as normal
Bluetooth Mode: Poor audio quality	<ul style="list-style-type: none"> <li>• Your Bluetooth device may be out of range</li> <li>• Electromagnetic interference</li> </ul> Move your Bluetooth device closer to MSY6 Move your Bluetooth device away from other sources of interference such as other Bluetooth devices, wireless routers etc.
CD playback does not start	CD format is not compatible CD is damaged CD is dirty
	CD format is not compatible Insert a different CD into the CD slot Clean the CD

Message	Description	Example
Service not available (DAB)	No DAB reception.	
Update failed	Software upgrade failed.	

#### TECHNICAL SPECIFICATION:

Model:	MSY6 ALL-IN-ONE MUSIC SYSTEM
Type:	CD/ DAB/DAB+/FM/AUX/Bluetooth Music System
Speaker:	2 x 3"(full range)
Power:	RMS 30W
Power Supply:	15V 2A DC mains supply
Dimension (mm):	350W x 144H x 215D
Weight:	3.5 KG

Specifications are subject to change without notice.

If you have any questions or suggestions, Please share with us.

[www.lemegaaudio.com](http://www.lemegaaudio.com)  
[info@lemegaaudio.com](mailto:info@lemegaaudio.com)



#### FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.  
-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

# LE•MEGA

## LIFE & ALOUD

---

MSY6 ALL-IN-ONE MUSIC SYSTEM



Scan me on your  
smartphone camera  
for more information

If you have any questions or suggestions,  
please share with us.

[info@lemeagaudio.com](mailto:info@lemeagaudio.com)  
[www.lemeagaudio.com](http://www.lemeagaudio.com)