



## Missile Thruster / 01-22-0003-01-00

### **Power Button on the Thruster:**

1. Locate the power button on the Thruster and hold until the red light is on.
2. Press power button repeatedly to cycle through 2 THRUSTING speeds.
3. If the device is not used for 5 minutes, it will turn itself off.
4. To turn off, hold power button on the Thruster until light turns off.

### **Using the Remote:**

1. Press power on the remote.
2. Press Thrusting button to begin and cycle through 2 Thrusting functions.
3. Press Vibrating button to begin and cycle through 8 Vibrating functions (3 speeds followed by 5 pattern options).

**Note:** Thrusting and Vibrating functions may be used independently or concurrently.

### **Charging Port:**

1. Press the jack pin into the charging port (small dimple on the bottom of the Thruster). Connect the charge cord to a USB port or adapter. Power button will flash red while charging.
2. Power button will glow solid red when fully charged. Remove from charger promptly once charging is complete.

### **Care Instructions:**

1. Wash Thruster with warm water and toy cleaner or gentle soap between each use. Air or pat dry.

**Warning:** Do not use with silicone-based lubricants.

### **Product Information:**

Charging time: 3 hours

Running time: 40 minutes

Functions: Thrust and Vibrate

Battery type: Lithium battery



**Missile Thruster / 01-22-0003-01-00**

### **FCC Warning Statement**

---

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.