

 
# Wireless Smart Glasses

## User Manual

Size: SD-G4

### Product Description

Thank you for choosing our product. It is a wireless smart glasses with new functions for user. Please read user manual carefully and keep it for reference.



### Specifications

Model Number	SD-G4
Product Name	Wireless Smart Glasses
Bluetooth	V5.0
Bluetooth Chips	AC6956A
Bluetooth Mode	Headset, Hands-free A2DP
Work Range	≤15meter
Frequency	2.4GHz
Battery Capacity	110mAH
Play Time	≈3hours
Standby	≈80hours
Charging Time	1.5hours
Charging Interface	USB
Input	DC 5V 1A
Net Weight	33g



### User Instruction

#### Power:

**Power on:** After opening RIGHT frame's leg for 3 seconds with "power on" sound, red/blue indication light will keep flashing.  
**Power off:** ① When the glasses is in power on mode, fold the frame's leg to turn off; ② If the device is connected with Bluetooth but without playing music or using it, it will turn off automatically after 5 minutes with "power off" sound.

#### Pairing:

**Initial connection:** Open the frame's leg for 3 seconds, red and blue lights flicker alternately. When user hears "DODO" sound, the glasses is in pairing mode. Turn on your Bluetooth device and click "SD-G4" to connect. Once paired, it will have "connected" sound. If it fails to connect, the glasses will turn off automatically after 5 minutes.

**Automatic connection:** Open the frame's leg and it will automatically connect to your previous Bluetooth device.

#### Adjusting Volume

**Increase volume:** When the glasses is connected to Bluetooth device, long press the front (RIGHT) touch panel area to increase volume and reach max volume will have "DODO" sound.

**Reduce volume:** When the glasses is connected to Bluetooth device, single touch the rear (RIGHT) touch panel area to decrease volume.



#### Music Operation:

**Play/pause:** Press the front touch panel area for 3 seconds when playing music.  
**Previous song:** Double click the front touch panel area when playing music.  
**Next song:** Double click the rear touch panel area when playing music.

#### Answering, Rejecting or Ending Phone Call

**Answer the phone call:** Single press the touch panel area  
**Reject the phone call:** Reject a phone call: Long press the touch panel area

**End a phone call:** During a call, single press the touch panel area

**Pick up a new call during an on going call:** Single press the touch panel area, it will cut off current call automatically and pick up a new call.

#### Voice Assistant Control

Long press the touch panel area 3 times to activate voice assistant (Siri and Samsung) and press 3 times to cancel.

#### Recharging The Battery

**Charging:** Using USB port to charge and red light with turn on during charging. Please note that suitable charging voltage is 5V. When the battery is full, blue light will turn on.

**Low power reminder:** Red light will flicker with "Battery Low" sound.

**Charging time:** When the glasses is in low battery status, charging time is about 1.5 hours.

### Maintenance Issues

- ① Turn off the power when do not use this product.
- ② Do not put this product in liquid or moist place.
- ③ Do not put this product near fire, to avoid explosion.
- ④ Do not bump this product against sharp objects, to avoid scratches or damage.

### Safety Guide

- ① Please use this product under local laws and regulations. Caution safety while driving and cycling in wearing this product.
- ② To assure your safety, please do not listen to music in high volume under some complicated environment.
- ③ Keep it away from kids because small parts may cause injuries, asphyxia and so on.
- ④ Pay attention to the warning signs in some places before using this product, such as hospital, gas station, and any potentially explosive environment.
- ⑤ Do not disassemble or damage the internal battery. Handle the battery under the local regulations. Do not throw it away as waste.

### Maintenance

- ① One year warranty. Please show or send back maintenance card and original purchasing proof.
- ② Free maintenance is available if the product is within the warranty period. If the product is broken and warranty expired, the company has rights to charge for maintenance cost.
- ③ **Cases that are not in the warranty:** Incorrect usage or man-made factors Consumable parts Using other company's components

Any other questions, please call 3336969 for more assistance.

# Wireless Smart Glasses

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.