


WM2726D Bluetooth CD PLL Fm Radio Micro System


Instruction manual

LOCATION OF CONTROLS

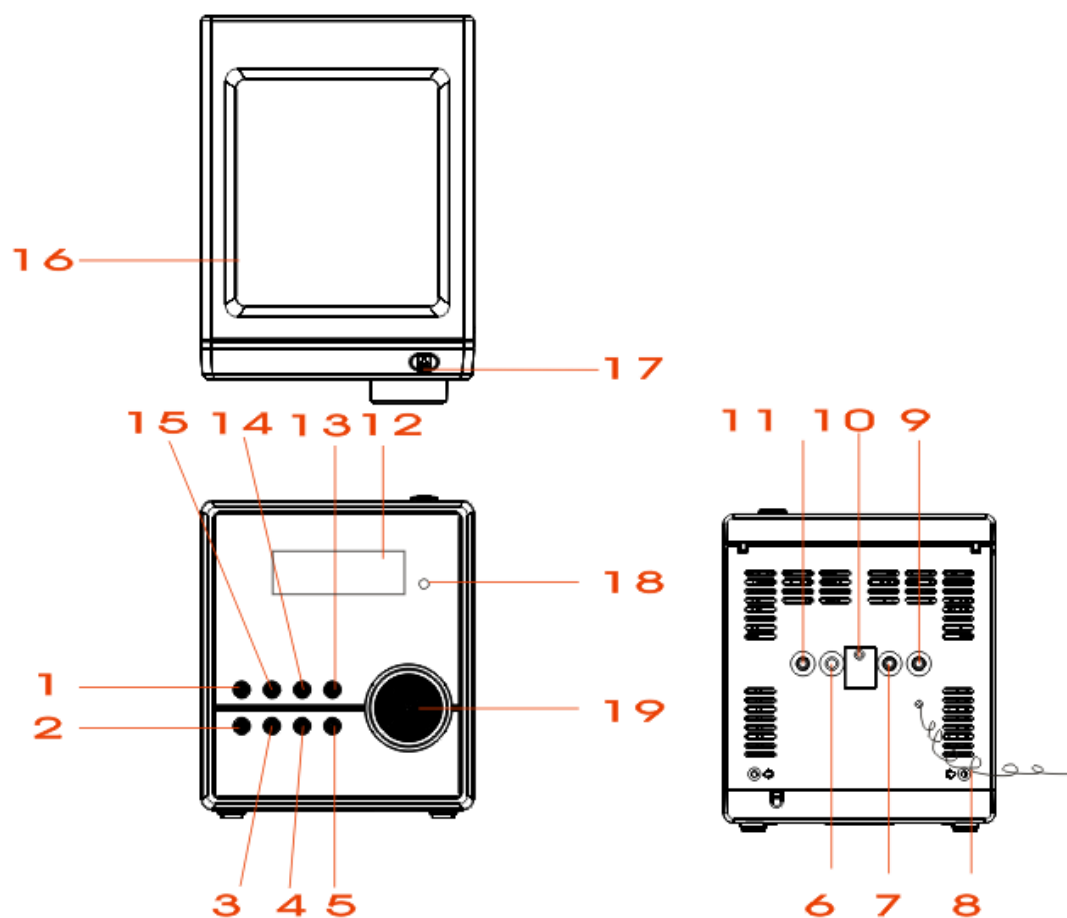

1. PLAY/PAUSE/M- BUTTON
2. SKIP- button
3. SKIP+ button
4. CLOCK/SLEEP BUTTON
5. FUNCTION BUTTON
6. PHONE JACK
7. Right speaker jack
8. FM antenna
9. Left speaker jack
10. DC jack
11. AUX jack
12. LCD display
13. STANDBY button
14. PLAY MODE/PROG/MEM button
15. STOP / M+ button
16. CD Door
17. CD Door open button
18. REMOTE SENSOR
19. Volume control

Locations of Remote Control

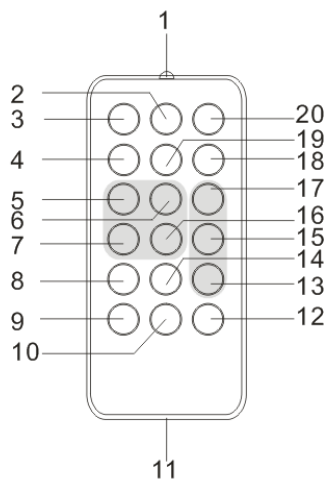

1. TRANSMITTER
2. PLAY MODE BUTTON
3. POWER BUTTON
4. MEMORY BUTTON
5. STOP BUTTON
6. PLAY/PAUSE BUTTON
7. SKIP - BUTTON
8. CLOCK BUTTON
9. SLEEP BUTTON
10. SCAN BUTTON
11. BATTERY DOOR
12. PROG BUTTON
13. MUTE BUTTON
14. ST BUTTON
15. VOL – BUTTON
16. SKIP + BUTTON
17. VOL + BUTTON
18. MEM + BUTTON
19. MEM – BUTTON
20. FUNCTION BUTTON

Unit Power Supply

This unit is designed to operate on wither AC/DC adaptor.

Operation with AC/DC Adaptor.

Insert the small plug of adaptor into the DC Jack.

Insert the AC/DC adaptor in to any convenient having AC~100-240V 50/60Hz household outlet in vertical or horizontal direction.

TO SET THE CLOCK TIME

In Standby offmode.

1. Press and hold the CLOCK/SLEEPBUTTON on the unit or CLOCK BUTTON on the remote, the digit 24H or 12H will blink on the display, then press SKIP+ / SKIP- button to desired 24H / 12H, and press the CLOCK/SLEEPBUTTON on the unit or CLOCK BUTTON on the remote to confirm
2. Then press the SKIP+ / SKIP-Button to set the desired HOUR,
3. Then press theCLOCK/SLEEPBUTTON on the unit or CLOCK BUTTON on the remoteagain, the MINUTE will blink.
4. Press the SKIP+ / SKIP-Button to set desired MINUTE.
5. Press the CLOCK/SLEEPBUTTON on the unit or CLOCK BUTTON on the remote to confirm

TO adjust the volume

Rotate the volume control knob clockwise Or press the vol + button on remote control to increase the volume.

Rotate the volume control knob anti-clockwise Or press the vol - button on remote control to decrease the volume.

Check the display to confirm the volume setting.

Mute function

Press the mute button on remote control to mute the volume. Press it again to cancel the mute function.

RADIO OPERATION

1. Press the STANDBY buttonon the unit then press the FUNCTION button repeatedly, until the frequency shown on the display
OR, press the STANDBY button on the remote to turn on the unit, then press the FUNCTION button on the remote until the frequency shown on the display

How to use the buttons for radio

- Manual Tuning

Press the SKIP+ / SKIP- button to search for desired frequency.

- Automatic Tuning

i) Press and hold the SKIP+ / SKIP- button until the display frequency starts run.

ii) When a station of sufficient strength has been found Tuning will stop or you can stop the automatic tuning by pressingSKIP+ / SKIP- button.

2. To switch off the radio, press the STANDBY button on the remote once OR press the STANDBY button on the unit, until the normal time shown on the display

PRESET TUNING

1. Select your desired station according to the normal tuning procedure.
2. Press the MEMORY button, "P01" will appear and flash in the LCD, Then use SKIP+ / SKIP- button to change the number where the station will be stored. (P01 to P20)
3. Store the current frequency by pressing MEMORY button again when you get the desired number.
4. Repeat the same procedure to set other desired frequencies into Memory No.1 to NO.20

Note: The unit can be preset up to 20 stations.

MEMORY RECALL

Recall the stored frequencies by pressing M-or M+ button to select 1 to 20 stations as desired

Bluetooth mode

You should follow several steps to connect your mobile phone

1. Activate Bluetooth from your mobile phone (please refer to your phone's user's manual)
2. Press the STANDBY BUTTON to turn on the unit, then press FUNCTION BUTTON repeatedly till "bt" indicator appears on LCD display. it will be ready to pair automatically.
3. Use your mobile phone to search Bluetooth device with the name of "MC-030".
4. Your mobile phone will find "MC-030", and will have options to connect or not. Please connect it with the password of "0000" (if any). When you successfully connect it, the Bluetooth indicator "bt" stop flashing on LCD display.

Connecting with your phone Automatically

Pairing is only needed the first time the unit and phone are used together. When the unit and phone have been paired once they will automatically connect when the unit is on and Bluetooth is activated on the phone. The next time you power on, the unit will automatically connect the latest phone that you connected.

Play from Bluetooth device

After successful Bluetooth connection, press the PLAY/PAUSE/M-button to play , Press SKIP - or SKIP + button to skip the tracks backwards or forwards. To pause or resume play, press PLAY/PAUSE/M- button again .

HANDING A COMPACT DISC

- Always protect a disc against scratches, soil, dust and etc. If a disc is treated with reasonable care, wiping off the disc with a soft cloth should be the only maintenance needed to retain its excellent sound reproduction. Discs should be retained in their original case during periods of non-use.
- Handle a disc only by its edges, Do not touch the surface or rainbow-colored side of the disc
- Handle a disc as shown in the illustrations in this section
- Use a soft cloth to wipe a disc clean. Do not use benzene, thinner, or other chemical cleaners to clean the disc as damage may result. A disc should always be wiped in a straight line from its center to its edge. Never wipe a disc in a circular motion.
- Do not expose a disc to direct sunlight, high humidity, or high temperatures for extended periods of time. Do not place the Disc on other equipment or near any heat source.
- Dust on the pickup lens can lead to erratic operation and interruption of the sound during play. To clean the pickup lens, open the disc compartment and blow the dust off. Using a camera lens blower(available at most camera stores)
- Note: Do not touch the surface of the lens. Do not allow any liquids on the inside of the product.
- To clean the CD player cabinet, use a soft and damp cloth to wipe off the exterior surface.
- Never use benzol, benzene, or other strong chemical cleaners, as these could damage the finish.

DO:



DO NOT:



PLAYING A COMPACT DISC (CD)

NOTE: Never touch the laser lens inside of the CD compartment. Clean the laser lens with a CD cleaner disc if it becomes dirty.

1. Press the **STANDBY** button on the unit to turn off the unit. Then press the **FUNCTION** button repeatedly, until the CD icon is shown on the display.
OR, press the **STANDBY** button on the remote to turn on the unit, then press the **FUNCTION** button on the remote until the CD icon is shown on the display.
2. Open the **CD DOOR** by pressing the **CD door open** button and insert a CD into the tray with the printed label side facing up.
3. Close the **CD DOOR** and the disc will rotate for a few seconds and then play automatically.
4. Use the **SKIP+ / SKIP-** button to choose a track.
5. Press the **PLAY/PAUSE/M-** button again to **PAUSE** play.
6. Press the **STOP/M+** button to **STOP** play.
7. To turn off the unit, press the **STANDBY** button on the remote once OR press the **STANDBY** button on the unit, until the normal time shown on the display.

REPEAT FUNCTION

1. Press the **PLAY MODE/PROG/MEM** button once during playback, the "1" sign will show on LCD Display. The same track will be repeated over and over.
2. Press the **PLAY MODE/PROG/MEM** button second time to repeat all tracks. The "ALL" sign will show on the LCD display.
3. To cancel REPEAT PLAY, Press the **PLAY MODE/PROG/MEM** button repeatedly until the all sign disappeared.

RANDOM PLAY

1. In CD Play mode, press the **PLAY MODE/PROG/MEM** button until "RAND" will appear on LCD Display.
2. Then it will enable random tracks play.
3. To cancel RANDOM PLAY, press the **PLAY MODE/PROG/MEM** button again, "RAND" will disappear on the display

REVERSE/FORWARD

1. The CD SKIP- [◀◀ and CD SKIP+ [▶▶] Buttons can be used to jump to a different track number or to scan disc tracks at high speed.
2. Press the CD SKIP- [◀◀ button once to hear the beginning of the current track. Press it two or more times to hear previous tracks on the disc.
3. Press the CD SKIP+ [▶▶] button to hear the next track on the disc.
4. Press and hold the SKIP- [◀◀ Button, the current track will be scanned and move backwards to the previous track(s); When the desired track section is found, release the button and normal play will resume.
5. Press and hold the SKIP+ [▶▶] Button, the current track will be scanned and move forward to the next track(s); When the desired track section is found, release the selected button and normal play will resume.

PROGRAM FUNCTION

The Program feature can be used to program up to 20 tracks to play in a selected order.

1. While in the stop mode only (CD is not playing), press the **PLAY MODE/PROG/MEM** Button, LCD Display will show the wording "PROG"&"P01".
2. Press the SKIP+ / SKIP- button to allocate the desired track.
3. Press the **PLAY MODE/PROG/MEM** button to select and store the track into memory.
4. Repeat step 2 to 3 to select up to 20 tracks.
5. To play the selected tracks (in the program mode), press the PLAY/PAUSE/M-button. The "PROG" appear on LCD Display.
6. Press the SKIP- button to hear the previous or press the SKIP+ button to hear next program track.

Note: After all of the programmed tracks have played, the CD player will return to the stop mode.

To clear the programmed tracks from memory, press STOP button until "PROG" disappear

SLEEP FUNCTION IN STANDBY ON MODE

1. Tune in the desired radio station or CD/aux/Bluetooth play mode and adjust the volume control.
2. Press the SLEEP Button. The "90" will appear on the display.
3. Repeatedly press the SLEEP Button on remote control for desired sleep time between 90, 80, 70, 60, 50, 40, 30, 20, 10 minutes.
4. The unit will automatically switch off when the SLEEP time expires.

AUX INPUT JACK

1. Press the STANDBY button to turn on the unit then press FUNCTION button repeatedly, until the "AUX" shown on the display.
OR, press the STANDBY button on the remote to turn on the unit, then press the FUNCTION button on the remote until the AUX icon shown on the display.
2. Connect the AUX connect wire from the out jack of your Personal Player such as portable MP3 player to the AUX input jack.
3. Play Start from your Personal Player.

HEADPHONE JACK

This unit will accept stereo headphones with a $\Phi 3.5\text{mm}$ plug. Before connecting the headphones set the volume to minimum level as not to damage your ears or the headphones. Connect the headphones to the headphones jack. The speakers will be automatically disconnected.

Warning: Prolonged exposure to high sound levels may permanently damage your hearing. You may not hear some warning sound while wearing these headphones.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter