 
 
Product User Manual



WIRELESS SPEAKER

Product overview



- 1) Prev Button
- 2 Volume-Button
- ③ Volume+Button
- 4 Next Button
- ⑤ Mode switch/

Play, Pause, Telephone, Station search key

- 6 TF Card or Micro/Mini SD CARD
- 7 Charging port
- ® USB
- 9 ON/OFF Switch

10 3.5mm audio input line/Auxiliary

Connection method





1 Turn on the speaker

Turn on the speaker, the speaker will automatically enter into the wireless mode.

2 Connect to mobile devices

Turn on wireless option in mobile device.select (model name) in the mobile device, the speaker will has beep sound after

For future uses, just keep the mobile device's wireless turuned on, it can automatically connect.

Other instructins

Connect to new mobile device

If the current device with the speaker is connected, you need to disconnect the current device wireless, then use the new mobile device to connect the speaker.

-2-

Instructions for use

Press "ON" to turn on the speaker. Press "OFF" to turn off the speaker.

Prev-Button

When play or pause in Wireless /TF card/USB Mode, short press to

When in FM mode, short press to previous radio station.

Next+ Button

When paly or pause in Wireless/TF Card/USB Mode, short press to next music.

When in FM mode, short press to next radio station.

 $Play, Pause, Telephone, Station\ search\ key$ When in Wireless, TF card, USB music play back mode, short press , short again press the play.

When in FM mode, short prees to auto search, short press again to stop searching the radio station.

In Wireless mode, when incoming calls, short press to answer the phone, shot press again to hang up the phone, long press to rejet phone. In Wireless mode, when no call, long press to call-back, back to the last outgoing telephone number.

Mode switch

Press this button to switch Wireless mode,TF card,USB,Radio,LINE IN (Wireless call duration invalid).

3 -

When without TF card, USB, 3.5mm audio input line, press this button only switch between Wireless and FM Mode

Volume-Button

In any mode,long press to reduce the volume, there will be prompt "Beep" sound at the minimum volume. beep sound at the minimum volume.

[+]

Volume+ Button

In any mode, press to increase the volume, there will be prompt "Beep" sound at the maximum volume.

Technical parameter

Loudspeaker Output	3W*2 (4ohm, THD<1%
Speaker	♦ 45mm
Version	V5.0
Frequency response range	90Hz-20KHz
Signal Noise Rate	>80dB
Battery Capacity/Voltage	1200mAh /3.7V
Battery Charge Time	1-2hours
Working Time	4-6hours
USB power Input	5V 2A
Speaker Size	190x60x56mm

with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may

cause undesired operation.

Note: This equipment
has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Size:65*85mm折页