

4" length x 3.3"

width bi-fold

Back Page

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna, (2) Increase the separation between the equipment and receiver, (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected or (4) consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If you have any questions on the safe and proper operation of the wireless device please contact KOZY COAT at support@kozycoat.com

FCC ID:2AVMY-4011765PLT

PAIRING THE WIRELESS DEVICE

- 1.) Turn on the battery by pressing the battery power button for 1 second or until the battery light glows. Connect the fully charged battery (see battery charging instructions) to the power wire found in the pocket of the coat.
- 2.) The battery will now send a short burst of power to the manual heat control Dog Button light on the garment. While sending power, the dog button on the garment will illuminate and quickly cycle through the colors of red, blue and green, and then turn off. The entire process takes 1-2 seconds to complete.
- 3.) Press the Wireless Remote Center Button until the center dog glows the same color as on the Dog Button on the coat. Your device is now paired and will operate with the wireless remote.
- 4.) To shut off the heat when not in use, hold the Wireless Remote Button for approximately 2 - 3 seconds and the colored indicator light and heat will shut off. Press the power button on the battery and unplug for overnight storage.

Inside Right Page

Front Page



ADJUSTING THE HEAT SETTINGS

HIGH HEAT: Press the Wireless Dog Button for 2 - 3 seconds and a **RED** light will glow indicating the highest heat setting. After 5 minutes of high heat, the temperature of the coat will automatically change to a medium heat of **BLUE**.

* **MEDIUM HEAT:** Once the coat is set for high heat (red button) press the Dog Button for 1 second and a **BLUE** light will glow activating the medium heat setting of approximately 130 degrees.

* **LOW HEAT:** Press the button again for 1 second and a **GREEN** light will glow indicating the low heat setting of approximately 110 degrees.

AUTOMATIC FUNCTION

After 5 minutes at the high heat setting of **RED**, the temperature of the coat will automatically drop to a medium heat setting of **BLUE**.

To release this function, manually cycle through all the colors one additional time. Your coat will then be set at a constant color temperature of your choosing.

Inside Left Page

KOZY COAT

50 N. NORTHWEST HWY
UNIT #309
PARK RIDGE, IL 60068