



RIG 800 PRO HS


1 FIT / AJUSTEMENT

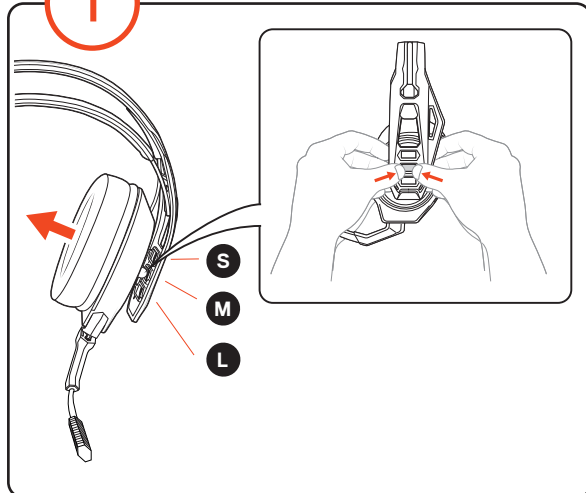

2 CHARGE / CHARGER

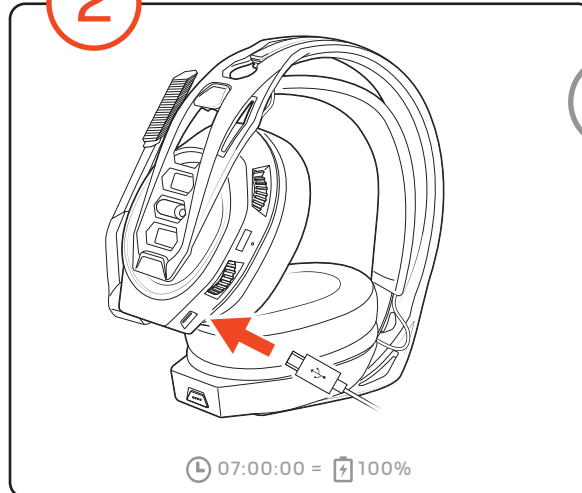


CHARGE / CHARGER

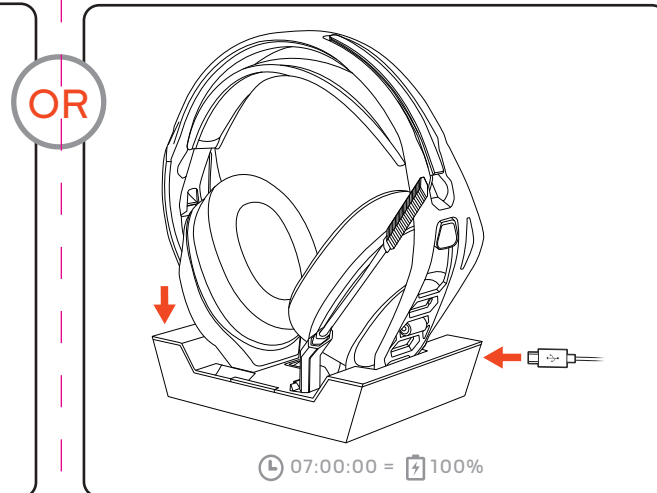


OR


3 CHARGE INDICATION INDICATION DE CHARGE

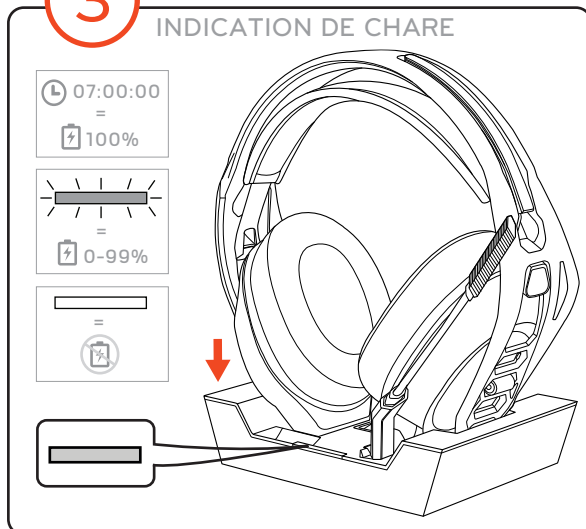

4 CONNECT / CONNEXION

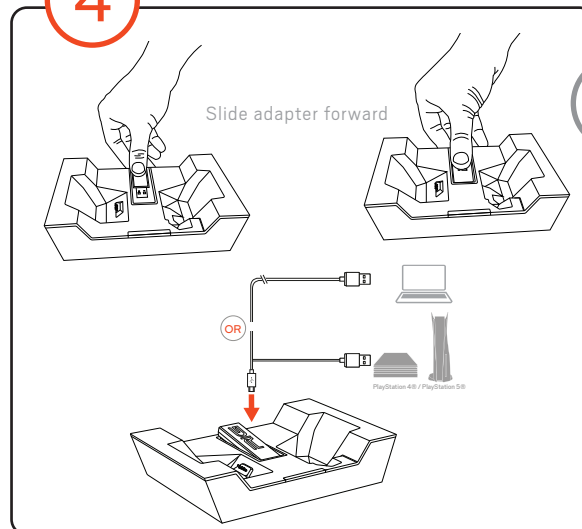

CONNECT / CONNEXION

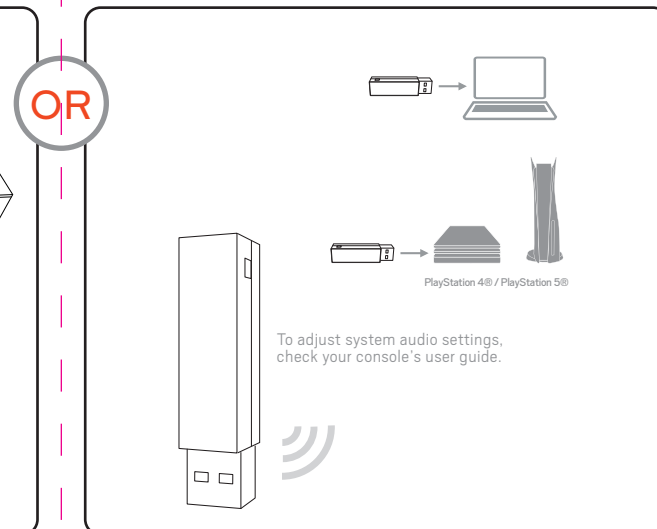

OR


To adjust system audio settings,
check your console's user guide.

RIG 800 PRO HS


QUICK START GUIDE

GUIDE DE DÉMARRAGE RAPIDE


5 POWER / ALIMENTATION

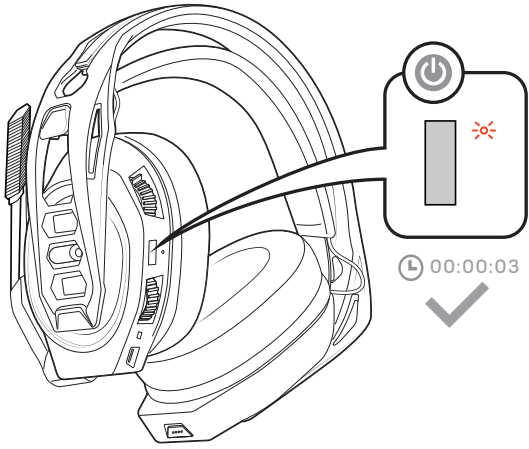

6 DISCONNECT DÉCONNEXION

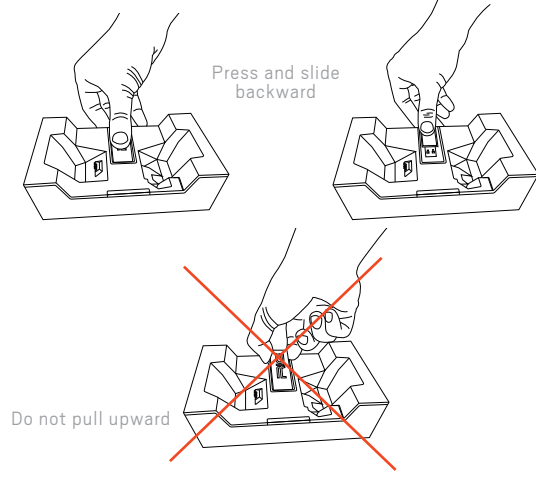


MUTE / MODE DISCRÉTION

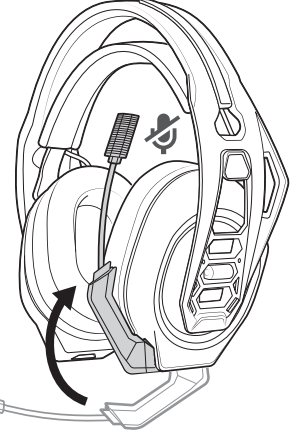

SOUND / SON

PS4™ PS5™ PC

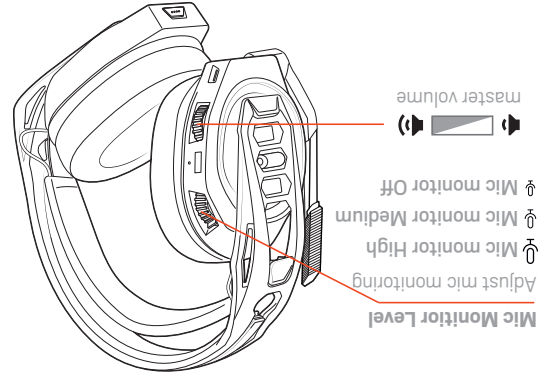

Headset model: RIG800PRO-HS, Dongle model: RIG 800PRO-HS.
100-1346-99 06.21
Recyclable where facilities exist
©2021 NACON. NACON and RIG are trademarks of NACON, registered in the US and other countries. All trademarks are the property of their respective owners. "PlayStation", "PS5" and "PS4" are registered trademarks of Sony Interactive Entertainment Inc. All rights reserved. All other trademarks are the property of their respective owners. Patents: US D766,206; D800,092; CN ZL201630297792.3; EM 002814079; 003494897; TW D1846598; patents pending.