

User's Manual

Android Tablet

LRNS10GNW0 series

Getting Started Guide

Installation of Learning Pad

1. Remove touch screen from its packaging.
2. Feed the AC power cable and connect to the power port on the back of touch screen.
3. Positioning Learning Pad firmly on the desk.
4. Power on the Learning Pad.
5. After few seconds, the installation Welcome message in display on the touch screen.
6. Exploration start.

Battery Installation

Warning : Replacing of battery is only available through your service provider.


If your battery needs to be replaced, contact your service provider to arrange for replacement.

Camera Installation

2 cameras are equipped on the top and bottom edge of the touch screen.


Speaker Installation

A build in speaker is designed onto the bottom edge of learning pad. The volume is adjustable by a purple volume key designed on the left of learning pad.

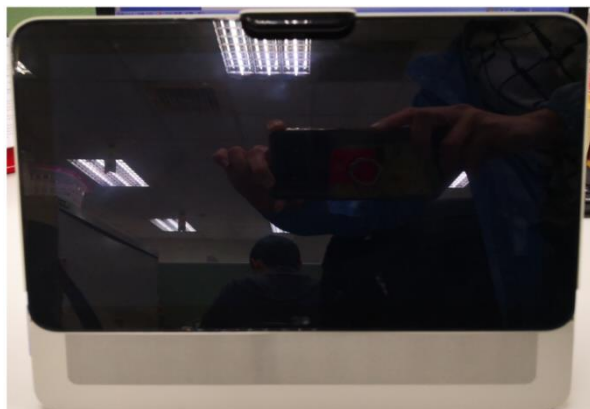

PUSH & HOLD TO POWER ON

CONNECT TO AC POWER SOURCE

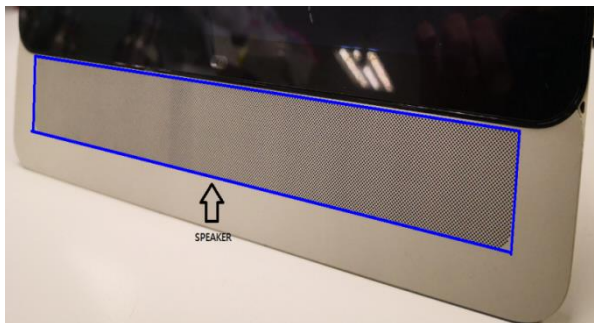

FCC Regulatory

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Responsible party Info:

Company: Tangible Play Inc

Address: 195 Page Mill Road, Ste 105, Palo Alto , CA, 94306 United States.

Contact Tel: 650-720-5551

Email address/Website: Rahul.bhagat@byjus.com