 


# Bluescape



## QUICK START GUIDE

Mini Bluetooth® Waterproof Pool Speaker




100129878-A\_EN\_08132025

## Read Before Use

**NOTE:** This speaker is recommended for poolside use and is not meant to float or be submerged in water for long periods of time. However, it can withstand some interactions with water.

IPX7 = Immersible in up to 3 feet of water for 30 minutes.

## Overview

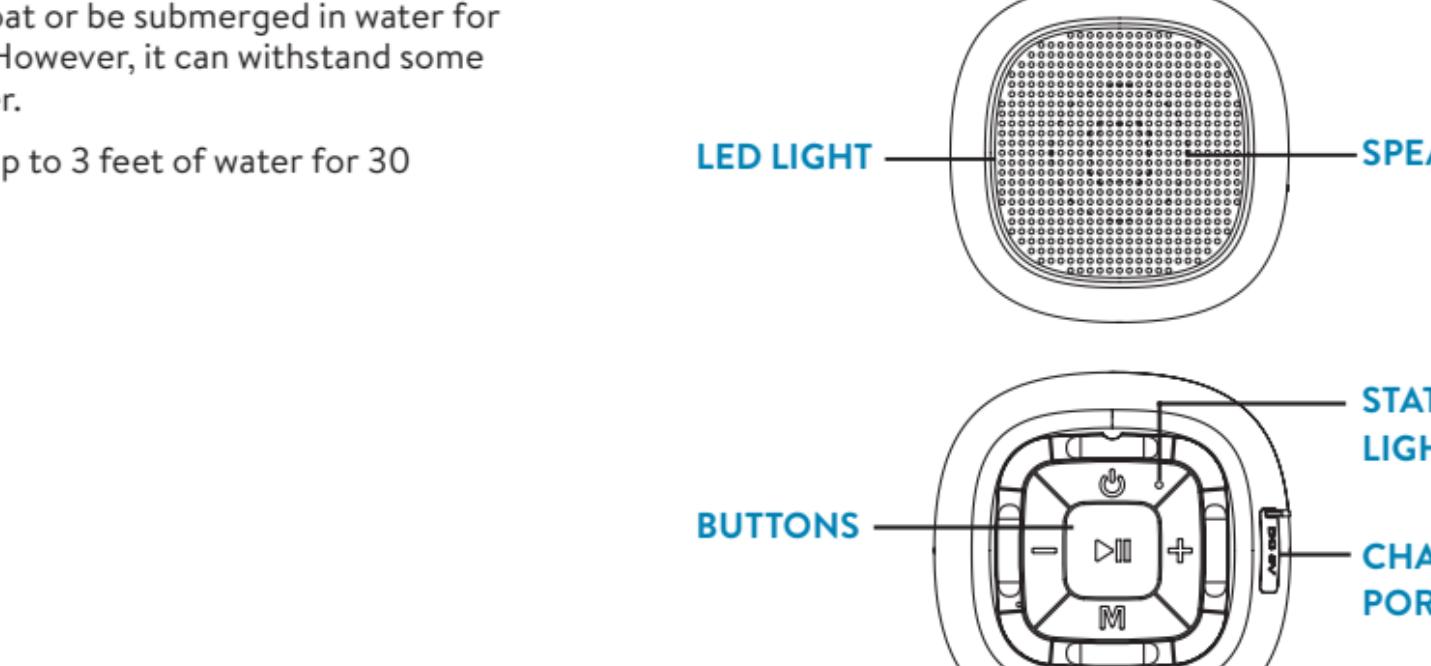

LED LIGHT

SPEAKER

STATUS LIGHT

BUTTONS

CHARGING PORT

## Buttons

- Power Button**
  - Press and hold to turn the speaker on/off
  - Press to cycle between LED light effects
- Mode Button**
  - Press to switch between Bluetooth® and FM Radio modes
  - Press and hold to access/connect TWS; press and hold again to exit/disconnect TWS
- Volume Up/Next Button**
  - Press to turn up the volume
  - Press and hold to go to next song/FM channel
- Pause/Play Button**
  - Press to pause/play the current track
  - Press and hold to search for FM channel
- Volume Down/Previous Button**
  - Press to turn down the volume
  - Press and hold to go to previous song/FM channel

## Initial Setup

- Once your device is fully charged, press and hold the Power button until you hear a prompt indicating the device has entered Bluetooth® pairing mode.
- On your smartphone or tablet, search for the Bluetooth® device named "Bluescape Speaker" and tap to connect.
- A prompt will play once pairing is successful.

## TWS Mode

- Power Button**
  - Press to switch between Bluetooth® and FM Radio modes
  - Press and hold to access/connect TWS; press and hold again to exit/disconnect TWS
- Mode Button**
  - Press to turn the speaker on/off
  - Press and hold to turn them on or enter Bluetooth® Pairing Mode.
- Volume Up/Next Button**
  - On your smartphone or tablet, search for the Bluetooth® device named "Bluescape Speaker" and tap to connect to one of the speakers.
- Pause/Play Button**
  - Press and hold the Mode button on the speaker that is connected to your smartphone or tablet.
- Volume Down/Previous Button**
  - Plug the included USB-C® cable into the speaker's charging port, and connect the other end of the cable to a power adapter (sold separately). Allow approximately 3 hours to fully charge the battery.

## Charging Your Device

Plug the included USB-C® cable into the speaker's charging port, and connect the other end of the cable to a power adapter (sold separately). Allow approximately 3 hours to fully charge the battery.

Note: We recommend using a USB wall adapter with a 5V output.

