



CTP100LG

PROFESSIONAL WIRELESS
THERMAL PRINTER

Quick Start Guide




Download the free app and start printing instantly! Scan this QR Code or visit www.coreinnovationsinc.com/drivers/


Getting Started

Please read instruction card for proper setup before use.

PLEASE FOLLOW INSTRUCTIONS BELOW TO CORRECTLY LOAD PAPER ROLLS.


1. Look for the instruction tab on the paper roll.
2. Place the paper roll as indicated on label.
3. Carefully close the lid.

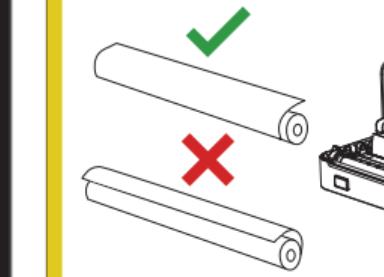

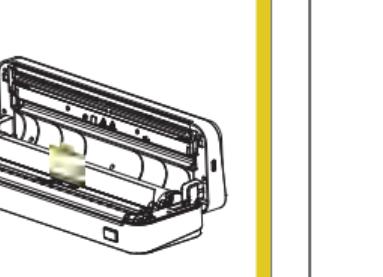

In the Box


1 Thermal Printer

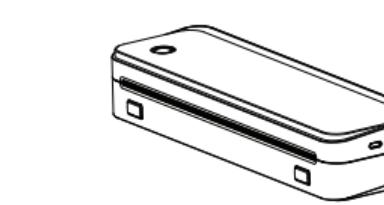

USB-C® Charging Cable



USB-C® Adapter

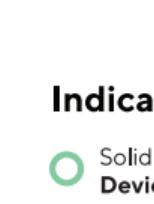

Quick Start Guide



Warranty Card




INSTRUCTION CARD



Device Overview

Power Button/ Status Light

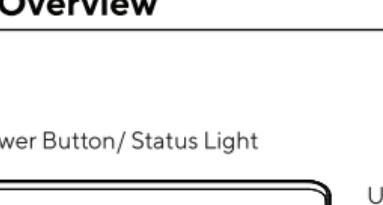


USB-C® Charging Port




Release Tab



Paper Tray

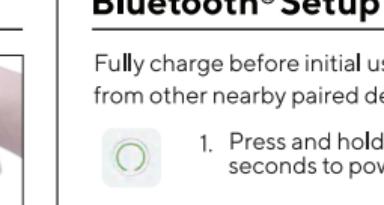

Indicator Light

 -  Solid Green Light: **Device is ready**
-  Blinking Red Light: **Low Battery**
-  Solid Red Light: **Charging/ Out of paper/ Overheated/ Output tray is open**


Note: Do not touch the printer head. Please use a compressed air duster (sold separately) to gently remove dust particles and debris.

Load Printer Paper


Step 1




Step 2

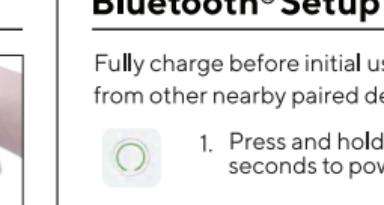

Step 3

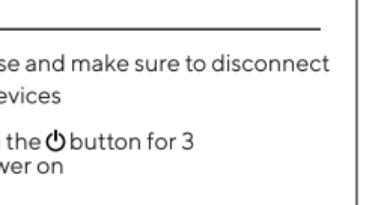

Step 4

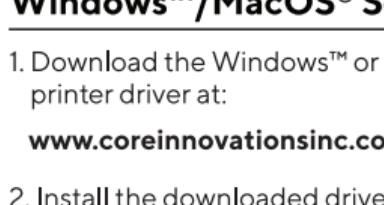

Bluetooth® Setup

FCC Caution

Important Safety Warning

Need Help?

Windows™/MacOS® Setup

Bluetooth® Setup

Product Specifications

CTP100LG

WARNING: Care and Reputative Harm.  www.P6arnings.ca